



JP CONSULTANCY & ENGINEERING SDN BHD (884518-A)


No. 41, Jalan Anggerik Mokara 31/64, Kawasan Industri Kota Kemuning,
40460 Shah Alam, Selangor D.E. Malaysia.

Tel: +60351316514 Fax: +60351210964

Email: mnara@jpconsultancy.com.my / enquiry@jpconsultancy.com.my

Web: www.jpconsultancyandengineering.com

JP™ Ceramic Putty

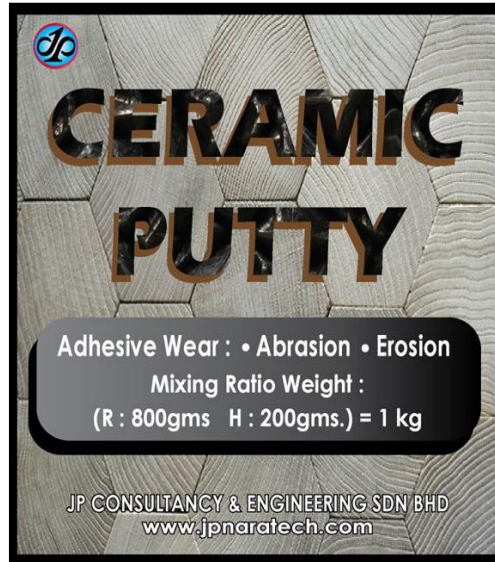

Application Procedure

1. Clean surface thoroughly by sandblasting to SA 2 ½ Swedish Standard or power brush surface to bare metal.
2. Clean surface with thinner to ensure that it is free from dirt or oil.
3. Mix the base thoroughly. Once done, add the hardener and continue mixing for the next 5 minutes.
4. Mixing ratio: 940g Base + 60g Hardener. (15:1)
5. Apply JP™ Ceramic Putty with a scrapper or fingers with rubber gloves on.
6. Do **NOT** add thinner to JP™ Ceramic Putty.
7. Shape to desired finishing.
8. Touch dry in 3 hours depending on climate.
9. Fully cured after 24 hours depending on climate.
10. Upon full curing, coated surface is advised to be heated to 80°C to increase wear resistance and protection.

Store in Cool Environment

“We thank you for choosing JP™, and we assure you our best services and quality at all times.”

LIFE ENHANCEMENT TECHNOLOGY