

## **IP** CONSULTANCY & ENGINEERING SDN BHD (884518-A)


No. 41, Jalan Anggerik Mokara 31/64, Kawasan Industri Kota Kemuning, 40460 Shah Alam, Selangor D.E. Malaysia.

Tel: +60351316514 Fax: +60351210964

Email: mnara@jpconsultancy.com.my / enquiry@jpconsultancy.com.my

Web: www.jpconsultancyandengineering.com

## JPTM Ceramic Coat

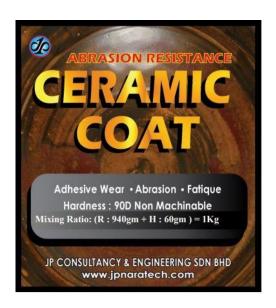

## **Application Procedure**

- 1. Clean surface thoroughly by sandblasting to SA 2 ½ Swedish Standard or power brush surface to bare metal.
- 2. Clean surface with thinner to ensure that it is free from dirt or oil.
- 3. Mix the base thoroughly. Once done, add the hardener and continue mixing for the next 5 minutes.
- 4. Mixing ratio: 940g Base + 60g Hardener. (15:1)
- 5. Apply JP<sup>™</sup> Ceramic Coat with brush or roller.
- 6. Do **NOT** add thinner to JP<sup>TM</sup> Ceramic Coat.
- 7. Touch dry in 3 hours depending on climate.
- 8. Fully cured after 24 hours depending on climate.
- 9. Upon full curing, coated surface is advised to be heated to 80°C to increase wear resistance and protection.

## **Store in Cool Environment**

"We thank you for choosing  ${
m JP^{TM}}$ , and we assure you our best services and quality at all times."