


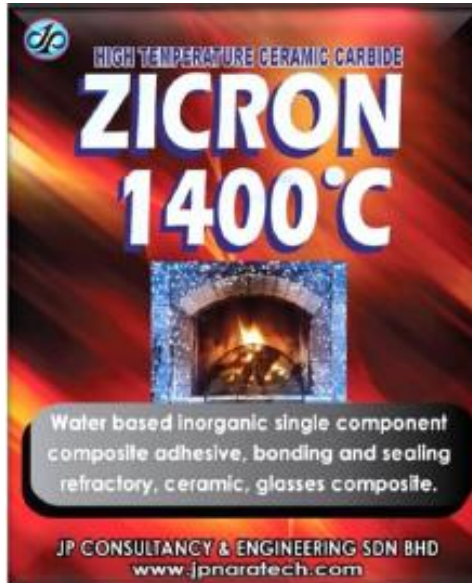

## **JP™ Zicron 1400°C**



### **Application Procedure**

1. Clean surface thoroughly by sandblasting to SA 2 ½ Swedish Standard or power brush surface to bare metal.
2. Clean surface with thinner to ensure that it is free from dirt or oil.
3. Mix JP™ Zicron 1400°C thoroughly for 5 minutes.
4. Apply JP™ Zicron 1400°C to the surface via brush, paint roller, or putty knife. Spray application is also possible for overall surface coating. Build up to approximately 300 – 400 microns in thickness.
5. Air dry surface for 24 hours to remove moisture via natural evaporation.
6. Drying can be accelerated via gentle heating.
7. Slowly increase temperature by 2°C per minute up to 300°C for post curing.

### **Store in Cool Environment**

*“We thank you for choosing JP™, and we assure you our best services and quality at all times”*