

护墙板 墙面装饰新格局



WPC stands for Wood Plastic Composite, it is an excellent alternative to traditional wood wall panels. WPC foam panels not only have the advantages of wood wall panels, but also have many different advantages, which is an attractive and cost-effective way to decorate.

Materials: WPC - PVC 60%, Bamboo Fiber 40%

精选优质原材料，
打造绿色健康高品质



Anti Termite
防虫防蛀



Water Resistant
防水防潮



Easy to Install
简易安装



Zero Formaldehyde
无漆无味






High Density
耐磨长寿

Wide Range of Application

应用场景

Suitable for Living Room decoration, Restaurant, Hall, Hotel, Bedroom & TV wall

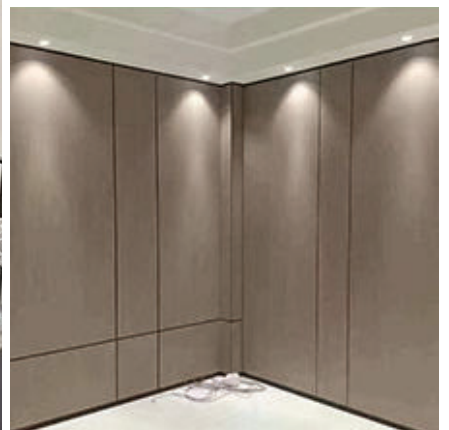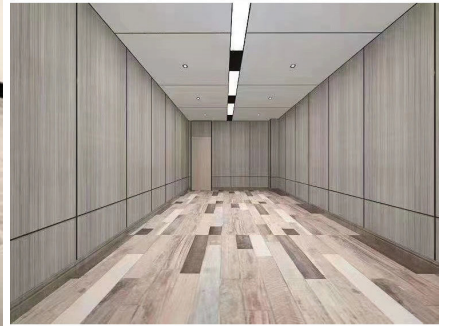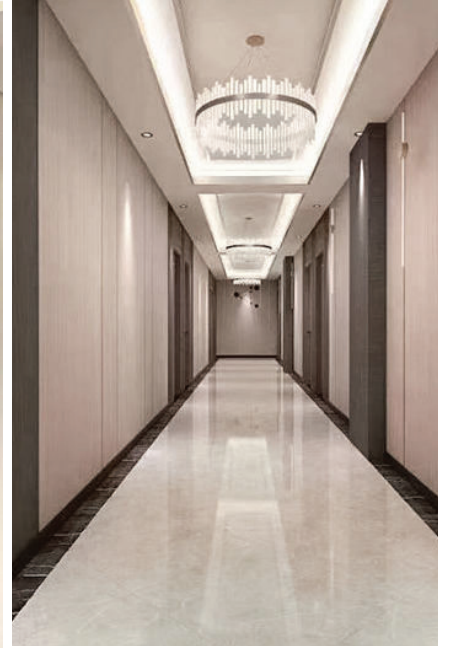

Product Series

产品系列


3000mm(L) x 1220mm(W)
Thickness : 5mm
Density : 0.7



FP01 - Wood Color



FP02 - Marble Grey

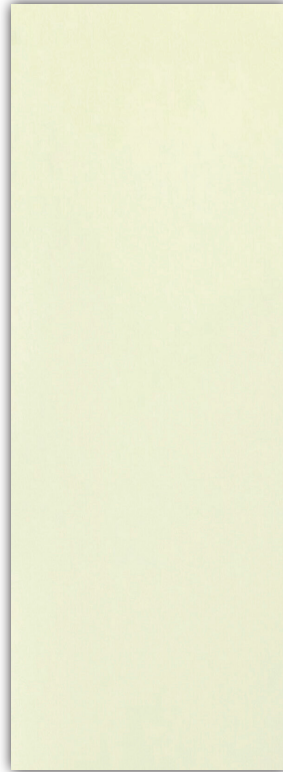

FP03 - Cream
(Similar as WS09)




FP04N - Light Beige
(Similar as W02 & WS01)



FP05 - Light Grey



FP06 - Cream White

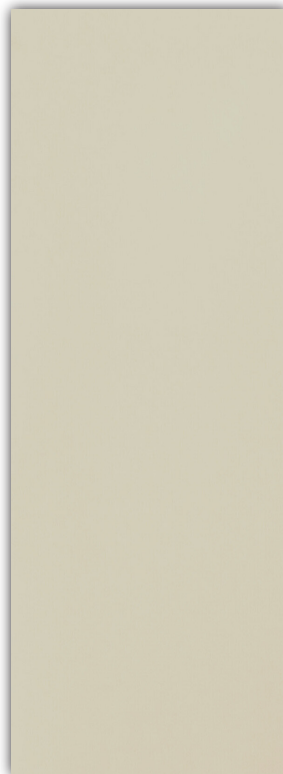

FP07 - Milk Tea
(Similar as W04)



FP08 - Dark Grey
(Similar as WTS04)


Product Series

产品系列

3000mm(L) x 1220mm(W)
Thickness : 5mm
Density : 0.7




FP09 - N/A

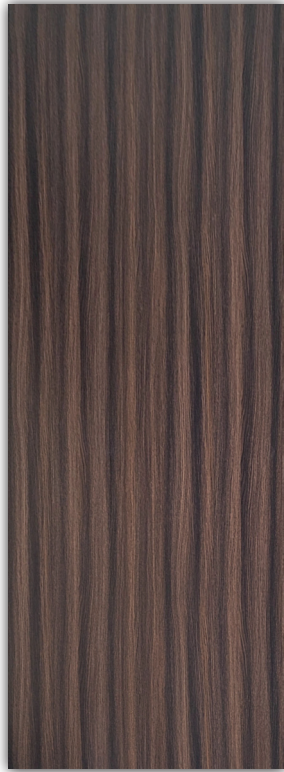

FP10 - Dark Walnut
(Similar as WR04 & WT06)



FP11 - Coffee
(Similar as WS02)

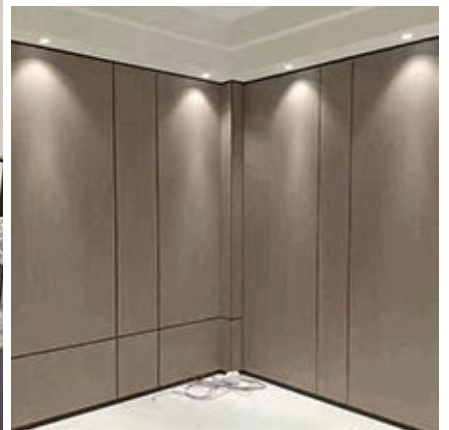

Product Series

产品系列

3000mm(L) x 1220mm(W)
Thickness : 8mm
Density : 0.7



GFP03 - N/A



**GFP04 -
Matte Marble White**



GFP5 - Matte Black




GFP06 - Matte Grey



JS03 - Dark Grey




JS05 - Copper

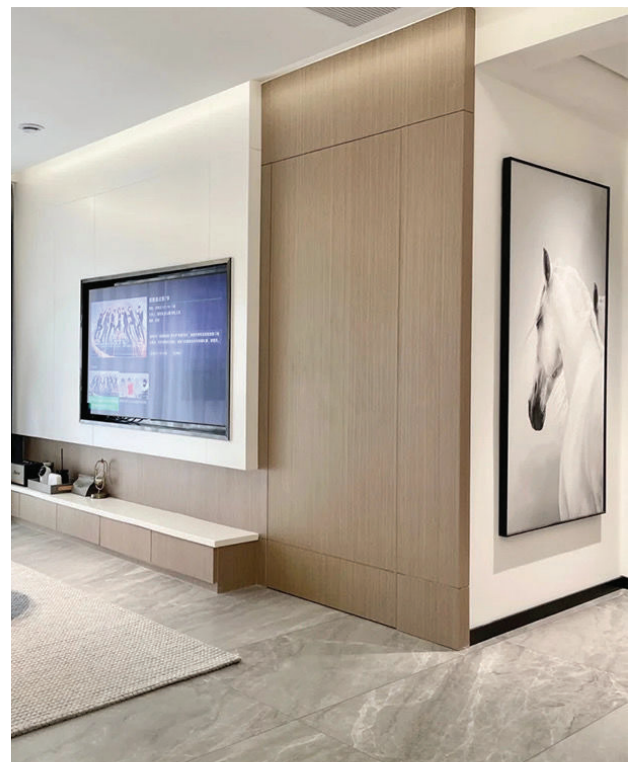

Product Series

产品系列

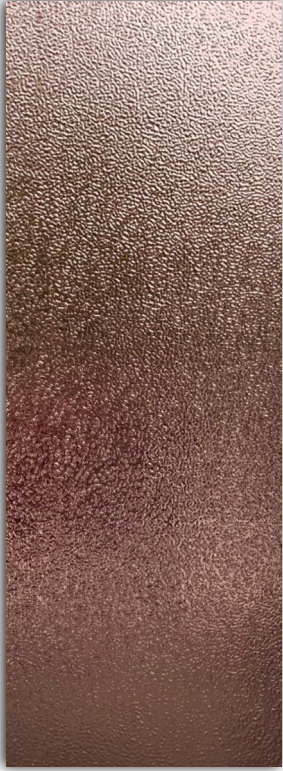


JW01 - Copper




JW02 - Silver

JW

2900mm(L) x 1220mm(W)
Thickness : 8mm , 5mm
Density : 0.7

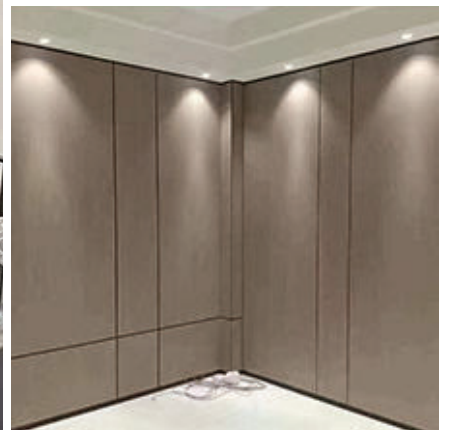


Edge Display 收边条展示

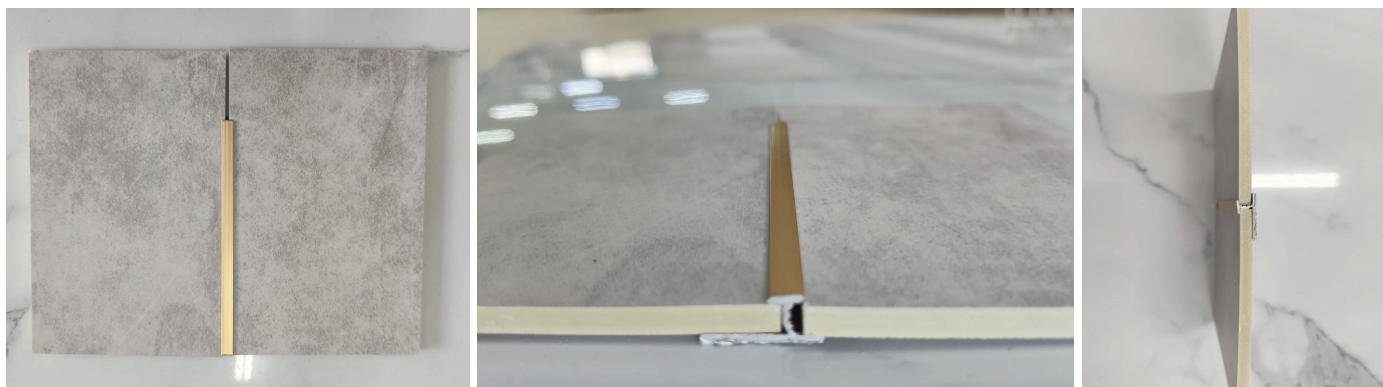

H Profile

Color : Cooper, Black, Rose Gold
Size : 9'5"

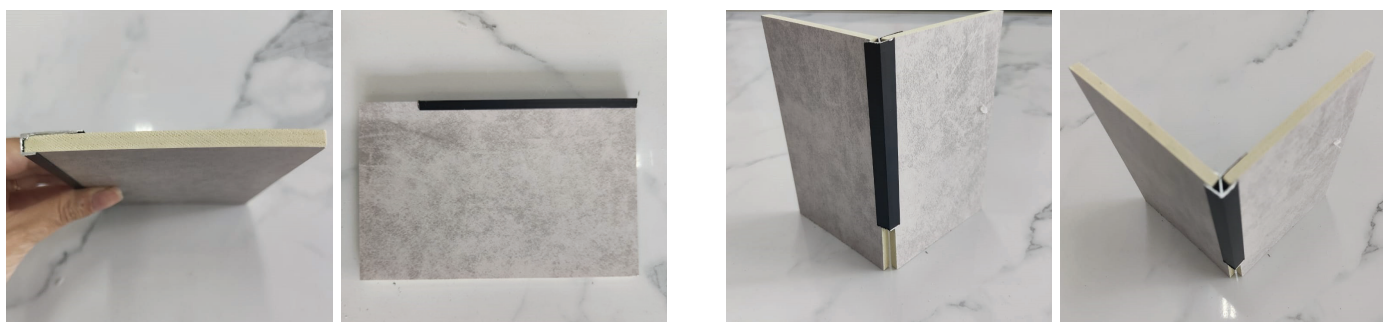


End Profile

Color : Cooper, Black, Rose Gold
Size : 9'5"

Corner Profile

Color : Cooper, Black, Rose Gold
Size : 9'5"


Joining Solution 拼接口指南

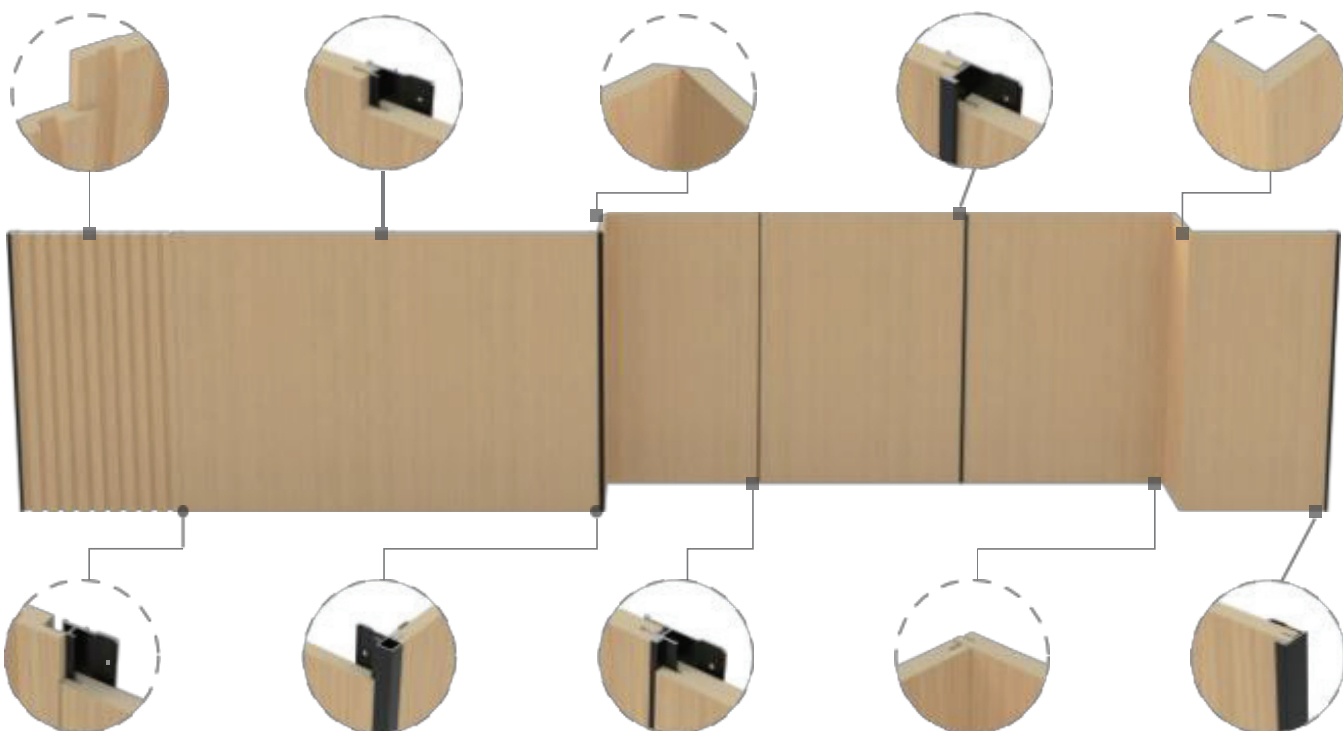

Product Testing 产品测试



Water Resistant
防水防潮，经久耐用

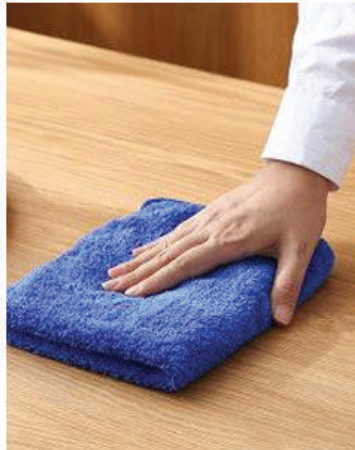

Easy to Clean
耐脏易清理




The Compressive
抗压耐磨，无惧外力冲击

Installation 安装指南

1. Use a chainsaw to cut the wall panel according to the required size.

使用电锯将护墙板按所需尺寸切割。

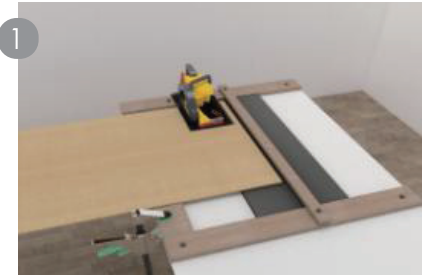

2. Put nail-free glue on the back of the wall panel.

在护墙板背面涂上免钉胶。



3. Place the panel on the smooth wall and pat lightly to stick to the wall.

将护墙板放在光滑的墙壁上，轻轻拍打以粘在墙壁上。




4. Insert the aluminum fitting into the groove from the side of the panel, and then nail the aluminum fittings to the wall.

将铝配件从护墙板侧面插入凹槽中，然后将铝配件钉在墙上。



5. Install other wall panels in the beside mentioned order.

按刚刚述顺序安装其他墙板。

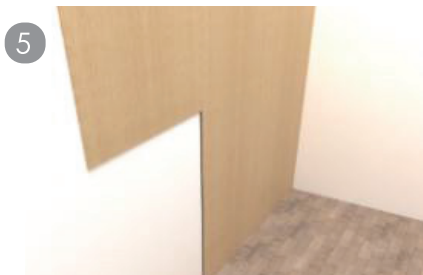

6. Complete the installation.

完成安装。

