
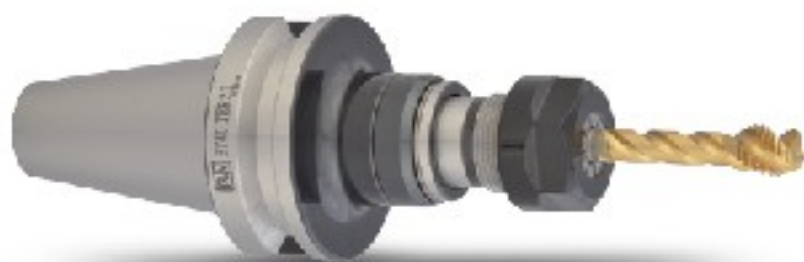


BT / NT
series

TER

Tension & Compression Tap Holder

剛性伸縮攻牙本體

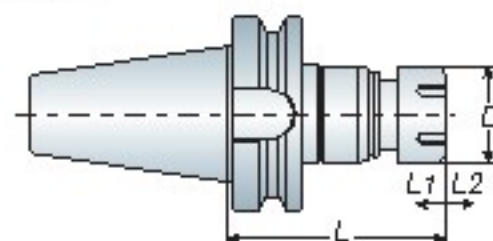

- TER tap holder uses the ER spring collet and easy to get.
- The nut could not be over tightening to avoid damaging the body and nut.
- Wrench must be ordered separately.
- TER伸縮攻牙本體須搭配 ER 筒夾做使用
- 使用時，螺帽請勿過度鎖緊以免造成本體及螺帽損壞
- ER 扳手為另購品


Model No.	D	L	L1	L2	Tapping Range	Collet Type	Weight (kg)
BT30 TER16	28	77	8	8	M3~M10	ER16	0.70
	34	86	8	8	M3~M12	ER20	0.80
BT40 TER16	28	77	8	8	M3~M10	ER16	1.20
	34	86	8	8	M3~M12	ER20	1.30
	42	90	8	8	M4~M16	ER25	1.60
	50	94	8	8	M4~M22	ER32	1.70
	63	98	8	8	M6~M30	ER40	2.60
BT50 TER16	28	80	8	8	M3~M10	ER16	3.90
	34	99	8	8	M3~M12	ER20	4.00
	42	97	8	8	M4~M16	ER25	4.20
	50	95	8	8	M4~M22	ER32	4.30
	63	117	8	8	M6~M30	ER40	4.90

Unit: mm



Straight Shank

直柄剛性伸縮攻牙本體

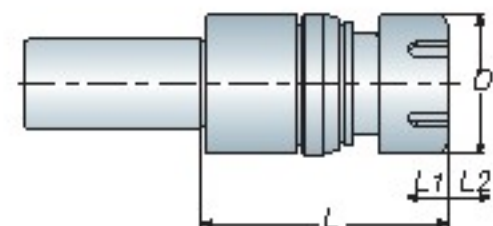

- TER tap holder uses the ER spring collet and easy to get.
- The nut could not be over tightening to avoid damaging the body and nut.
- Straight shank tap holder also has flat shank type to choice. When ordering, please specify "FLAT".
- Wrench must be ordered separately.
- TER伸縮攻牙本體須搭配 ER 筒夾做使用
- 使用時，螺帽請勿過度鎖緊以免造成本體及螺帽損壞
- 另有直柄削平面可供選購，請於訂購時註明 " 削平面 "
- ER 扳手為另購品

Model No.	D	L	L1	L2	Tapping Range	Collet Type	Weight (kg)
C20 TER16	28	75	5	12	M3~M10	ER16	0.40
	34	80	5	12	M3~M12	ER20	0.50
	42	80	5	12	M4~M16	ER25	0.80
C25 TER16	28	75	5	12	M3~M10	ER16	0.50
	34	80	5	12	M3~M12	ER20	0.60
	42	80	5	12	M4~M16	ER25	0.90
	50	80	5	8	M4~M22	ER32	1.10
C32 TER16	28	75	5	12	M3~M10	ER16	0.70
	34	80	5	12	M3~M12	ER20	0.80
	42	80	5	12	M4~M16	ER25	1.00
	50	80	5	8	M4~M22	ER32	1.20
C40 TER16	28	75	5	12	M3~M10	ER16	1.00
	34	80	5	12	M3~M12	ER20	1.00
	42	80	5	12	M4~M16	ER25	1.20
	50	80	5	8	M4~M22	ER32	1.50

Unit: mm



P14- ER Nut

P11/12- ER Collet

P14- Wrench