



**KUALITI ALAM HIJAU
(M) SDN BHD
(1067101-X)**

**ADU9291P
TIMER MANUAL**




Auto Dosing Unit
ADU9291P Plug In / Batteries Mode
Special Design For Grease Trap Only

TECHNICAL SUPPORT & ORDER ENZYME:
03-6150 8812 (HQ)





KUALITI ALAM HIJAU (M) SDN BHD (010700-X)
43, Jalan PSU 12/10C, Saujana Damansara, PSU 12, 47830 Petaling Jaya, Selangor, Malaysia.

HYALINK®
215X150X85
IP65 E83893

To Switch Power Mode


1. Push up for switch to AC 12 Voltage
2. Push to Middle for switch DC
3. Push Down for Batteries Mode

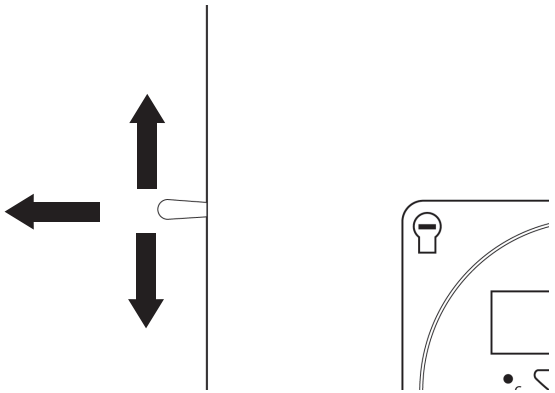

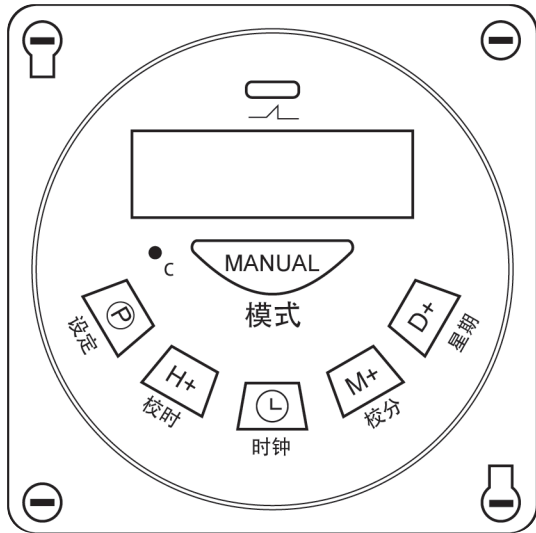

To Set Current Time

1. Press & hold the (L) icon button
2. Press "H+" button to set current hour
3. Press "M+" button to set current minute
4. Press "D+" button to set current day
5. Release the (L) icon button

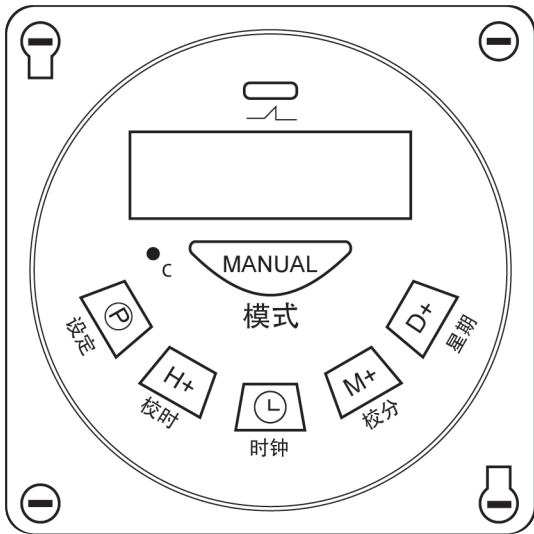


To Set Timer Programmer

From Start

1. Press the " P " button, and you will see 1^{on}
2. Press the " H+" button to set desired hour
3. Press the " M+ " button to set desired minute
4. Press the " D+" button to set desired day (The default setting is 7 days)
5. Press the " P " to set 1^{OFF} setting OR Press the ⌚ icon button to exit

To Set End Time

1. Repeat steps 2 to 4 to set the desired time and day, ensuring that the duration is extended by at least 1 minute

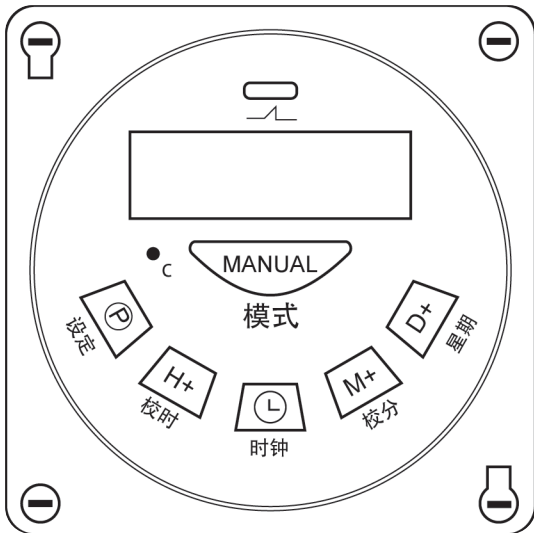

Test Run Mode

Test Run Mode

Press the “MANUAL” button to ON

MANUAL BUTTON

AUTO

: Pump turned on by default. Only operate according timer setting

ON

: To manual turn on the pump

OFF

: To manual turn off the pump



Thank you

For further question please contact us at:

Call: +603-6150 8812

Email: contact@kualitiamhijau.com