# ao madín



# how to use MD-185TA


## PROFESSIONAL SHAKER & MILK FROTH MAKER

Madin is the first pioneer of shaker and milk froth maker in the world

By using this machine, every cup has their own standardized

Used by most of Taiwanese bubble tea chainstores in Taiwan & world

# ao madín

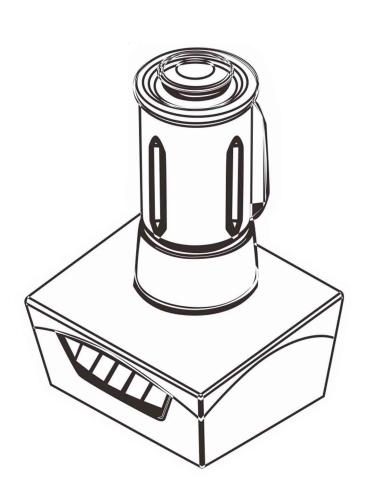

# how to use MD-185TA

## PROFESSIONAL SHAKER & MILK FROTH MAKER

- A. Identification of parts
- B. How to operate?
- C. Safety Instructions
- D. Troubleshooting



### A. Identification of parts



Condiments Lid



Jar Cover (only for ice filtering)



Stainless Steel Jar (maximum capacity: 800ml)



**Outer Gasket** 



Filter



Filter Waterproof Gasket




Foam Blades Set



Waterproof Gasket




Jar Base

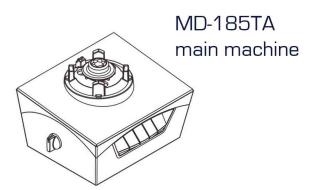



### A. Identification of parts

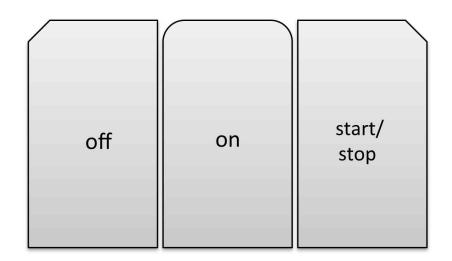

OFF Button: Turn off/ Power Switch OFF


**ON Button:** Turn on to make the machine start working.

START/STOP Button: To start the tea shake process or milk foam making process,

adjust through the rotary switch at the side of the main machine.

It will stop automatically, when the process accomplished



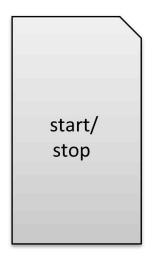



**START/ STOP Button** will connected to the knob switch.

**Tea Shake Function** has 4 level of time selections: 0.5, 1, 3, and, 5 seconds

Milk foam function process is 20 seconds.



# Recommended brewing time

0.5 seconds:

Black Tea



1 seconds:

Green / Black Tea



3 seconds:

Tea + Syrup





5 seconds:

Tea + Milk Creamer









## Shaker function

- 1. Put the ingredients

  First, put ice cube and sugar, then put tea inside.
- 2. Cover the jar with lid, and put the jar properly onto the machine (must cover the lid)
- 3. Adjust the knob switch
  Choose the time that you need
- 4. Press Start/ Stop button
  It will stop automatically after it accomplished

## MD-185TA B. HOW TO OPERATE

makes milk froth in just 20 seconds



## Milk froth maker function

- 1. Put fresh milk.

  Must use fresh milk. (Pasteurized Milk)
- 2. Cover the jar with lid, and put the jar properly onto the machine

  Must cover the lid
- 3. Adjust the knob switch Choose 20 seconds
- 4. Press Start/ Stop button.

  It will stop automatically after it accomplished.

\*Milk volume (liquid): Milk Froth volume = 1:2



### C. Safety Instructions

Put the JAR COVER and LID PROPERLY into the blender jar

DO NOT put finger when the blender is in working process


Before cleaning the machine or blender jar, remember to UNPLUG the cord

DO NOT use the machine for other purpose







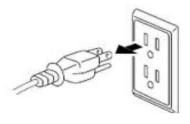



### C. Safety Instructions


DO NOT let any liquid reach inside the machine.

Ex: Water, milk, fructose, etc

DO NOT let any insects reach inside the machine

DO NOT put ice cube or ingredients until the whole jar

Maximum capacity: 800ml

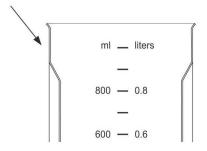









### D. Emergency protection

- 1. The blender is provided with "Overload Protection Device", when the temperature is over heat, the machine will turn off automatically.
- 2. Please unplug the power cord for 15 minutes. When the temperature back to normal, blender is ready to use again
- 3. If there is any sparkles or flames happened during operation. Please unplug it immediately and call nearest dealers or our company as soon as possible