
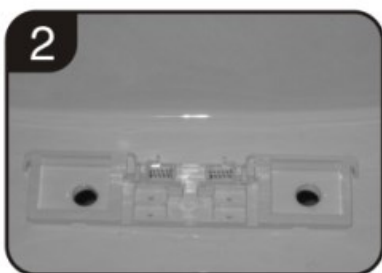



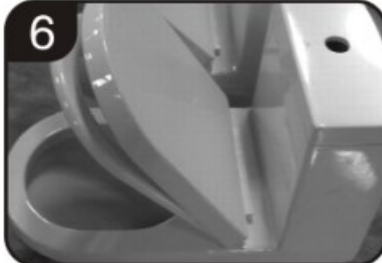


Seat Cover Model	HT-FT-1066	HT-FT-2053
Product Model	HTOP-BELLA-1066A	HTCC-WISPER-2053A

- These instructions are only a guide and all Haustern products must be installed by a qualified contractor.
- Ensure that the correct tools are used in each step of these procedures.

STEP 1: Draw out the platform from the hinge of the seat cover.	STEP 2: Put the platform on top of the toilet seat as per illustrated.	STEP 3: Inset the screw and make sure it is point to point.
		
STEP 4: Fix in the screw loosely from the bottom without tightening it.	STEP 5: Adjust the seat cover to the right position and then tighten the screw.	STEP 6: It is DONE! You may simply test your seat cover.
		

WARRANTY:

- 3-year warranty on Seat Cover.

Log on to www.haustern.com for more information on terms and conditions

This specification is subject to change without notice. FIAMMA TRADING SDN. BHD. will not be held responsible for the use of superseded or voided specifications. Fabricator must check for cut-out accuracy.

FIAMMA TRADING SDN. BHD. (330476-P)
 Wisma Fiamma, No. 20 Jalan 7A/62A, Bandar Manjalara
 52200 Kuala Lumpur, Malaysia.

Website: www.haustern.com
 Office Number: +603-6279 8888