

# User Manual



1. Turn the top of the rack to open the METS



2. Take out the METS and open the top cover



3. Remove the cap of 500ml Mosquito Trap LIQ



4. Remove the insert from Mosquito Trap Liq 500ml



6. Fasten the screw type of Mosquito Trap Liq 500ml with METS trap equipped with the threaded hole

5. Up-side-down the METS Trap



7. Make sure that 500ml Mosquito Trap Liq set properly into threaded hole of METS trap



8. Place a piece of VPT (Virgin pulp tissue paper) at the inner wall of METS trap



8. Make sure that VPT set properly until touching the bottom part of METS



9. Close the cover of METS trap and put back into rack and close the top cover of rack



10. Drill 4 holes for racks base (Recommend make a marking by rack base first, before drill)




11. Insert 4 PVC Wall Plugs into drilled hole



12. Screw the racks base



15. Complete

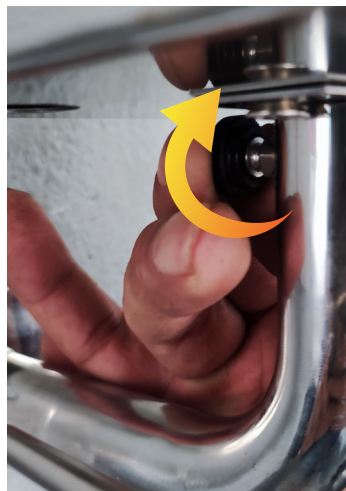

14. Turn the screw until it is tight to make sure the METS racks is lock



13. Put the METS Rack on the rack base