Wall Mount Electric Horn with Pre-recorded Special Warning Sound

QWH35T/ QWH35TSD QWH50T/ QWH50TSD



Thank you for purchasing Qlight's products. Please read this user manual carefully prior to installation and operation to ensure safe and correct use.

Precautions for Safety

Failure to follow the instructions below may cause a loss of life or serious physical injury.


- 1. During wiring or maintenance, please completely turn off the power of the product. (Failure to follow this may lead to an electric shock.)
- 2. Do not install the product in locations that subjects it to excessive dust or water other than the conditions designated by the IP protection ratings indicated for each product. (Failure to follow these instructions may cause a fire to the product, electric shock, physical injury, malfunction or damage to the product.)
- 3. Do not alter or repair this product. If maintenance or repair service is required, please contact your local Qlight contact point. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 4. Please apply the correct voltage to the product. (Failure to follow these instructions may lead to fire, electric shock, or product damage.)
- 5. When the product is applied to a condition that may impact lives or property, please make sure to have a double safety device. (Failure to follow this may cause damage to property, fire, electric shock and loss of life.)

Precautions for Correct Use

Failure to follow the proper instructions may cause damage to property, the product, or malfunction of the product that would void the warranty.

- 1. Please remove any objects that can interrupt ventilation around the product.
- 2. Please turn off the power of the product immediately if it fails to operate properly.
- 3. Carefully wire the product according to each product's specification.
- 4. Please be careful in preventing chemicals such as thinner, benzene, etc. in contact with the surface of the product.
- 5. Do not apply excessive force/impact to the product.
- 6. Failure to follow any of the instructions above may cause malfunction or damage to the product, fire, and electric shock.

Ordering Specifications

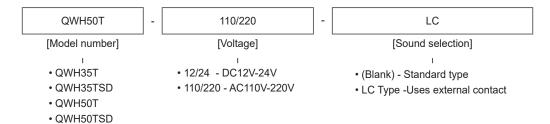



Please scan the QR code for more detailed product information.

www.qlight.com


Product Specifications

Model number	Voltage	Current	Sound pattern and volume	Certificate	Weight
QWH35T	DC12V-24V	Max.0.930A	D''. 1 - FOL (OD - 1)	€	1.10kg
Terminal box equipped type Built-in standard sound	AC110V-220V	Max.0.300A	Bit Input: 5Ch(SD card) Binary Input: 31Ch Warning Sounds: Max.115dB MP3 Messages: Max.112dB		
QWH35TSD	DC12V-24V	Max.0.980A			1.15kg
Terminal box equipped type MP3 type	AC110V-220V	Max.0.270A			
QWH50T	DC12V-24V	Max.3.480A	D''. 1 - FOL (OD - 1)		3.00kg
Terminal box equipped type Built-in standard sound	AC110V-220V	Max.0.460A	Bit Input: 5Ch(SD card) Binary Input: 31Ch		
QWH50TSD	DC12V-24V	Max.4.310A	Warning Sounds : Max.123dB MP3 Messages : Max.115dB		2.40kg
Terminal box equipped type MP3 type	AC110V-220V	Max.0.530A	IVIFO IVIESSAYES . IVIAX. I TOUD		3.10kg


- Protection rating : IP66
- Ambient operating temperature : -30°C to +60°C (QWH35T, QWH50T Standard)
 - -50°C to +60°C (QWH35T, QWH50T Low temperature type only DC)
 - -20°C to +50°C (QWH35TSD, QWH50TSD)

Dimensions (Units: mm)


QWH35T/ QWH35TSD

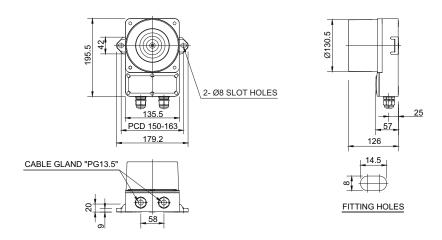

QWH50T/ QWH50TSD

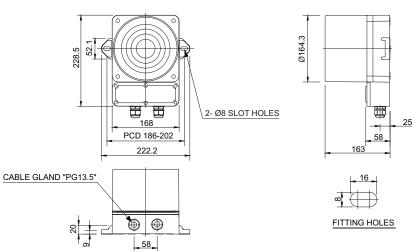

Sound Selection - Using Internal Switch (Built-in Sound Type)




• For built-in sound type, use 'Sound Channel Selection Switch' located inside the product in order to select the type of sound. (For sound configuration chart, please refer to page 6 and 7)

Wiring Instructions for LC Type

LC type product with exposed sound selection signal line is available upon request. Please refer to the diagram below for wiring.

EXTERNAL CONTACT Red - O i Ch 1 Ch 2 Green Ch 3 Blue Ch 4 White Ch 5 Black COMMON White POWER Black alo

EXTERNAL TRASISTOR-NPN

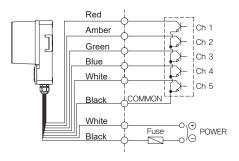

- External power line UL1015 AWG18(0.75sq) x 2C 400mm
- External signal line UL1007 AWG22(0.3sq) 400mm
- For DC type, the polarity of black line is negative(-).
- * Caution

Supplying power to the common line or signal lines may cause malfunction of the product.


Bit/ Binary Input Method Depending on Wiring Method

■ Bit Input Mode

- Bit input mode(using external line) allows you to select one of five sound options by switching on one of the 5 channels.
 (Ch1 - Ch5)
- Total of 5 sound options are configurable.


■ Binary Input Mode

- Binary input mode(using external line) allows you to receive multiple inputs by using the 5 channels (Ch1 - Ch5) to configure one of 31 sound options.
- Total of 31 sound options are configurable.

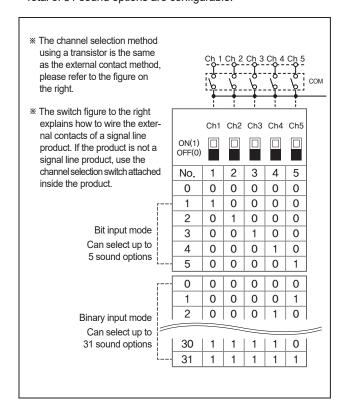



■ Parts Definition

QWH35T

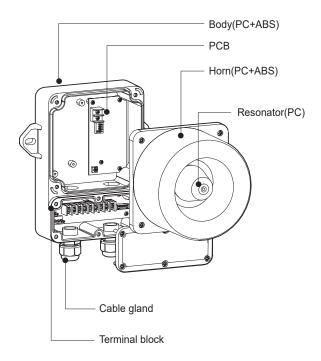


QWH35TSD

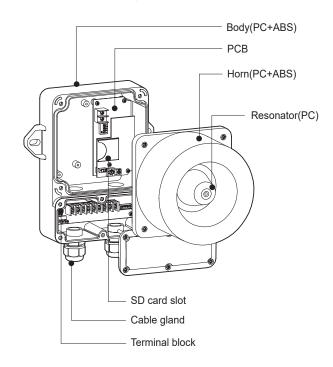





■ Installation

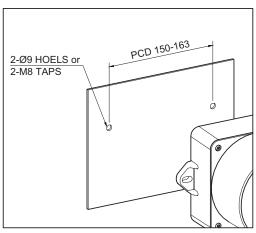

- First, make taps or holes that match the product mounting bolts locations on the mounting surface ①.
- The mounting hole of this product is 9mm in diameter (long hole).
- If the tap is machined, fasten the bolt through the mounting hole of the product.
- When machining a hole, insert the bolt through the product, insert it into the hole, and tighten the nut from the opposite side of the mounting surface.
- Install a flat washer and a spring washer to the bolt if the product can experience severe vibration and shock.



■ Tap Machining



■ Hole Machining

Precautions for installation

 In case of outdoor applications, install the product in the upright position. Do not install the product horizontal or upside-down positions where water can potentially penetrate into the product and impact it's operation.



Reverse direction




Right direction




[Installation]

■ Parts Definition

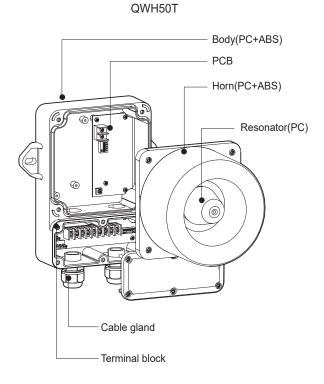

Body(PC+ABS) PCB Horn(PC+ABS) Resonator(PC)

QWH50TSD




SD card slot


Cable gland


Terminal block

■ Installation

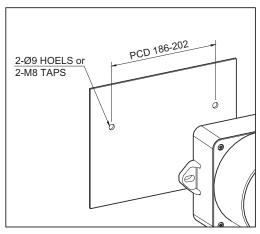

- First, make taps or holes that match the product mounting bolts locations on the mounting surface①.
- The mounting hole of this product is 9mm in diameter (long hole).
- If the tap is machined, fasten the bolt through the mounting hole of the product.
- When machining a hole, insert the bolt through the product, insert it into the hole, and tighten the nut from the opposite side of the mounting surface.
- Install a flat washer and a spring washer to the bolt if the product can experience severe vibration and shock.





■ Hole Machining


Installation Environment and Protection Rating

- This product is designed for indoor and outdoor use with protection rating of IP66.
- If the product is installed in locations that subject it to excessive dust or water other than the designated IP protection ratings indicated(IP66), it may cause malfunction or damage to the product.
- After installing the cable, tighten the cable entry as same level of protection rating of the product and seal it so that dust and moisture can not penetrate into the product.
- For further information, please visit our website (www.qlight.com).


Operation Parts Configuration

■ QWH35T/ QWH50T(Built-in Sound Type)

QWH35T

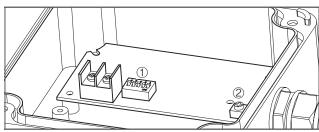


QWH50T

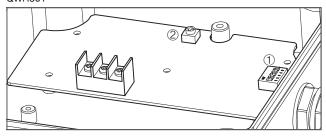


- Built-in sound type product supports binary input 31 channels.
- Sound channel selection switch (For more information, please refer to Page 6, "Types and Combinations of sounds.")
- ② Volume dial (For more information, please refer to Page 7, "Volume Adjustment".)

■ QWH35TSD/ QWH50TSD(SD Card Type-MP3)

QWH35TSD

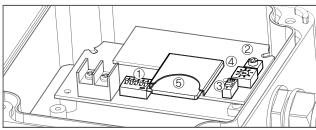

QWH50TSD

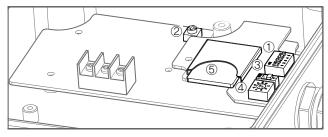

- Sound channel selection switch (For more information, please refer to Page 6, "Types and Combinations of Sounds.")
- 2 Volume dial

(For more information, please refer to Page 7, "Volume Adjustment".)

- ③ Sound setting switch (For more information, please refer to Page 7, "Selecting the Built-in Sound and External Sound (SD Card)".)
- ④ Play mode setting switch (For more information, please refer to Page 8, "Play Mode Setting".)
- ⑤ SD card slot (For more information, please refer to Page 8, "Selecting an SD Card and Saving Sound Files".)

Sound Type and Combination Manual

■ Binary Input - Playing Built-in Sound

- When playing the built-in sound, select the sound in binary input mode.
- In binary input mode, you can choose one sound from 31 sounds by configuring the 5 channels.
- Available in QWH35T/ QWH50T/ QWH35TSD/ QWH50TSD models.

	Binary input method sound configuration							
ON(1) OFF(0)	Ch1	Ch2	Ch3	Ch4	Ch5	Type of sound		
No.	1	2	3	4	5			
0	0	0	0	0	0	No sound		
1	0	0	0	0	1	Rel rel rel		
2	0	0	0	1	0	Slow Ambulance PI-PO		
3	0	0	0	1	1	Oit Oit warning sound		
4	0	0	1	0	0	Emergency WA-U(Yelp)		
5	0	0	1	0	1	Pi- buzzer		
6	0	0	1	1	0	7 Short Pl. / 1 Long		
7	0	0	1	1	1	Pi o Pi o		
8	0	1	0	0	0	Phone Ring		
9	0	1	0	0	1	Pi- buzzer		
10	0	1	0	1	0	Pi pi pi short		
11	0	1	0	1	1	Di o Di o 2 tones buzzer		
12	0	1	1	0	0	Oit Oit warning sound		
13	0	1	1	0	1	Slow Ambulance PI-PO		
14	0	1	1	1	0	Slow Di o Di o		
15	0	1	1	1	1	Fast Li o li o		
16	1	0	0	0	0	Fire.A-ANG		
17	1	0	0	0	1	Fast Ambulance PI-PO		
18	1	0	0	1	0	Slow Ambulance PI-PO		
19	1	0	0	1	1	Ri ro ri ro warning sound		
20	1	0	1	0	0	Repeat Di-o 3 times		
21	1	0	1	0	1	Fire.A-ANG		
22	1	0	1	1	0	Ambulance PI-PO		
23	1	0	1	1	1	Slow Fire.A-ANG		
24	1	1	0	0	0	Pi-pi- buzzer low frequency		
25	1	1	0	0	1	Pi-pi- buzzer high frequency		
26	1	1	0	1	0	Di-di- buzzer high frequency		
27	1	1	0	1	1	Di-di- buzzer low frequency		
28	1	1	1	0	0	Rising Po-ong		
29	1	1	1	0	1	Fast Ambulance PI-PO		
30	1	1	1	1	0	Rising frequency		
31	1	1	1	_1_	1	Repeat A-ANG		

■ Bit Input - Playing External Sound (SD Card)


- User can save sounds(MP3) to the SD card and able to select 1 sound from 5 saved sounds.
- User can save 5 sounds.
- Available in QWH35TSD/ QWH50TSD models.


	Bit input method sound source configuration							
ON(1) OFF(0)	Ch1	Ch2 Ch3 Ch4 Ch5		Ch5	Type of sound			
No.	1	2	3	4	5			
0	0	0	0	0	0	No sound		
1	1	0	0	0	0	Custom sound 1(01_xxx.mp3)		
2	0	1	0	0	0	Custom sound2(02_xxx.mp3)		
3	0	0 1 0 0 Custom sound3(03_xxx.mp3		Custom sound3(03_xxx.mp3)				
4	0	0	0	1	0	Custom sound4(04_xxx.mp3)		
5	0	0	0	0	1	Custom sound5(05_xxx.mp3)		

■ Binary Input - Playing External Sound (SD Card)

- The user can save sounds(MP3) to the SD card and able to select the sound in binary input mode.
- Binary input mode chooses one of the 31 sounds by combining the on/ off switch of the 5 different channels to the associated tone.
- Available on QWH35TSD/ QWH50TSDmodels.

Binary input method sound source configuration							
ON(1) OFF(0)	Ch1	Ch2	Ch3		Ch5	Type of sound	
No.	1	2	3	4	5		
0	0	0	0	0	0	No sound	
1	0	0	0	0	1	Custom sound1(01_xxx.mp3)	
2	0	0	0	1	0	Custom sound2(02_xxx.mp3)	
3	0	0	0	1	1	Custom sound3(03_xxx.mp3)	
4	0	0	1	0	0	Custom sound4(04_xxx.mp3)	
5	0	0	1	0	1	Custom sound5(05_xxx.mp3)	
6	0	0	1	1	0	Custom sound6(06_xxx.mp3)	
7	0	0	1	1	1	Custom sound7(07_xxx.mp3)	
8	0	1	0	0	0	Custom sound8(08_xxx.mp3)	
9	0	1	0	0	1	Custom sound9(09_xxx.mp3)	
10	0	1	0	1	0	Custom sound10(10_xxx.mp3)	
11	0	1	0	1	1	Custom sound11(11_xxx.mp3)	
12	0	1	1	0	0	Custom sound12(12_xxx.mp3)	
13	0	1	1	0	1	Custom sound13(13_xxx.mp3)	
14	0	1	1	1	0	Custom sound14(14_xxx.mp3)	
15	0	1	1	1	1	Custom sound15(15_xxx.mp3)	
16	1	0	0	0	0	Custom sound16(16_xxx.mp3)	
17	1	0	0	0	1	Custom sound17(17_xxx.mp3)	
18	1	0	0	1	0	Custom sound18(18_xxx.mp3)	
19	1	0	0	1	1	Custom sound19(19_xxx.mp3)	
20	1	0	1	0	0	Custom sound20(20_xxx.mp3)	
21	1	0	1	0	1	Custom sound21(21_xxx.mp3)	
22	1	0	1	1	0	Custom sound22(22_xxx.mp3)	
23	1	0	1	1	1	Custom sound23(23_xxx.mp3)	
24	1	1	0	0	0	Custom sound24(24_xxx.mp3)	
25	1	1	0	0	1	Custom sound25(25_xxx.mp3)	
26	1	1	0	1	0	Custom sound26(26_xxx.mp3)	
27	1	1	0	1	1	Custom sound27(27_xxx.mp3)	
28	1	1	1	0	0	Custom sound28(28_xxx.mp3)	
29	1	1	1	0	1	Custom sound29(29_xxx.mp3)	
30	1	1	1	1	0	Custom sound30(30_xxx.mp3)	
31	1	1	1	1	1	Custom sound31(31_xxx.mp3)	

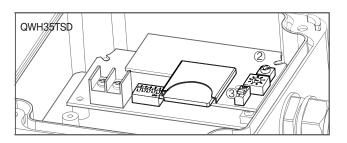

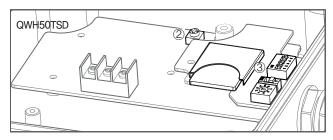

Volume Adjustment



- The volume output of this product is adjustable.
- Turn the volume dial clockwise to increase the volume, and turn counter clockwise to decrease the volume.
- There will be no sound when the dial is put at MIN.


Selection between Built-in Sound and External Sound (SD Card Type)



- To play built-in sounds, set the sound setting switch to the OFF (0) position.
- To play an external sound on the SD card, insert the SD card into SD card slot and set the sound setting switch to ON (1).

Play Mode Setting

- · Can select between channel input methods (bit/ binary) and various playback modes.
- Use a (-) flat screwdriver to rotate one space at a time (regardless of the direction of rotation).
- · Switch 0 and 9 have no function.

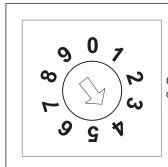

Play mode switch


Can rotate regardless of direction

* setting withdrawal in 3 is SD

	PLAY MODE								
1	Bit Input Mode	Play back one of the 5 built-in or external sounds once For a built-in sound, the playback time is about 10 seconds							
2	Binary Input Mode	Play back one of the 31 built-in or external sounds once For a built-in sound, the playback time is about 10 seconds							
3	Bit Input Hold Playback Mode	Play back one of the 5 built-in or external sounds continuously							
4	Binary Input Hold Playback Mode	Play back one of the 31 built-in or external sounds continuously							
5	Bit Input Sound Reduction Mode	Decrease the volume of the selected channel by 15dB Play back one of the 5 built-in or external sounds continuously							
6	Binary Input Sound Reduction Mode	Decrease the volume of the selected channel by 15dB Play back one of the 31 built-in or external sounds continuously							
7	Bit Input Sequence Memory Playback Mode	When other channel signals are continuously inputted within 3 seconds after inputting the channel, the input order is memorized and playback in the memorized order (playback time is 3 - 5 seconds) The last input channel is played continuously (Bit input only)							
8	Test Mode	In the test mode, the Ch1 of the built-in sound or the external sound is automatically played continuously Switch back to another mode to exit test mode							

SD Card Specifications and Sound **Saving Manual**

- · SD card specifications
- Use standard SD card.
- Mini SD or Micro SD also can be used with adaptor.
- SD, SDHC type supported
- Storage capacity: Max. 32GB
- Class : No specification
- Please save the MP3 sound file on the SD card as shown below.
- Create an "MP3 FILE" folder on the SD card and save the MP3 file in the following file format.
- · MP3 file format




- When saving files, please save them in order.
- Please start saving after formatting the SD card.
- The length of the file name must not exceed 40 characters.




Wiring Instruction for Terminal Block

■ QWH35T(Built-in Sound Type)/ QWH35TSD(SD Card Type)

QWH35T-DC type









■ QWH50T(Built-in Sound Type)/ QWH50TSD(SD Card Type)

QWH50T-DC type







- Please wire up the power line into terminal ①.
- Please use 'O' type or 'U' type wire terminal for safe wiring.
- · AC type: Can be wired regardless of polarity.
- DC type : Please refer to above figure and carefully follow the wiring instructions.
- * Applicable cable range: AWG18-AWG26

Operation Method and Setting

Model number	Built-in	When playing a built-in sound	When playing an external sound (SD Card)		
sound		Binary input	Bit input	Binary input	
QWH35T QWH50T	31 types of sounds	Play one of 31 Special warning sounds	-	-	
QWH35TSD QWH50TSD	31 types of sounds	Play one of 31 Special warning sounds	Play one of the 5 user- recorded sounds	Play one of the 31 user- recorded sounds	

1. QWH35T/ QWH50T

■ When Using a Built-in Sound in Binary Input Mode

- Use 'Channel Selection Switch' to select one of the 31 built in sounds.
- For more information, see page6 'Sound Selection' section.
- For LC type product, refer to page3 'Bit/ Binary Input Method According to Wiring Method' section for detailed manual of channel selection method

2. QWH35TSD/ QWH50TSD

■ When Using a Built-in Sound in Binary Input Mode

Sound switch setting → Play mode switch setting → Channel selection

- 1. Set the sound setting switch to OFF to select the built-in sound.
- For more information, please refer to page 7 'Selecting between Built-in Sound and External Sound'.
- 2. Select one of 4 modes(2, 4, 6, or 8) by using play mode setting switch.
- Mode 8 is a test mode and the sound of channel 1 is continuously played. (In this case, channel selection is disabled.)
- For more information, please refer to page8, 'Play Mode Setting'.
- 3. Use the channel selection switch to select one of t he 31 built in sound.
- For more information, please refer to page6, 'Binary Input Use Built-in Sound Source'.
- For Extracted sound selection signal line type(LC) product, refer to page3 'Bit/ Binary Input Method According to Wiring Method' for details of channel selection method.

■ When Using an External Sound Source (SD Card) in Bit Input Mode

※ Insert SD card → Sound switch setting → Play mode switch setting → Channel selection

- Please refer to page 8 'SD Card Specifications and Sound Saving Manual' to see how to save sound files.
- Supports up to 5 user-defined sounds.
- 2. Insert the SD card into the SD card slot.
- Set the No. 1 switch of the sound switch to ON to select external sound
- For more information, please refer to page 7 'Selection between Built-in Sound and External Sound (SD Card Type)'
- 4. Use the Play mode setting switch to select 1, 3, 5, 7 or 8 mode.
- Mode 8 is a test mode which continuously plays channel 1.
 (In this case, channel selection is disabled.)
- For more information, refer to page8, 'Play Mode Setting'.
- 5. To select a channel, use the terminal block in the back side of the product to select one of the 5 user-defined sounds.
- For more information, please refer to page 5 'Bit Input Use External Sound (SD Card)'
- For external signal line type (LC) products, please refer to page 3 'Bit/ Binary Input Method Depending on Wiring Method'.

When Using an External Sound Source (SD Card) Source in Binary Input Mode

\divideontimes Insert SD card \to Sound switch setting \to Play mode switch setting \to Channel selection

- Please refer to page 8 'SD Card Specifications and Sound Saving Manual' to see how to save sound files.
- Supports up to 5 user-defined sounds.
- 2. Insert the SD card into the SD card slot.
- Set the No. 1 switch of the sound setting switch to ON to select external sound.
- 4. Use the play mode setting switch to select 1, 3, 5, 7 or 8 mode.
- Mode 8 is a test mode which continuously plays channel 1.
 (In this case, channel selection is disabled.)
- For more information, refer to page8 'Play Mode Setting'.
- Use the sound select switch to select the one of the 31 userdefined sounds.
- For more information, please refer to page 7 'Binary Input -Playing External Sound (SD Card)'.
- For external signal line type (LC) products, please refer to page 3 'Bit/ Binary Input Method Depending on Wiring Method'.


Product installation direction

■ Install the product in accordance with the manual. Otherwise rainwater or moisture may penetrate into the product.

· BEACON/SIGNALING LIGHT

* For products with a protection rating of less than IPX4, please install it vertically.


Power cord inlet part shall not be facing the sky.

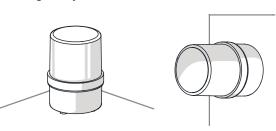




· ELECTRONIC SOUNDER/SIGNAL HORN

Sounder part shall not be facing the sky.



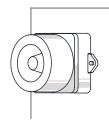











· HEAVY-DUTY & EXPLOSION PROOF SIGNALINGS

Sounder part shall not be facing the sky.









· SIGNAL TOWER LIGHTS

* For products with a protection rating of less than IPX4, please install it vertically.

Power cord inlet part shall not be facing the sky.

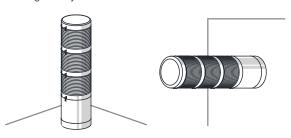



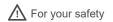

Specification and dimensions listed in this catalogue subject to change without notice for product quality improvement. The newest product information is available on our website.(www.qlight.com)

Please read the instruction manual attached to the product carefully before installation and use.

Qlight Co., Ltd. www.qlight.com | trade@qlight.com

Head Office | Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea

Tel. +82-2-2679-6152(Toll free. +82-80-328-2222) Fax. +82-2-2679-6154

Factory | 185-25, Mukbang-ro, Sangdong-myeon, Gimhae-si, Gyeongsangnamdo, Korea Tel. +82-55-328-1111(Toll free. +82-80-328-1111)

Qlight OverSEAs Sales Dept | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel: +82-51-620-4100

Qlight Public Relations & Marketing Team Office | 704 Nakdong-daero, Sasang-gu, Busan, Korea(Eomgung-Dong) Tel. +82-51-245-0017

Qlight USA, Inc. www.glight.com www.glightusa.com | sales@glightusa.com

3003 North First Street, Suite #341, San Jose, CA 95134 USA Tel. +1-408-519-5740 Fax. +1-408-519-5739

SHANGHAI Qlight Electronic Co., Ltd. www.qlight.com www.qlightcn.com | qlightcn@qlight.com

China Factory/ Shanghai Sales Office | #19, Nanda Road, Baoshan Area, Shanghai, China Tel. +86-21-6651-7100 Fax. +86-21-6315-3929 China Factory Site 2 (Qidong) | #33, Haiyan Road, Qidong High-tech Industrial Development Zone, Qidong, Jiangsu Province, China Tel +86-513-8384-9999 Fax +86-513-8384-9910



Product Operation Inquiry / Customer Support +82-51-620-4100

You can expect prompt service if you have exact information such as model name, symptom, telephone number and address.

**ALL PRODUCT, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE

RELIABILITY FUNCTION OR DESIGN OR OTHERWISE

RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Head office: Suite #1510, STX-V Tower, 128 Gasan digital 1-ro, Geumcheon-gu, Seoul, Korea (Postal Code: 08507)

Factory: 185-25, Mukbang-Ro, Sangdong-Myeon, Gimhae-Si, Gyeongsangnam-Do, Korea (Postal Code: 50805)

www.qlight.com