Micro Separator Unit (SAMU)

SAMU150~550 Series





- SAMU Series, The SAMU unique design combines the SAMG (Water Separator), SAMH (0.01 Micron Coalescing) and SAR (Air Regulator). The SAMU is a point-of-use drying filtration system which delivers high quality dry air, and a high performance regulator which reduces primary pressure to a desired pressure setting.
- The SAMU series are modular type for easy installation and use in confined spaces.

How to order

04 DG - MeP - S SAMU 350 M-

- (1) Micro Separator
- (2) Body Size
 - 150 1/4
 - 250 3/8
 - 350 1/2
 - 450 3/4
 - 550 3/4, 1
- (3) Bracket type
 - M Bracket with Modular Spacer
 - B Modular Spacer
- (4) Thread type
 - Nil Rc(PT)
 - N NPT G - G(PF)
- (5) Port Size

Cupalaal	Cina	Body size											
Symbol	Size	150	250	350	450	550							
02	1/4												
03	3/8												
04	1/2			•									
06	3/4				•								
10	1					•							

(6) Accessory(Optional) •

- Nil Manual Drain / None gauge
- Auto drain

Symbol	Drain connector	Material
D	One-touch fitting(Φ6mm)	Acetal
Dn	Nipple(PT 1/8)	Brass

- Gauge

G	Round type gauge
Gs	Square embedded type

(7) Case •


- PC bowl
- MeP Metal bowl with pipe type sight glass
- MeF Metal bowl with flat type sight glass

Note) 150 and 250 are the integral cover and bowl(MeF type).

(8) Option ►

- Nil None
- S Differential Pressure Indicator

Symbol



Specification

Composition	Water Separator + Micro Mist Separator with Prefilter + Regulator
Fluid	Compressed Air
Max. operating pressure	10bar (1.0MPa)
Max. supply pressure	15bar (1.5MPa)
Ambient and Media temp.	-5~60° (No freezing)
Regulating range(SAR)	0.5~8.5bar (0.05~0.85MPa)
Filtration	SAMG(99% Removal rate of water) + SAMH(0.1+0.01µm)
Life of element	When pressure drop reached at 1bar
Construction(SAR)	Relief type


Precautions


- (1) Please consult with SKP when using the product in applications other than compressed air.
- 2) Filter element should be changed after 2 years of using or when pressure drop reached at 1bar(0.1MPa).
- Components with a bowl must be installed vertically with the bowl downward so that faulty drain discharge and dripping can be verified.
- (4) Set the outlet pressure range for the regulator in a range that is 85% or less of the inlet pressure. If set above 85%, the inlet pressure will be easily effected by fluctuations in the flow rate and inlet pressure, and will become unstable.
- (5) To set the pressure using the knob, turn the knob in the direction that increases pressure and lock the knob after the pressure is set. If this is done in the direction that decreases pressure, the pressure may drop from the original set pressure Turning the knob clockwise increases the outlet pressure, and
 - turning it counterclockwise reduces the pressure.
- (6) When auto drain is used, drain piping should be both 4mm or greater in diameter and less than 1m in length. Also should avoid setting drain piping upwards.
- 7 When auto drain is used it is recommended to use at least
- When auto drain is out of order, it is possible to drain manually by operating one-touch fitting vertically upwards

Micro Separator Unit


DIMENSIONS (mm)


SAMU 150~250

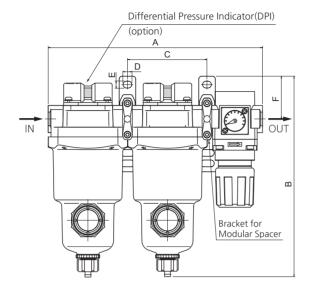

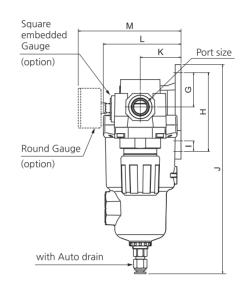

■ Dimensions of each model with an option attached

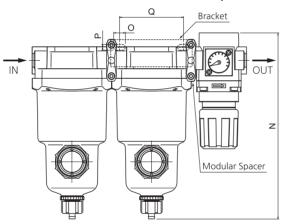

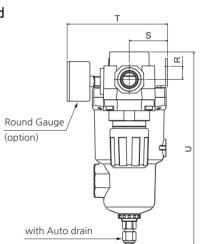

0-4	D : Austa Duain	Ga	auge	S : Differential Pressure				
Option	D : Auto Drain	G : Round type	Gs : Square embedded type	Indicator				
Model	SAD400	G40, R1/8	Gs28					

Model	Port size	Α	В	С	D	Е	F	G	Н	1	J	K	L	М	N	0	Р	Q	R	S	Т	U
SAMU150	1/4	177	180	67	6.5	5.5	30	24	57	9	187	35	70	95	178	9	5.5	56	14.7	35	95	185
SAMU250	3/8	221	206	76	9	7	43.6	3.5	70	-	213	41	79	104.5	191	12	6	66	13.5	39.5	103	198

SAMU

SAMG

SAFL

SAM

SAMD

SAMH


SAD402


BRACKET


CAUTION

DIMENSIONS (mm)


SAMU 350~550

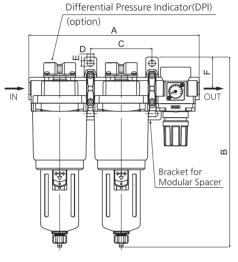


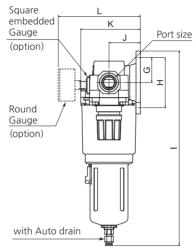


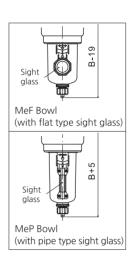

■ Dimensions of each model with an option attached

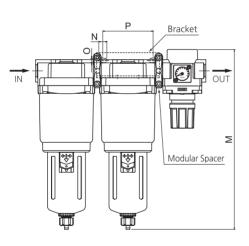

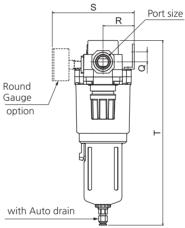

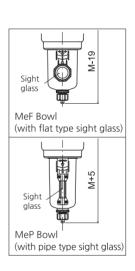

Ontion	D : Auto Drain	Ga	S: Differential Pressure			
Option	D . Auto Drain	G : Round type	Gs : Square embedded type	Indicator		
Model	SAD400	G50, R1/4	Gs28			

Mod	del	Port size	Α	В	С	D	Ε	F	G	Н	I	J	К	L	М	N	0	Р	Q	R	S	Т
SAMU	J350	1/2	271	303	98	11	9	50	40	80	310	50	95	129	287	13	7	80	15.9	50	129	294
SAMU	J450	3/4	303	323	114	11	9	50	30	60	330	55	108	135	307	14	9	90	16.3	56.2	136	314
SAMU	J550	3/4, 1	355	371	130	13	11	62.7	50	100	378	70	131	153.5	148	17.6	9	100	20.8	64.5	148	351