


### Assembly of micro-solenoid valve (blank plate) and manifold


Mount micro-solenoid valve and manifold by two M2.5 screws as following .

Mount blank plate and manifold by two M2.5 countersunk screws as following .

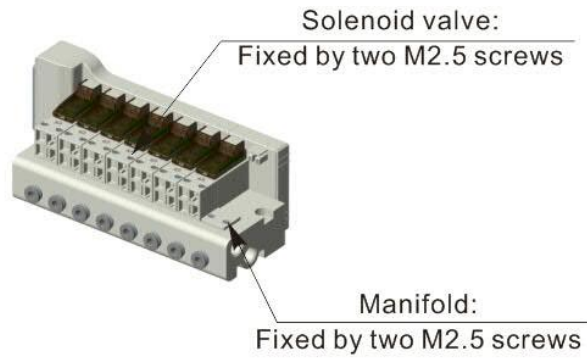

### Expansion of micro-solenoid valve

Remove blank plate and install solenoid valve by the assembly instruction.

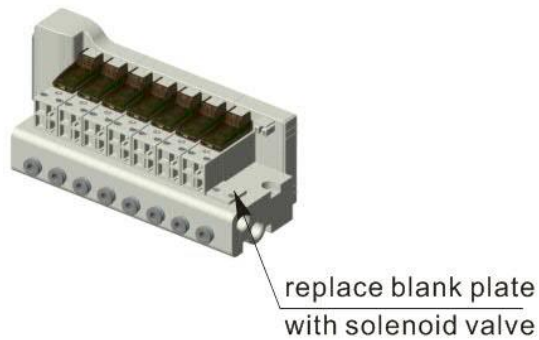

### A port tubing

A port is at the side of manifold with push in fittings.



## Manifold mounting

Both sides of manifold attach two installing through-holes, using two M4 hexagon cap screws to fix.

Installing through-holes  
(using two M4 hexagon cap screws to fix)

