



Ruijie Reyee Series Access Points

Web-Based Configuration Guide_R67

Copyright Statement

Ruijie Networks©2022

Ruijie Networks reserves all copyrights of this document. Any reproduction, excerption, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

Exemption Statement

This document is provided “as is”. The contents of this document are subject to change without any notice. Please obtain the latest information through the Ruijie Networks website. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

Preface

Thank you for using our products.

Audience

This manual is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

Obtaining Technical Assistance

- Ruijie Networks Website: <https://www.ruijienetworks.com/>
- Technical Support Website: <https://ruijienetworks.com/support>
- Case Portal: <https://caseportal.ruijienetworks.com>
- Community: <https://community.ruijienetworks.com>
- Technical Support Email: service_rj@ruijienetworks.com
- Skype: [service_rj@ruijienetworks.com](https://www.ruijienetworks.com)

Related Documents

Documents	Description
Command Reference	Describes the related configuration commands, including command modes, parameter descriptions, usage guides, and related examples.
Hardware Installation and Reference Guide	Describes the functional and physical features and provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors.

Conventions

This manual uses the following conventions:

Convention	Description
boldface font	Commands, command options, and keywords are in boldface .
<i>italic</i> font	Arguments for which you supply values are in <i>italics</i> .
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.

1 Overview

eWeb is a Web-based network management system that manages or configures devices. You can access eWeb via browsers such as Google Chrome.

Web-based management involves a Web server and a Web client. The Web server is integrated in a device, and is used to receive and process requests from the client, and return processing results to the client. The Web client usually refers to a browser, such as Google Chrome IE, or Firefox.

1.1 Conventions

In this document, texts in bold are names of buttons (for example, **OK**) or other graphical user interface (GUI) elements (for example, **DHCP Security**).


2 Configuration Guide

2.1 Preparation

Scenario

As shown in the figure below, an administrator can access the device from a browser and configure the device through the eWeb management system.

Figure 2-1-1 Data Exchange Principle

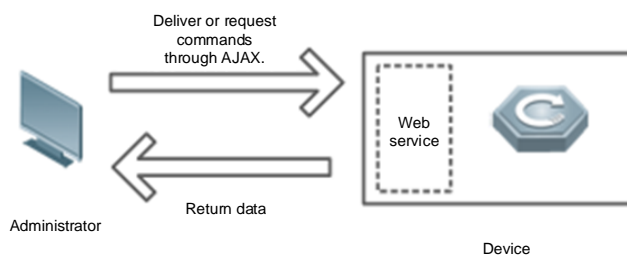

Remarks	The eWeb management system combines various device commands and then delivers them to the device through AJAX requests. The device then returns data based on the commands. A Web service is available on the device to process basic HTTP protocol requests.
----------------	---

Deployment

Configuration Environment Requirements

Client requirements:

- An administrator can log into the eWeb management system from a Web browser to manage devices. The client refers to a PC or some other mobile endpoints such as laptops or tablets.
- Google Chrome, Firefox, IE10.0 and later versions, and some Chromium-based browsers (such as 360 Extreme Explorer) are supported. Exceptions such as garble or format error may occur if an unsupported browser is used.
- 1024 x 768 or a higher resolution is recommended. If other resolutions are used, the page fonts and formats may not be aligned and the GUI is less artistic, or other exceptions may occur.
- The client IP address is set in the same LAN network as the device IP address, such as 192.168.120.X. The subnet mask is 255.255.255.0. The default management address of the device is 192.168.120.1. Alternatively, you can set the IP assignment mode to **Obtain an IP address automatically**.


Server requirements:

- You can log into the eWeb management system through a LAN port or from Ruijie Cloud on an external network.
- The device is enabled with Web service (enabled by default).

- The device is enabled with login authentication (enabled by default).

To log into the eWeb management system, open the Google Chrome browser, and enter 192.168.120.1 into the address bar, and press **Enter**.

Figure 2-1-2 Login Page

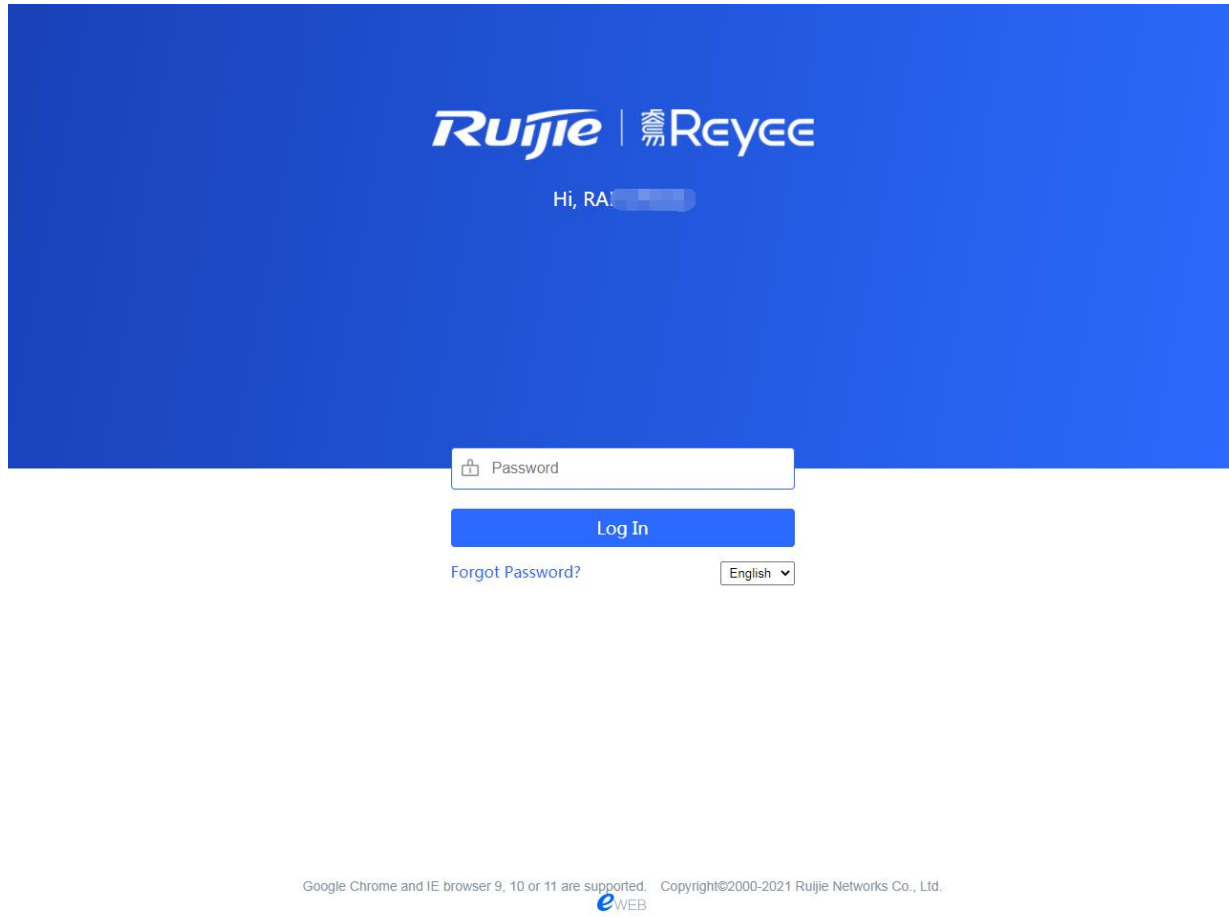

Enter the password and click **Login**.

2.2 Network Setup


You will enter the **Network Setup** page without login at initial setup.

2.2.1 Discover Device

The page displays online device count and network status.

You can add the device to **My Network** before configuring the network. If the device works in the standalone mode, this feature is not supported.


Figure 2-2-1 Discover Device

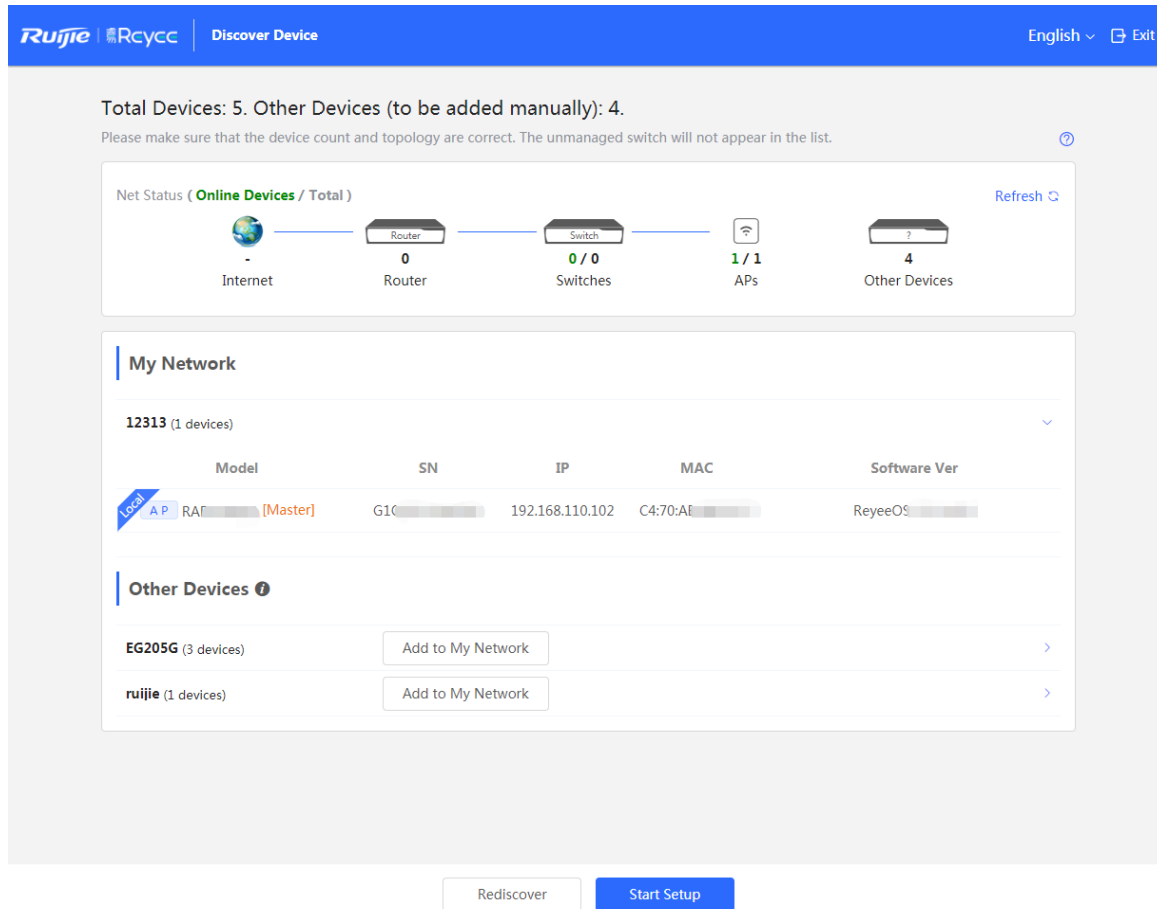

2.2.2 Add to My Network

Select the target device and click **Add to My Network**. If the target device is not configured yet, you can add the device directly without a password.

Figure 2-2-2 Add Device to My Network

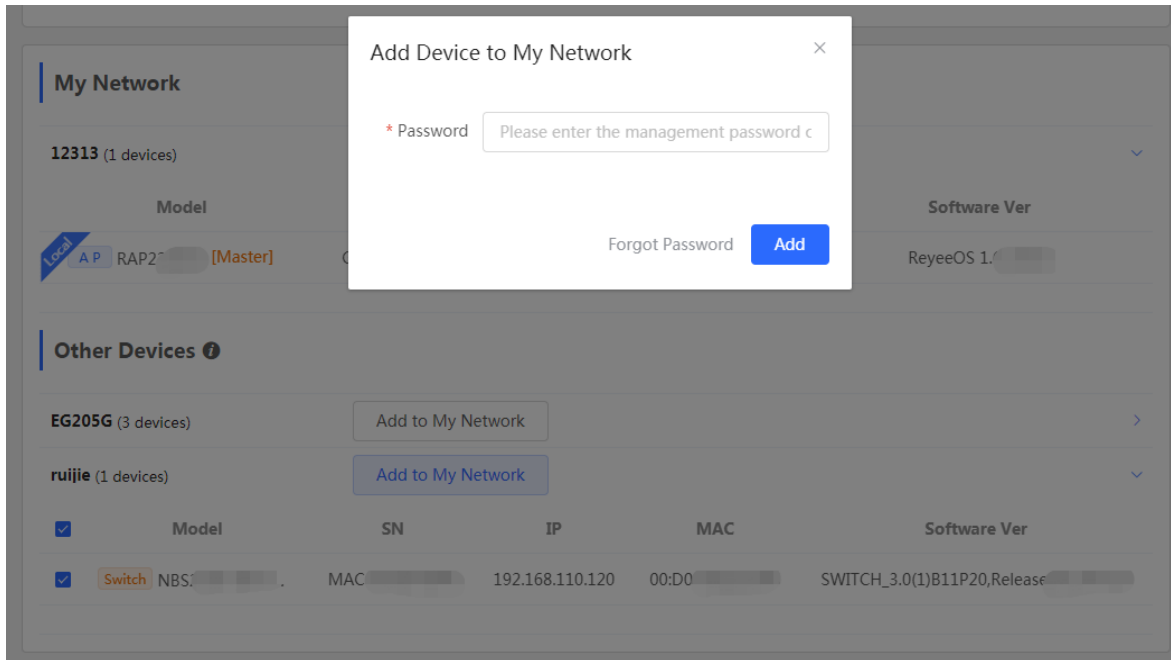

2.2.3 Create Network & Connect

If the device is configured for the first time, the network name, management password and SSID are required. If the device is already configured, the management password will not be displayed here. You can navigate to **Network > Password** to change the management password.

If the device is detected disconnected to Ruijie Cloud, the Ruijie Cloud page will be embedded for you to bind your account after the device accesses the Internet successfully. If the device is already connected to Ruijie Cloud, the eWeb homepage will be displayed after this step.

Figure 2-2-3 Create Network

*** Network Name** DEMO

Network Settings

Internet PPPoE DHCP Static IP

Current Settings: DHCP

*** SSID** demo_wifi

Wi-Fi Password Security Open

Management Password (Please remember the password.)

*** Management Password** Please remember the management pass

Country/Region/Time Zone


*** Country/Region** China (CN)

*** Time Zone** (GMT+8:00)Asia/Shanghai

Previous Finish


Click **Create Network & Connect**, and it takes about 60 seconds to deliver and activate settings. The following message will appear after Internet connection is set up.

Figure 2-2-4 Connect to Internet

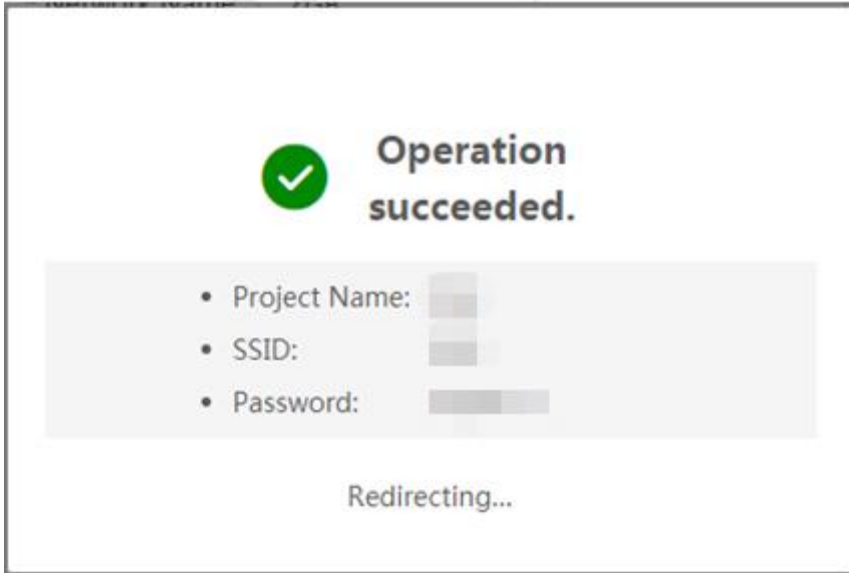

If the Internet connection failed, please follow the instruction in the prompt message.

Figure 2-2-5 Failed Connection

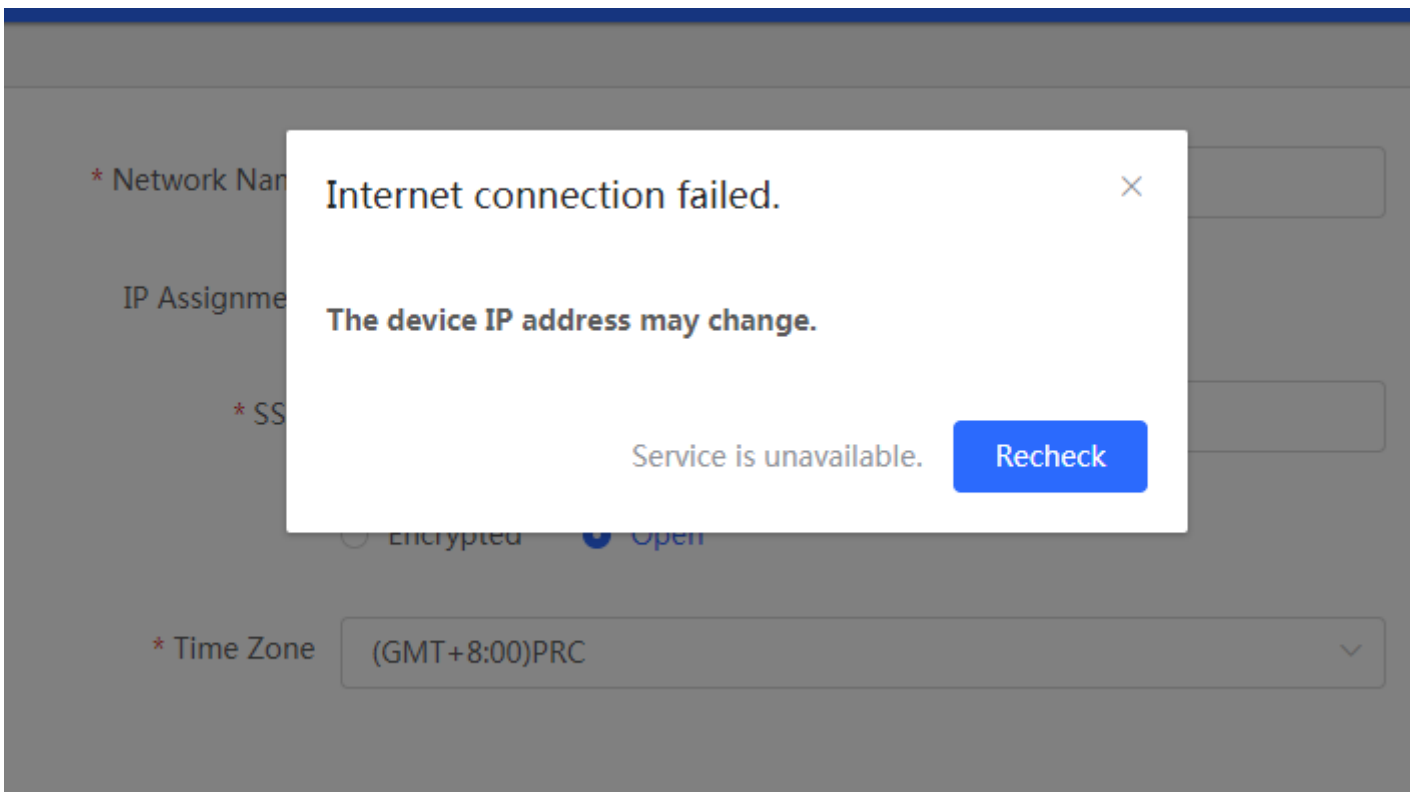



2.2.4 Cloud Service

The **Network Setup** module requires a Ruijie Cloud account. If you are a new user, please register an account first at the [Ruijie Cloud](#) website.

Figure 2-2-6 Log In with Ruijie Cloud Account

Please enter your Ruijie Cloud account to log in.

 Please enter the username.

 Please enter the password.


[Login](#)

[Sign up](#)

I have read and agreed to [the Privacy Policy](#).

If the device works in the standalone mode, log in and the account will be bound with Ruijie Cloud automatically. If the device works in the self-organizing network mode, the following page will appear.

Figure 2-2-7 Select Template

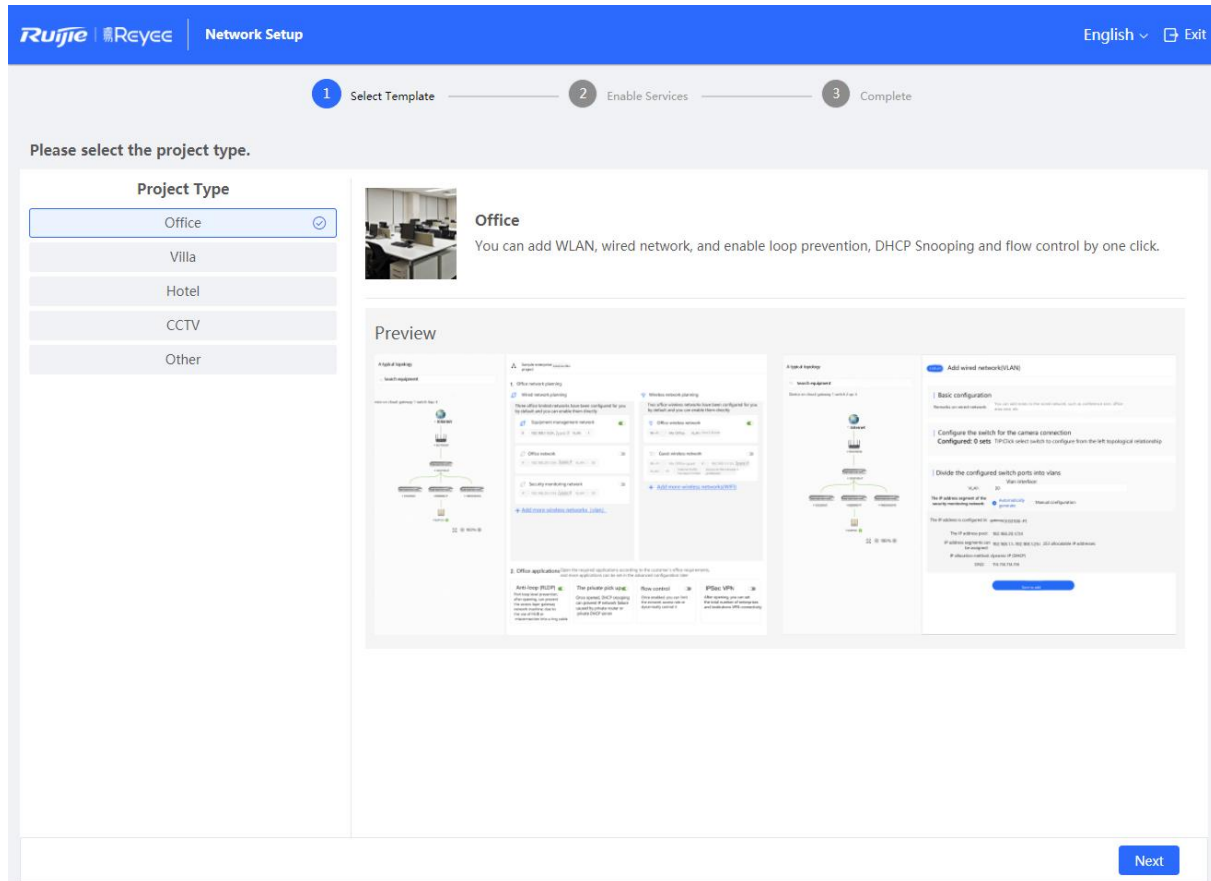

It takes about 3 minutes to discover devices and generate a topology. The following confirmation box will appear:

Figure 2-2-8 Confirm Device Status



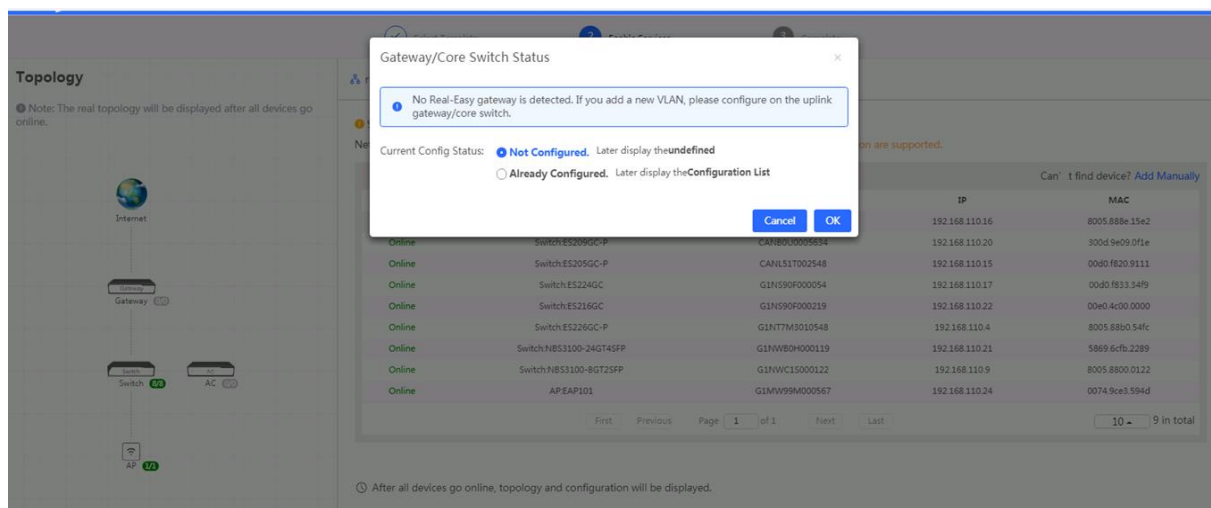


Figure 2-2-9 Enable Services

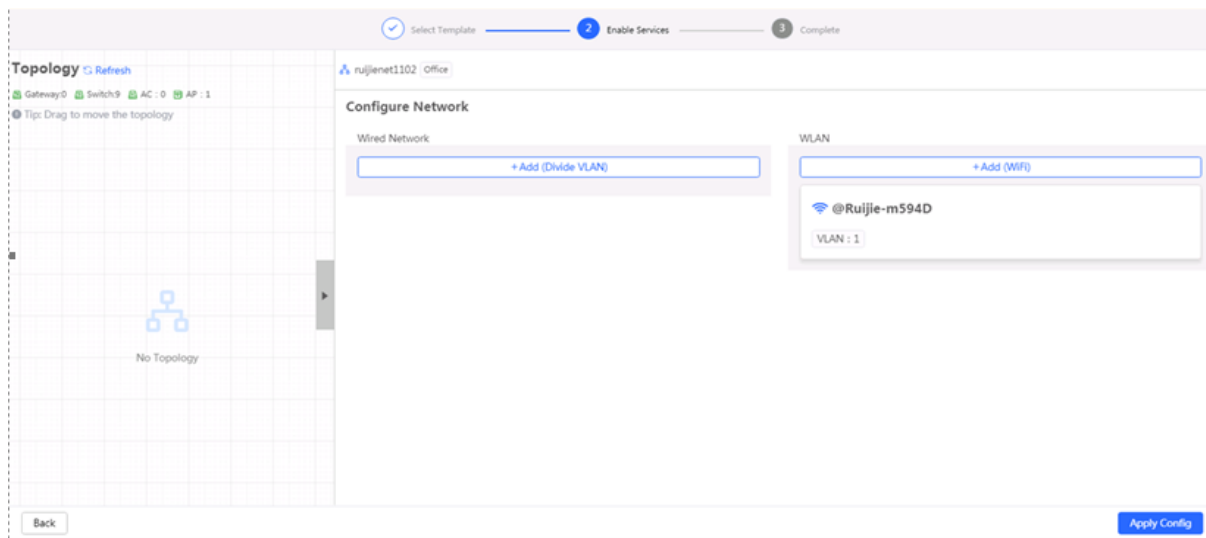

Click **Apply Config**. The following page will appear after configuration is delivered successfully.

Figure 2-2-10 Complete

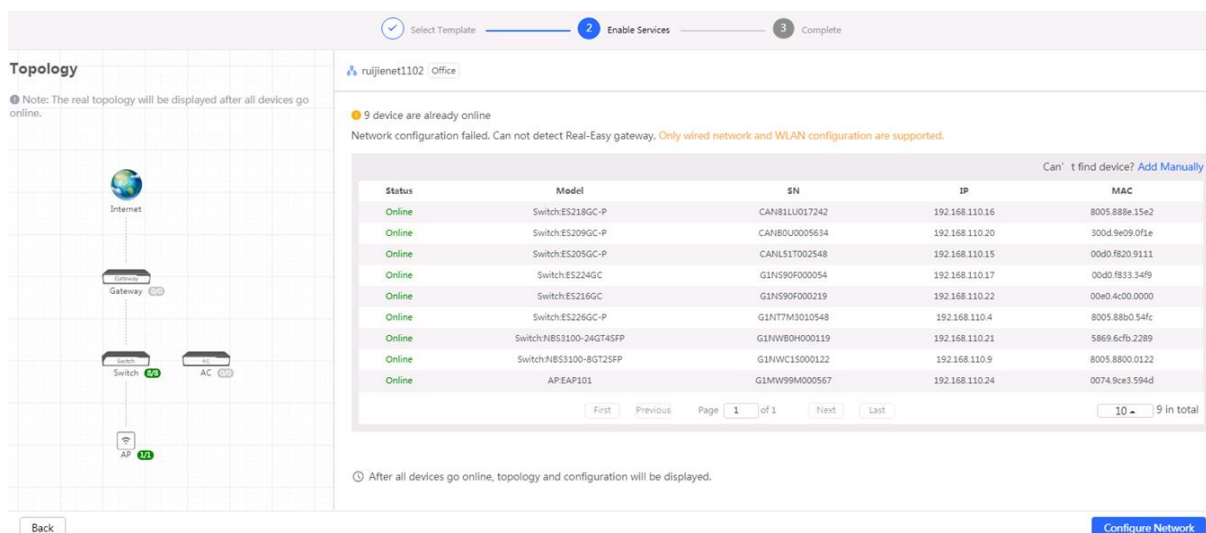

After the above step, click **Ruijie Cloud** to configure the device on Ruijie Cloud. Then exit from Ruijie Cloud and enter the eWeb page again.

Upon the configuration, check the network and wireless settings of each device for consistency.

2.3 Work Mode

The eWeb menu varies with different work modes. The EG device works in the **Router** mode and the EAP device works in the **AP** mode by default. The work mode is displayed on the **Route > Overview** page.

Figure 2-3-1 Device Overview

The screenshot displays a network device configuration interface. At the top, there is a header with a device icon, Hostname: Ruijie.abc, SN: H1LA, IP: 172.30.111.17, and MAC: 00:74:9C. A Reboot button is located in the top right corner. Below the header is a navigation menu with tabs: Overview (selected), Basics, Security, Behavior, VPN, Advanced, Diagnostics, and System.

Overview

- Memory Usage: 36%
- Online Clients: 4
- Status: Online
Duration: 65 days 22 hours 59 minutes 52 seconds
Systemtime: 2021-04-29 09:51:37

Device Details

- Model: [Redacted]
- MAC: 0074: [Redacted]
- Hardware Ver: 1.00
- Hostname: Ruijie.abc
- Work Mode: Router (highlighted with a red box)
- Software Ver: [Redacted]
- SN: H1 [Redacted]
- Role: Master AC

Interface Details

Connected (checked) | Disconnected

- LAN0
- LAN1: 192.168.110.1
- LAN2
- LAN3
- WAN: 172.30.111.17

Click the current work mode, and the following page will appear. You can switch over the work mode here.

Figure 2-3-2 Work Mode

Description:

1. The device IP address may change upon mode change.
2. Change the endpoint IP address and ping the device.
3. Enter the new IP address into the address bar of the browser to access EWEB.
4. The system menu varies with different work modes.
5. The device will be restored and rebooted upon mode change.

Work Mode ?

Self-Organizing ? **i** Tip

Network

AC ?

2.3.1 Router Mode

The **Router** mode indicates NAT forwarding.

The EG device in the **Router** mode of a router contains networking, network setup and routing features including VPN and behavior management.

The AP in the **Router** mode contains networking, network setup and some radio features.


2.3.2 AP Mode

The **AP** mode refers to fit AP mode. All WAN ports are enabled with DHCP by default. You can configure a WAN port with a static IP address or enable PPPoE manually.

2.4 Self-Organizing Network

Click the current work mode, and the following page will appear. You can enable or disable self-organizing network here.

Figure 2-4-1 Self-Organizing Network

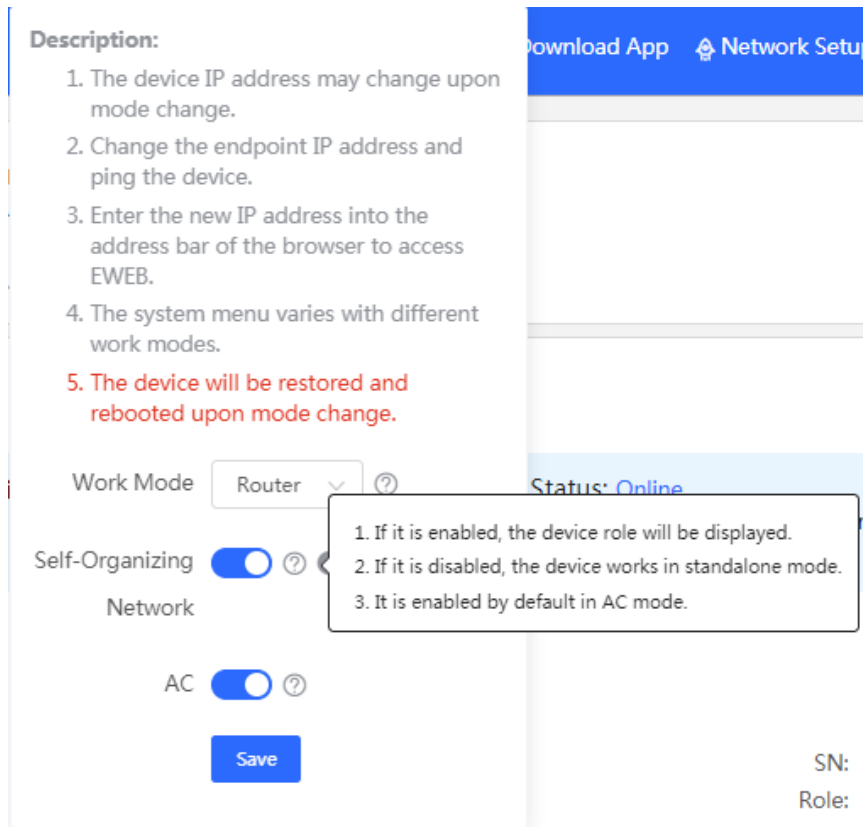


2.4.1 Enable

If self-organizing network is enabled, the device in the network will be discovered and discover other devices. These devices will form a network and be synchronized with network settings.


The menu on the left contains all network settings, including wireless management, switch management and system management.

Figure 2-4-2 Enable Self-Organizing Network

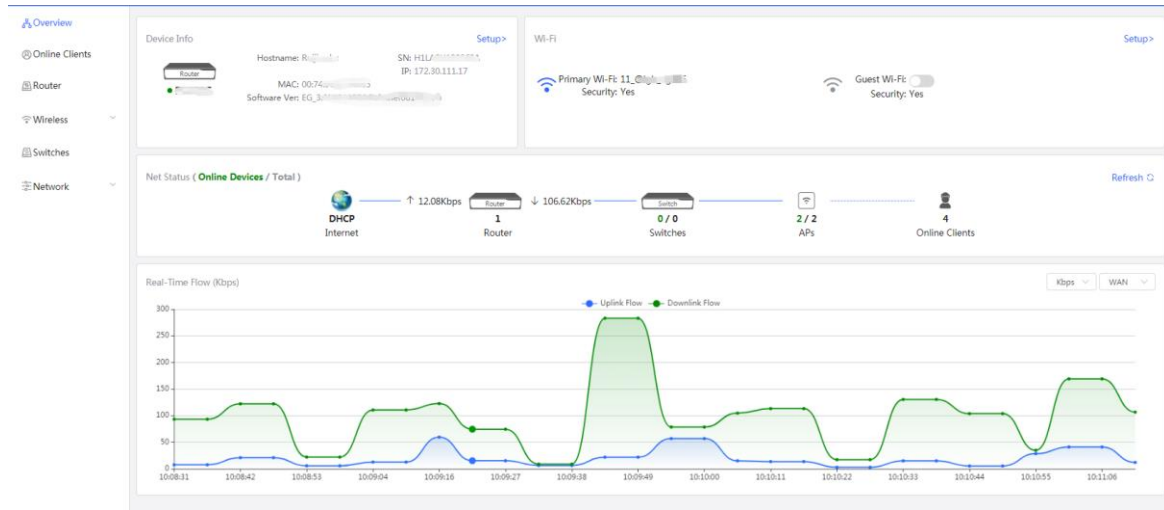

If there is a wireless router enabled with self-organizing network in the network, the **Router** module will appear in the menu on the left. Click **Router**, and a horizontal menu will be displayed.

Figure 2-4-3 Router Menu

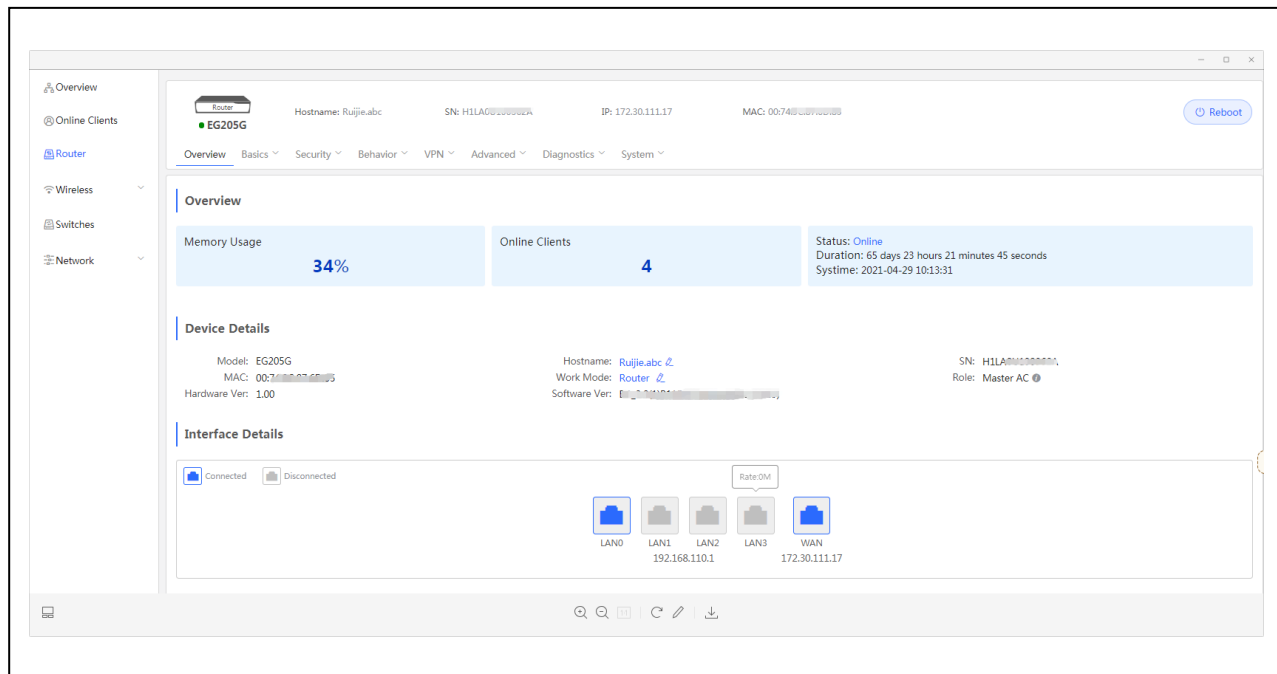


2.4.2 Disable

If self-organizing network is disabled, the device will work in the standalone mode.

After self-organizing network is disabled, a horizontal menu will be displayed vertically on the left.

Figure 2-4-4 Disable Self-Organizing Network

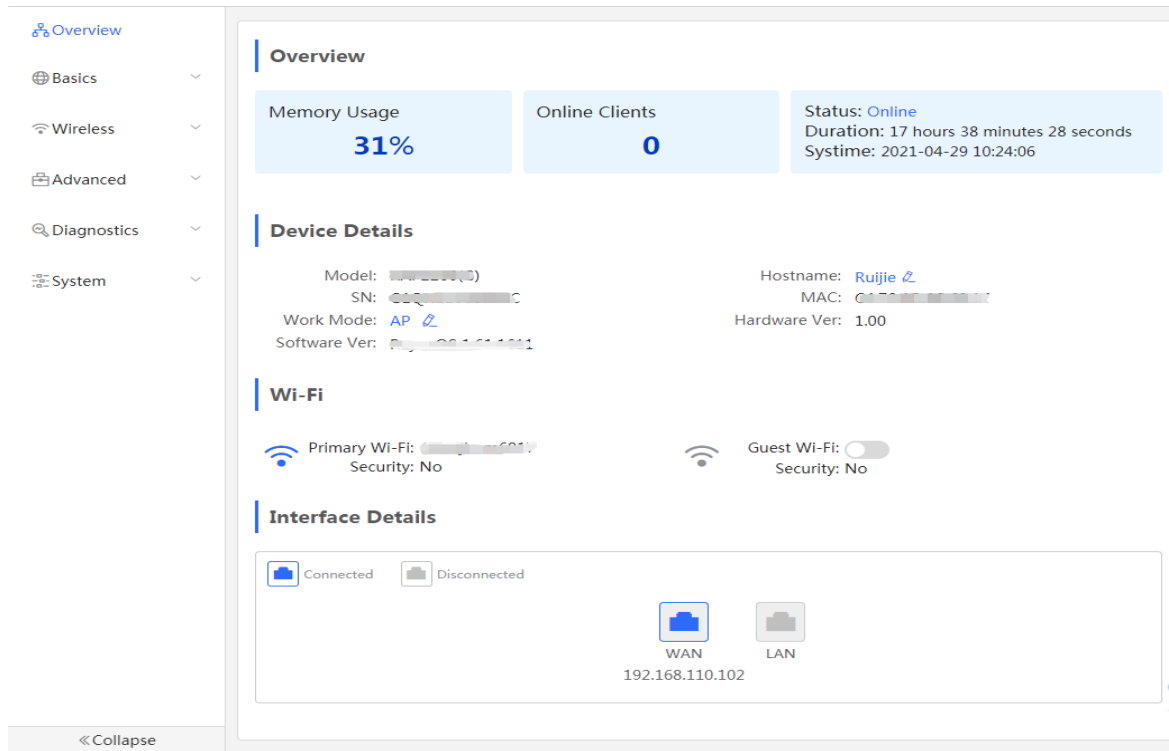


3 eWeb Configuration

3.1 Overview

The **Overview** page displays login device, wireless information and network status.


Figure 3-1 Overview

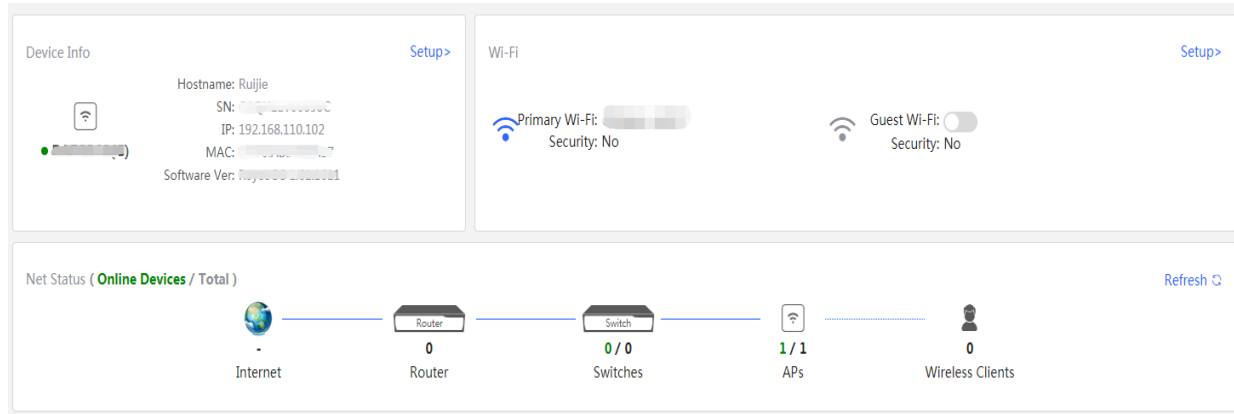

3.2 Basic Wireless

The **APs** module allows you to group, upgrade and delete APs.


Figure 3-2-1 AP List

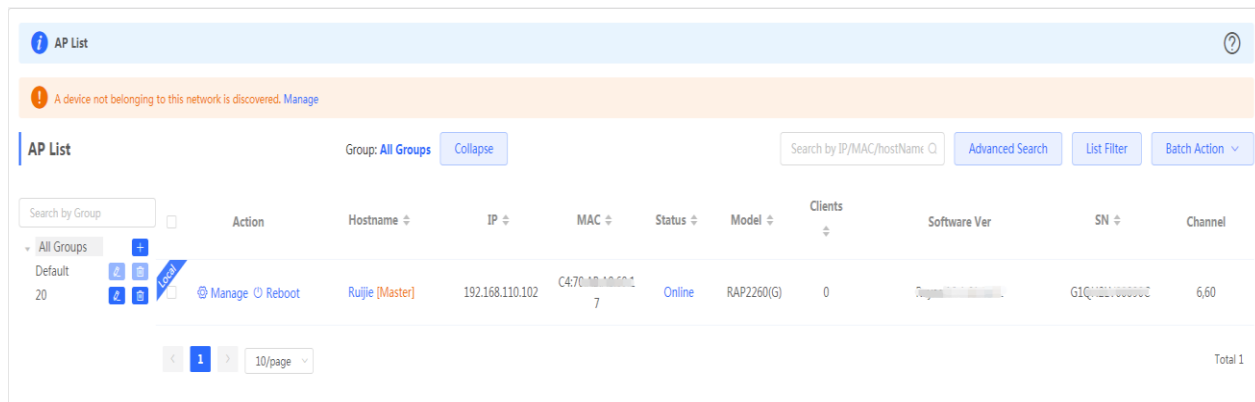

A. Group Management

Click **Expand**, and all groups will be displayed on the left column. You can add, delete, edit and search groups. Up to 8 groups can be added.

Figure 3-2-2 Group Management

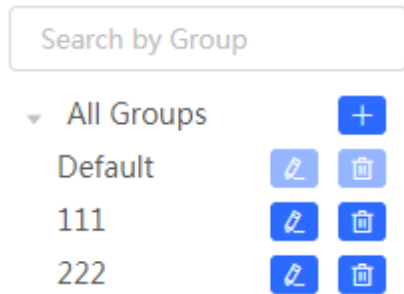

B. Advanced Search and List Filter


Click **Advanced Search**, and you can search APs by SN, model, software version, MAC address and IP address.

Click **List Filter**, and you can select columns to be displayed in the list.

C. Batch Action

Select the target devices and click **Batch Action**. The following actions are available:

Figure 3-2-3 Batch Action

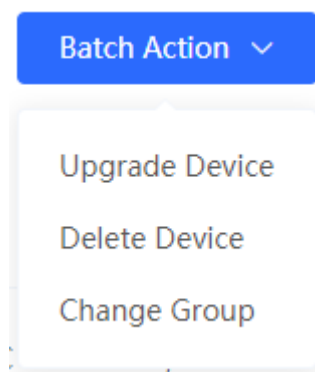

Upgrade Device: If there is a new version available, you can upgrade the devices in batches.


Delete Device: You can delete the devices in batches.

Change Group: You can move the devices from one group to another. The devices will be applied with the new group settings.

3.2.1 Configuration

Figure 3-2-4 Configuration


Select the target device and click **Manage** in the **Action** column, and the AP management page will be displayed.

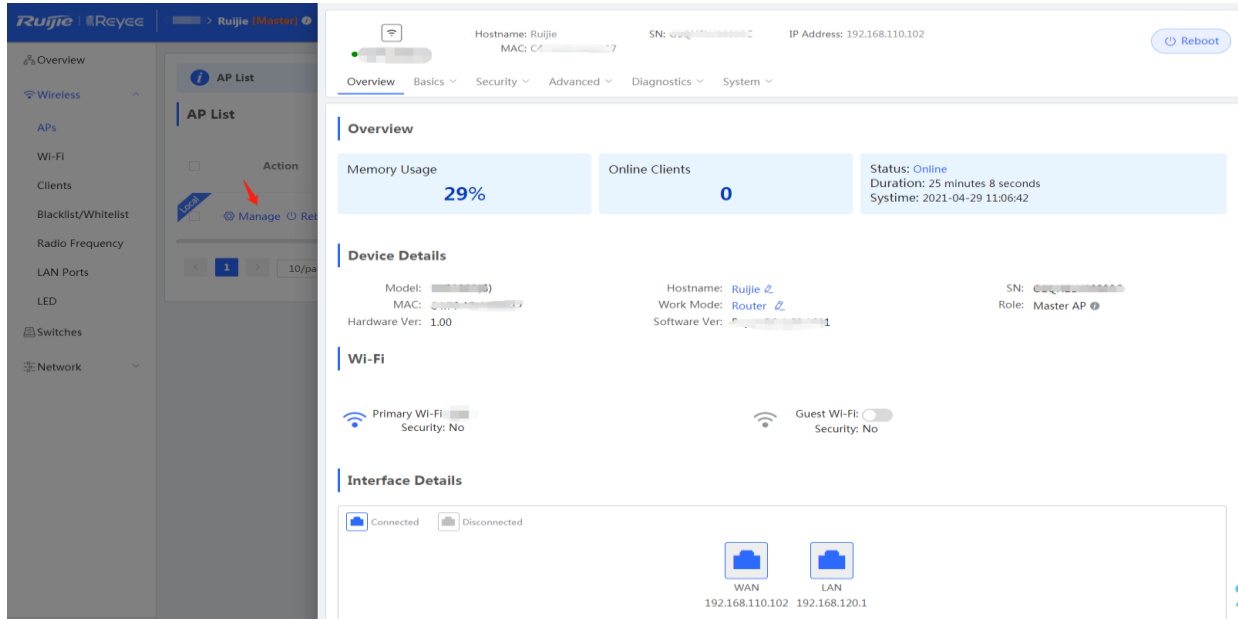

3.2.2 Overview

The **Overview** page displays the information including memory usage, online clients, status, device details, wireless information and interface details.

Figure 3-2-5 Overview

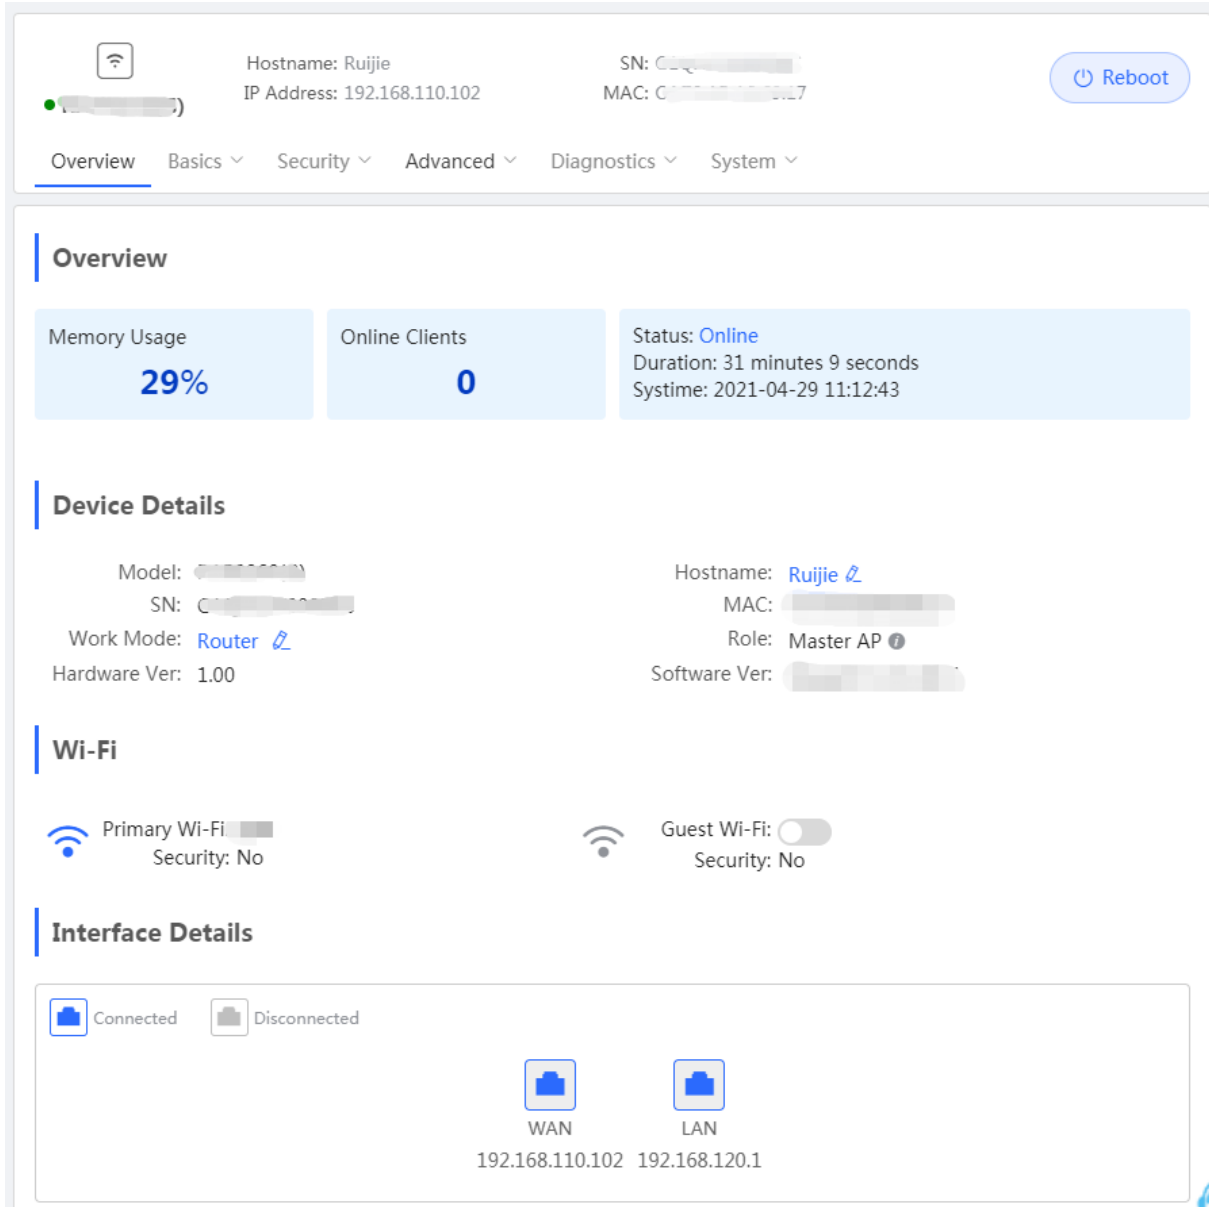



3.2.3 Basics

3.2.3.1 WAN

The **WAN** module allows you to configure WAN settings. WAN settings support multiple lines, and you can configure a specific line as needed.

Figure 3-2-6 WAN Settings

 Configure WAN settings. 

* Internet

No username or password is required for DHCP clients.

IP 192.168.110.102

Subnet Mask 255.255.255.0

Gateway 192.168.110.1

DNS Server 192.168.110.1

..... [Advanced Settings](#)

* MTU

* MAC

3.2.3.2 LAN

The **LAN** module contains **LAN Settings**, **Port VLAN**, **DHCP Clients** and **Static IP Addresses**.

LAN Settings

The **LAN** module allows you to set the IP address of the LAN port and DHCP status.

Figure 3-2-7 LAN Settings

LAN Settings ?

LAN Settings + Add Delete Selected

Up to **8** entries can be added.

<input type="checkbox"/>	IP	Subnet Mask	VLAN ID	Remark	DHCP Server	Start	IP Count	Lease Time(Min)	Action
<input type="checkbox"/>	192.168.120.1	255.255.255.0	Default VLAN	-	Enabled	192.168.120.1	254	30	Edit Delete

Click **Add** to add a VLAN. In the displayed dialog box, configure settings and click **OK**.

Figure 3-2-8 Add IP Address

Add ×

* IP

* Subnet Mask

* VLAN ID

Remark

* MAC

DHCP Server

* Start

* IP Count

* Lease Time(Min)

In the AP mode, the Port VLAN function is available on page for the AP supporting Port VLAN.

Figure 3-2-9 Port VLAN

LAN Settings

Port VLAN

LAN Settings + Add Delete Selected

Up to 4 entries can be added.

<input type="checkbox"/>	VLAN ID	Remark	Action
<input type="checkbox"/>	999	test	Edit Delete

Port VLAN

The **Port VLAN** page displays VLAN information. This page is displayed only when the AP is enabled with port VLAN in the AP mode.

Figure 3-2-10 Port VLAN

Port VLAN ?

Please choose [LAN Settings](#) to create a VLAN first and configure port settings based on the VLAN.

Port VLAN

Connected Disconnected

Port 0

VLAN 1(WAN) UNTAG

VLAN 999 Not Joi

DHCP Clients

The **DHCP Clients** page displays DHCP clients. This page is displayed only in the router mode.

Figure 3-2-11 DHCP Clients

i
DHCP Clients
View DHCP clients.
?

DHCP Clients

Q

Refresh

+ Batch Convert

Up to 300 IP-MAC bindings can be added.

<input type="checkbox"/>	No.	Hostname	MAC	IP Address	Remaining Lease Time(Min)	Status
<input type="checkbox"/>	1	HONOR_20-baa04764d0261530	24:da:33:b5:3a:57	192.168.120.142	26	Convert to Static IP
<input type="checkbox"/>	2	HONOR_20i-a64f73bc27eaa3f	68:a0:3e:f9:7b:cd	192.168.120.4	10	Convert to Static IP
<input type="checkbox"/>	3	R12225	54:bf:64:5c:dc:49	192.168.120.127	21	Convert to Static IP

<

1

>

10/page

Total 3

Click **Convert to Static IP** in the **Action** column to convert a DHCP-assigned IP address to a static IP address. Alternatively, select DHCP-assigned IP addresses and click **Batch Convert** to convert more than one IP address.

Static IP Addresses

The **Static IP Addresses** module allows you to add, delete and edit static IP addresses. This page is displayed only in the router mode.

Figure 3-2-12 Static IP Addresses

i
Static IP Address List
?

Static IP Address List

Q

+ Add

Delete Selected

Up to 300 entries can be added.

<input type="checkbox"/>	No.	IP	MAC	Action
<input type="checkbox"/>	1	192.168.110.136	30:0D:9E:8C:58:26	Edit Delete
<input type="checkbox"/>	2	192.168.120.196	54:bf:64:5c:dc:49	Edit Delete

<

1

>

10/page

Total 2

Click **Add** to add a static IP address manually. In the displayed dialog box, configure settings and click **OK**.

Figure 3-2-13 Add Static IP Address

Add

✕

* IP

Example: 1.1.1.1

* MAC

Example: 00:11:22:33:44:55


Cancel

OK

3.2.3.3 PoE

The **PoE** page displays PoE status and power consumption.

Figure 3-2-14 PoE

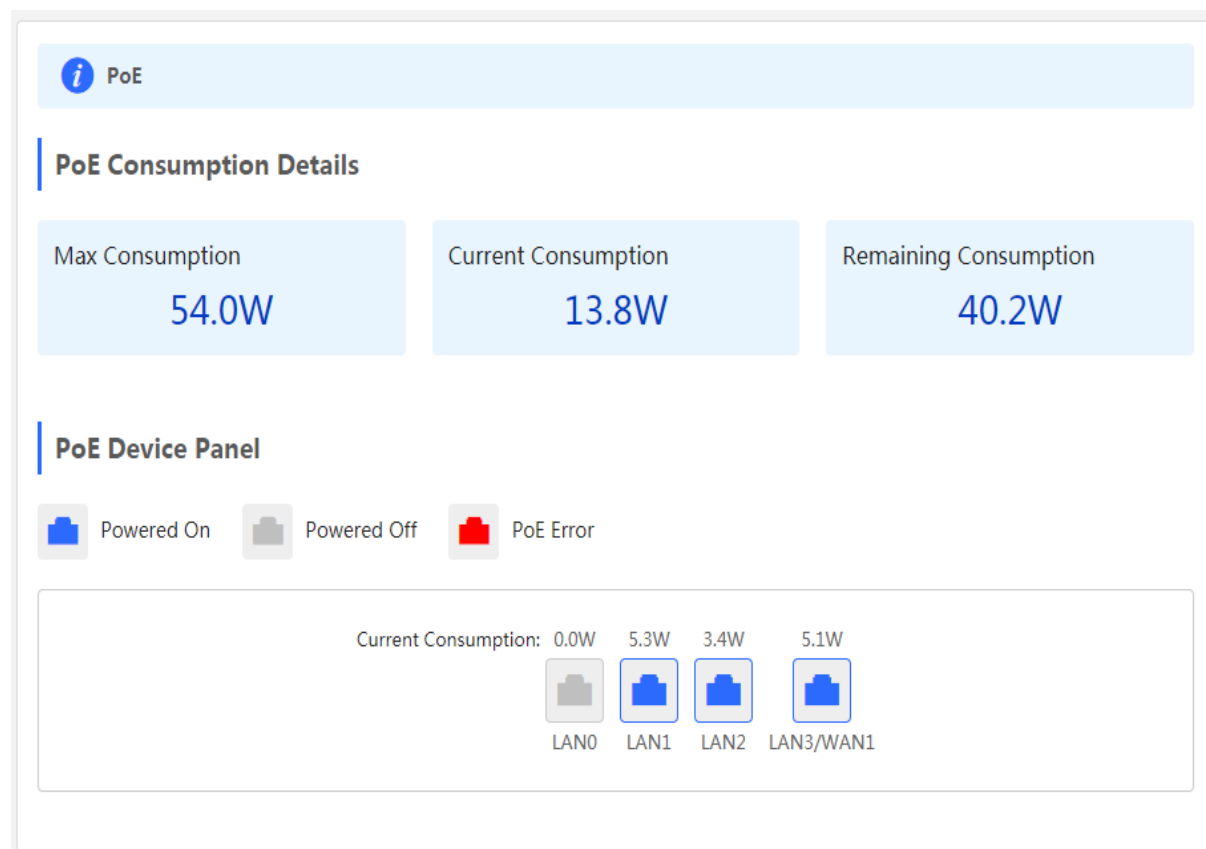



3.2.4 Security

3.2.4.1 ARP List

The **ARP List** page displays ARP entries.

Figure 3-2-15 ARP List

 The device learns IP-MAC mapping of all devices connected to its interfaces. You can bind or filter the MAC address. 

ARP List

Search by IP/MAC



+ Add

 Delete Selected

Up to **256** IP-MAC bindings can be added.

<input type="checkbox"/>	No.	MAC	IP	Type	Action
<input type="checkbox"/>	1	a8:9c:ed:92:6fe2	192.168.120.251	Static	Edit Delete
<input type="checkbox"/>	2	54:bf:64:5c:dc:49	192.168.120.127	Dynamic	Bind
<input type="checkbox"/>	3	00:74:9c:87:65:bb	192.168.110.1	Dynamic	Bind

Total 3 Go to page

Click **Add** to add an IP-MAC binding. In the displayed dialog box, enter or select an IP address and a MAC address and click **OK**.

Figure 3-2-16 Add IP-MAC Binding

Add ×

* IP Address

* MAC

Click **Delete** in the **Action** column. The message "Are you sure you want to delete the entry?" is displayed. In the displayed dialog box, click **OK**. The message "Delete operation succeeded." is displayed.

3.2.5 Advanced

3.2.5.1 Local DNS

The **Local DNS** module allows you to configure a local DNS server.

Figure 3-2-17 Local DNS



The local DNS server is not required to be configured. By default, the device will get the DNS server address from the uplink device.

Local DNS server

Example: 8.8.8.8, each separated by a space.

Save

3.2.5.2 PoE Settings

The **PoE Settings** module allows you to configure the PoE mode.

Figure 3-2-18 PoE Settings



PoE Settings

PoE Settings

Power Mode

Auto



Current Mode IEEE 802.3at


Current Power 25.5W

Save

3.2.5.3 Other Settings

The **Other Settings** module allows you to perform other settings, such as Enable RIP&RIPng, Enable Advanced and Disable ICMPv6 Error.

Figure 3-2-19 Other Settings

 Other Settings**Other Settings**Enable RIP&RIPng Encryption MD5 * Password Enable Advanced 

Security

Disable ICMPv6 Error


Messages

- Destination Unreachable
- Datagram Too Big
- Time Exceeded
- Parameter Problem

3.2.6 Diagnostics



3.2.6.1 Network Check

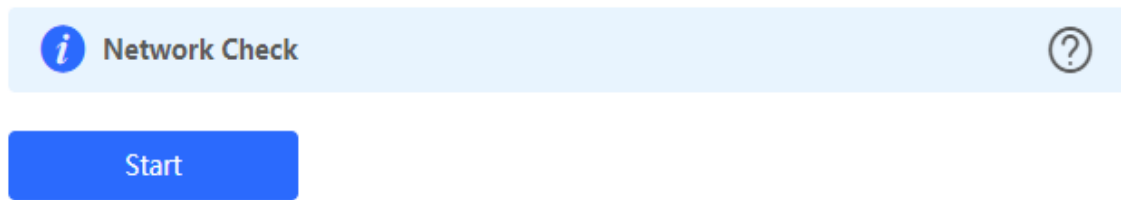Figure 3-2-20 Network Check


















Click **Start**, and click **OK** in the confirmation box. After the test finishes, the result will be displayed.

Figure 3-2-21 Result

 **Network Check** 

Recheck



- WAN/LAN Cable 
- Auto-Negotiated Speed 
- WAN Port 
- DHCP-Assigned IP Address 
- LAN & WAN Address Conflict 
- Loop 
- DHCP Server Conflict 
- IP Address Conflict 
- Route 
- Next Hop Connectivity 
- DNS Server 
- IP Session Count 
- DHCP Capacity 
- Flow Control 
- Ruijie Cloud Server 

If any problem occurs, the result will be displayed as follows:

Figure 3-2-22 Issue & Advice

Ruijie Cloud Server
!

Check Connection to Cloud Server

Result : The device is not connected with the cloud server. Cloud service may fail to start.

Advice : Please verify that the device SN is added to the cloud and check the network.

Please fix the problem by taking the suggested action.

3.2.6.2 Alarms

The **Alarms** module allows you to view and manage alarms in the network.

Figure 3-2-23 Alarms

i View and manage alarms.

Alarm List

[View Unfollowed Alarm](#)

Expand	Alarms	Suggestion	Action										
▼	There is more than one DHCP server in the LAN network.	Please disable the extra DHCP server in the LAN network.	Delete Unfollow										
	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 15%;">Hostname</th> <th style="width: 15%;">SN</th> <th style="width: 15%;">Type</th> <th style="width: 15%;">Time</th> <th style="width: 40%;">Details</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Ruijie</td> <td style="text-align: center;">G1QH2LV00090C</td> <td style="text-align: center;">RAP260(G)</td> <td style="text-align: center;">2021-04-29 17:06:47</td> <td>A DHCP server conflict occurs in LAN network: MAC:00:74:9c:b4:b6:8b,IP:1.1.1.1,VLAN ID:30; MAC:00:74:9c:b4:b6:8c,IP:1.1.2.1,VLAN ID:20</td> </tr> </tbody> </table>	Hostname	SN	Type	Time	Details	Ruijie	G1QH2LV00090C	RAP260(G)	2021-04-29 17:06:47	A DHCP server conflict occurs in LAN network: MAC:00:74:9c:b4:b6:8b,IP:1.1.1.1,VLAN ID:30; MAC:00:74:9c:b4:b6:8c,IP:1.1.2.1,VLAN ID:20		
Hostname	SN	Type	Time	Details									
Ruijie	G1QH2LV00090C	RAP260(G)	2021-04-29 17:06:47	A DHCP server conflict occurs in LAN network: MAC:00:74:9c:b4:b6:8b,IP:1.1.1.1,VLAN ID:30; MAC:00:74:9c:b4:b6:8c,IP:1.1.2.1,VLAN ID:20									

<

1


>

10/page

Total 1


Click **Unfollow** in the **Action** column to unfollow an alarm. In the confirmation box, click **OK**.

Figure 3-2-24 Unfollow Alarm

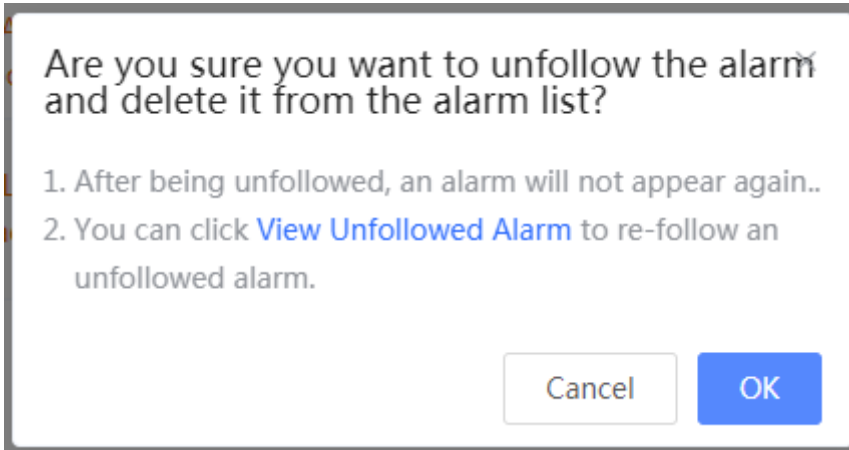

Click **View Unfollowed Alarm**, and you can view and follow the alarm again.

Figure 3-3-25 Re-follow Alarm

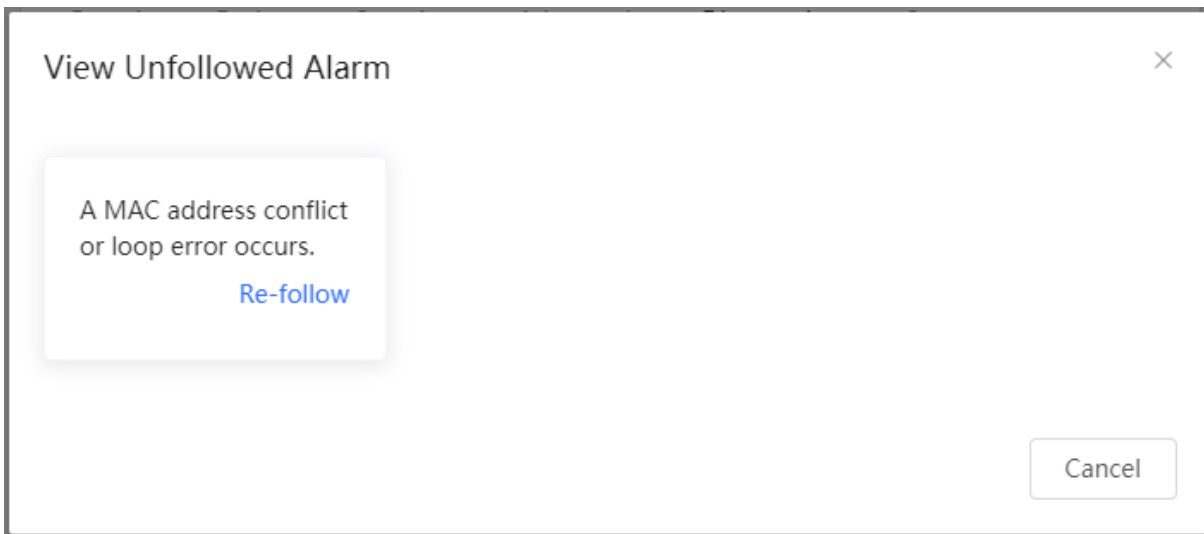

3.2.6.3 Network Tools

The **Network Tools** module provides the following network tools to detect the network status: **Ping**, **Traceroute**, and **DNS Lookup**.

Figure 3-2-26 Ping Test and Result

Network Tools ?

Tool Ping Traceroute DNS Lookup

* IP Address/Domain

* Ping Count

* Packet Size Bytes

```
PING www.baidu.com (14.215.177.38): 64 data bytes
72 bytes from 14.215.177.38: seq=0 ttl=49 time=25.341 ms
72 bytes from 14.215.177.38: seq=1 ttl=49 time=27.422 ms
72 bytes from 14.215.177.38: seq=2 ttl=49 time=26.862 ms
72 bytes from 14.215.177.38: seq=3 ttl=49 time=25.931 ms

--- www.baidu.com ping statistics ---
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 25.341/26.389/27.422 ms
```

Figure 3-2-27 Traceroute Test and Result

Network Tools ⓘ

Tool Ping Traceroute DNS Lookup

* IP Address/Domain

* Max TTL

```
traceroute to www.google.com (104.16.251.55), 20 hops max,
38 byte packets
 1 192.168.110.1 (192.168.110.1) 0.861 ms 0.797 ms 0.692
ms
 2 172.30.111.1 (172.30.111.1) 2.358 ms 2.053 ms 1.992 ms
 3 172.30.255.33 (172.30.255.33) 1.400 ms 1.299 ms 1.183
ms
 4 172.30.255.146 (172.30.255.146) 0.949 ms 1.132 ms 1.131
ms
 5 172.30.255.150 (172.30.255.150) 1.314 ms 1.262 ms 1.524
ms
 6 172.30.255.33 (172.30.255.33) 1.697 ms 1.558 ms 1.717
ms
 7 *
```

Figure 3-2-28 DNS Lookup Test and Result

Network Tools ⓘ

Tool Ping Traceroute DNS Lookup


* IP Address/Domain

Result

3.2.6.4 Fault Collection

The **Fault Collection** module allows you to collect faults by one click and download the fault information to the local device.

Figure 3-2-29 Fault Collection

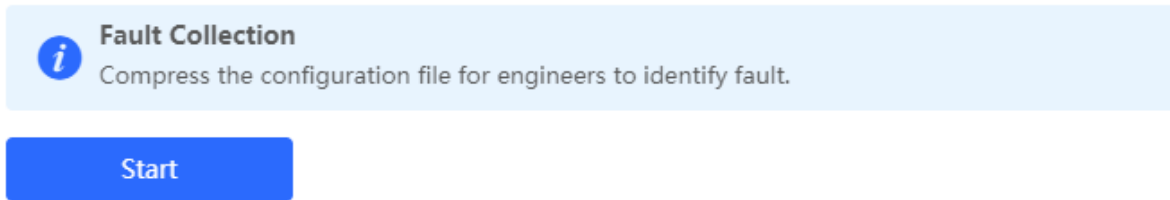


3.2.7 System

3.2.7.1 Session Timeout

The **Session Timeout** module allows you to set the session timeout period.

Figure 3-2-30 Session Timeout

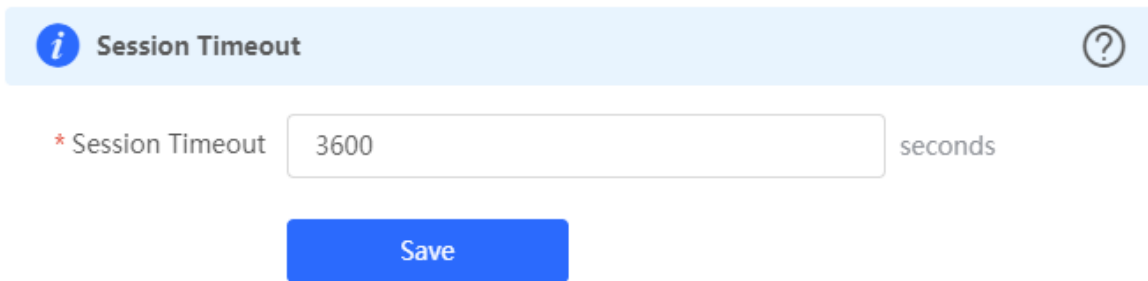



3.2.7.2 Backup & Import & Reset

↳ Backup & Import

The **Backup & Import** module allows you to import a configuration file and apply the imported settings. It also allows exporting the configuration file to generate a backup.

Figure 3-2-31 Backup & Import

 If the target version is much later than the current version, some configuration may be missing. It is recommended to choose [Reset](#) before importing the profile. The device will be rebooted automatically later. 

Backup Profile

Backup Profile



Import Profile

File Path

Restore


The **Restore** module allows you to restore the device to factory settings.

Figure 3-2-32 Restore

 Resetting the device will clear the current settings. If you want to keep the setup, please [Backup Profile](#) first. 

Please exercise caution if you want to restore the factory settings.

Figure 3-2-33 Confirm Restore

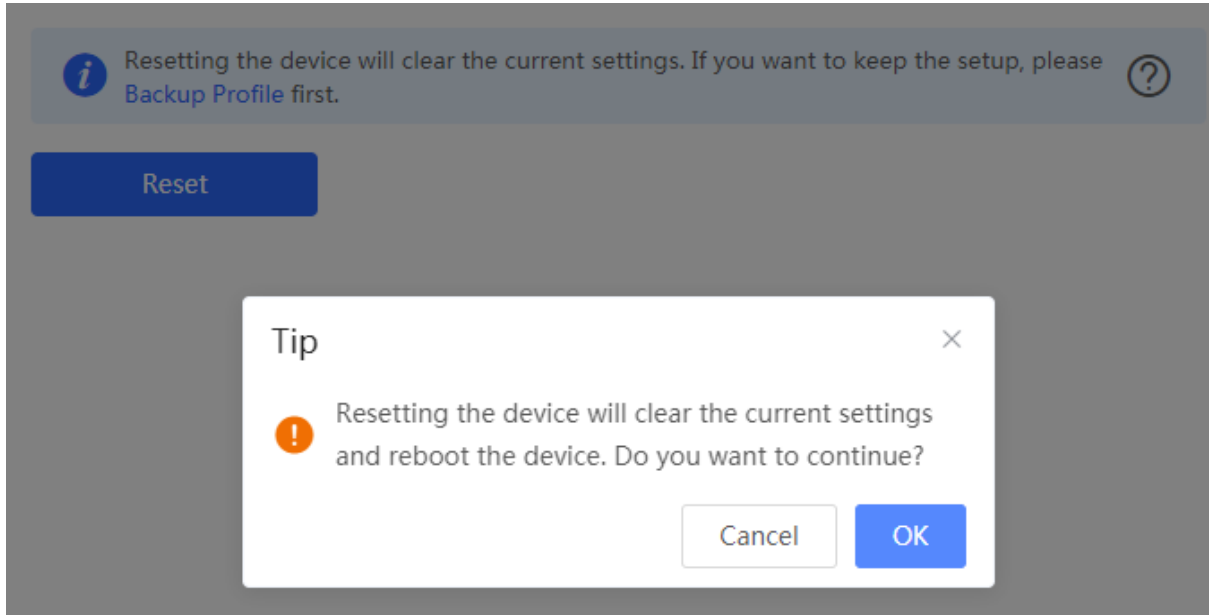


Click **OK** to restore all default values. This function is recommended when the network configuration is incorrect or the network environment is changed.

3.2.7.3 Upgrade


↳ Online Upgrade

Click **Upgrade Now**. The device downloads the upgrade package from the network, and upgrades the current version. The upgrade operation retains configuration of the current device. Alternatively, you can select **Download File** to the local device and import the upgrade package on the [Local Upgrade](#) page.

Figure 3-2-34 Online Upgrade

 Online upgrade will keep the current setup. Please do not refresh the page or close the browser. You will be redirected to the login page automatically after upgrade.

Current Version 

New Version 


Description 

- Tip
1. If your device cannot access the Internet, please click [Download File](#).
 2. Choose [Local Upgrade](#) to upload the file for local upgrade.

[Upgrade Now](#)

If there is no available new version, the device displays a prompt indicating that the current version is the latest.

Figure 3-2-35 Upgrade Prompt


 Online upgrade will keep the current setup. Please do not refresh the page or close the browser. You will be redirected to the login page automatically after upgrade.

Current Version  (It is the latest version.)

Local Upgrade

Click **Browse** to select an upgrade package, and click **Upload**. After uploading and checking the package, the device displays the upgrade package information and a prompt asking for upgrade confirmation. Click **OK** to start the upgrade.


Figure 3-2-36 Local Upgrade

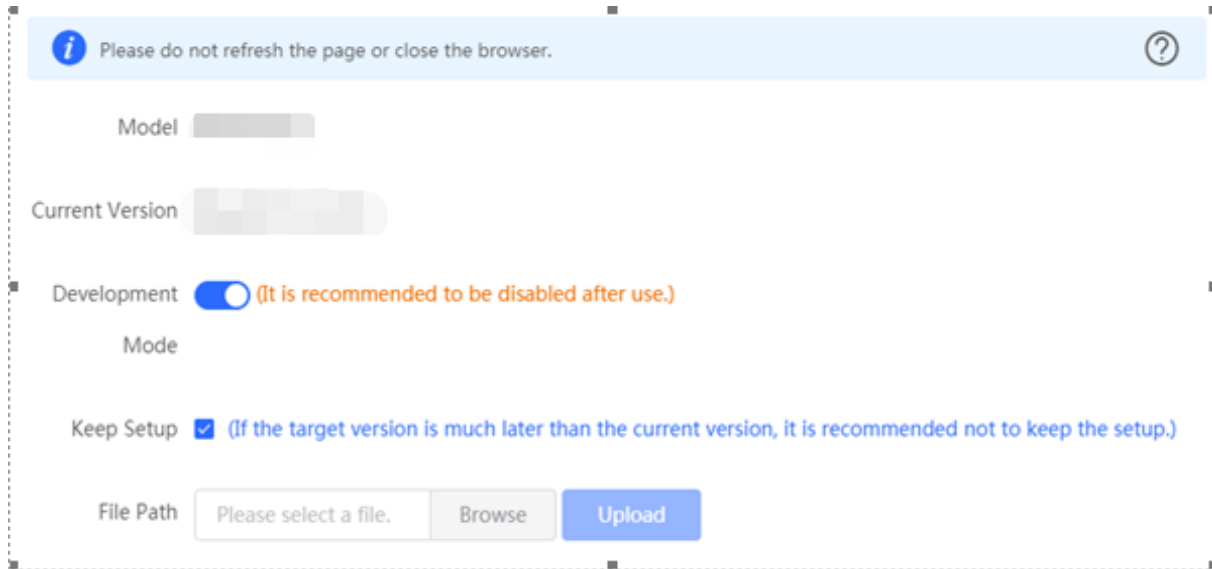

3.2.7.4 Reboot

The **Reboot** module allows you to reboot the device immediately.

Figure 3-2-37 Reboot

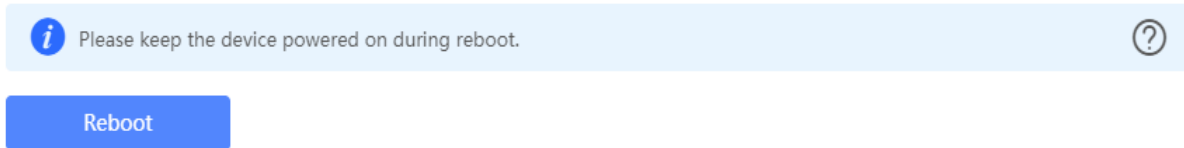

Click **Reboot**, and click **OK** in the confirmation box. The device is rebooted and you need to log into the eWeb management system again after the reboot. Do not refresh the page or close the browser during the reboot. After the device is successfully rebooted and the eWeb service becomes available, you will be redirected to the login page of the eWeb management system.

3.3 WiFi

The **WiFi** module allows you to configure WiFi settings for all devices.

3.3.1 WiFi Settings

The **WiFi Settings** module allows you to configure the primary WiFi.

Figure 3-3-1 WiFi Settings

i Tip: Changing configuration requires a reboot and clients will be reconnected. ?

Wi-Fi Settings Device Group: Default ▼

* SSID

Band 2.4G + 5G ▼

Security Open ▼

Collapse

Wireless Schedule All Time ▼

VLAN Default VLAN ▼

Hide SSID (The SSID is hidden and must be manually entered.)

AP Isolation (The client joining this Wi-Fi network will be isolated.)

Band Steering (The 5G-supported client will access 5G radio preferentially.)

XPress (The client will experience faster speed.)

Layer-3 Roaming (The client will keep his IP address unchanged in this Wi-Fi network.)

Wi-Fi6 (802.11ax High-Speed Wireless Connectivity.) ?

Save

3.3.2 Guest WiFi

The guest WiFi is disabled by default. You can enable guest WiFi on this page or homepage.

AP isolation is enabled by default and cannot be edited.

Set a schedule, and the guest WiFi will be enabled only during this period time. When the time expires, the guest WiFi will be disabled.

Figure 3-3-2 Guest WiFi

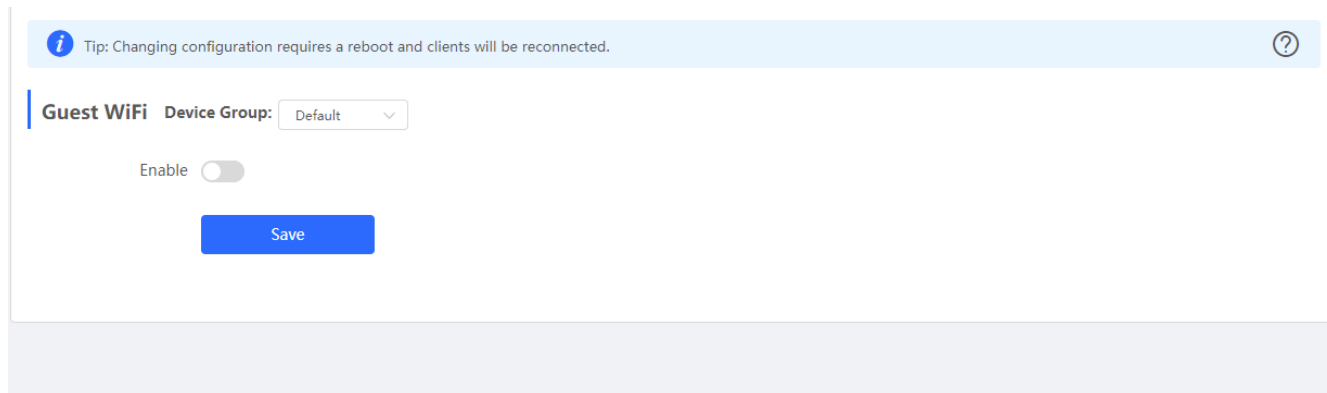


Figure 3-3-3 Enable Guest WiFi

Guest Wi-Fi Device Group: Default

Enable

* SSID

Band 2.4G + 5G

Security Open

[Collapse](#)

Wireless Schedule Never Disable

VLAN Default VLAN

Hide SSID (The SSID is hidden and must be manually entered.)

AP Isolation (The client joining this Wi-Fi network will be isolated.)

Band Steering (The 5G-supported client will access 5G radio preferentially.)

XPress (The client will experience faster speed.)

Layer-3 Roaming (The client will keep his IP address unchanged in this Wi-Fi network.)



Wi-Fi6 (802.11ax High-Speed Wireless Connectivity.)

Save

3.3.3 WiFi List

The **WiFi List** displays all WiFi networks. The primary WiFi is also listed here and cannot be deleted.

Figure 3-3-4 WiFi List

 Tip: Changing configuration requires a reboot and clients will be reconnected. 

Wi-Fi List

Device Group:

[+ Add](#)

Up to **8** SSIDs can be added.

SSID	Band	Security	Hidden	VLAN ID	Action
ZGB	2.4G + 5G	OPEN	No	Default VLAN	Edit Delete

Click **Add** to add a WiFi network. In the displayed dialog box, configure settings and click **OK**.

Figure 3-3-5 Add WiFi


Add ✕

* SSID

Band

Security


----- [Expand](#) -----

You can click  in the upper right corner to see description about each configuration item.

3.3.4 Healthy Mode

The **Healthy Mode** module allows you to enable health mode and set a schedule.

Figure 3-3-6 Healthy Mode

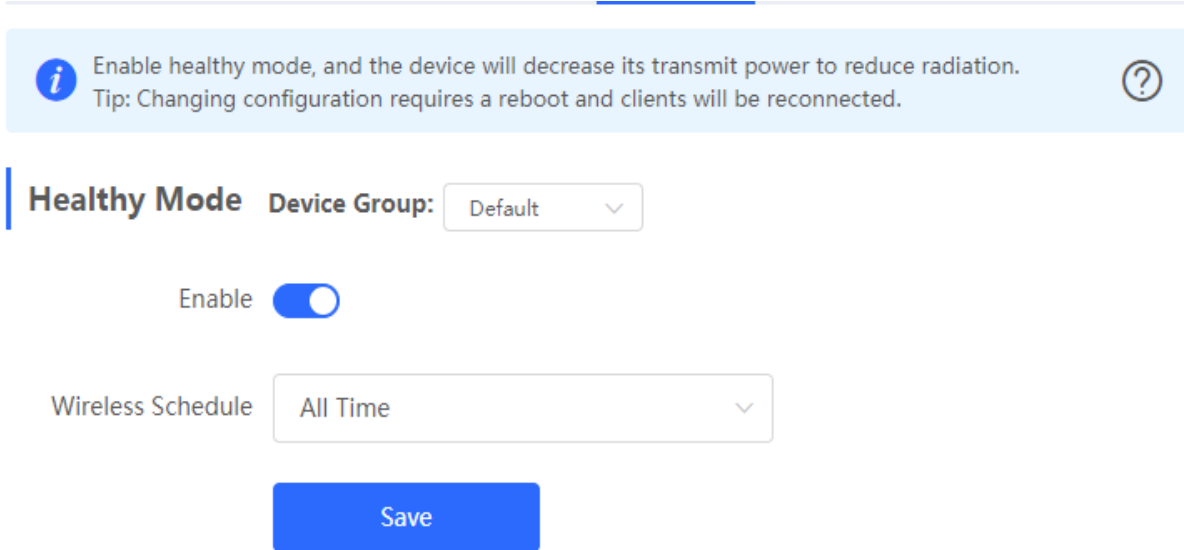

3.4 Wireless Clients

The **Clients** module displays the wireless clients.

Figure 3-4-1 Wireless Client List


The screenshot displays the "Wireless Client List" interface. At the top, there is a "Wireless Clients" header with an information icon. Below the header, there are two buttons: "Refresh" and "Advanced Search". The main content is a table with the following columns: Username, MAC, IP, SN, Duration, RSSI, Rate, Band, SSID, Channel, and Action. One client is listed with the following details: Username (partially obscured), MAC (a8...e), IP (192.168.120.251), SN (...C), Duration (2021-04-29 15:29:10), RSSI (-54), Rate (6M), Band (5G), SSID (ZGB), Channel (64), and Action (Add to Blacklist). At the bottom, there is a pagination control showing "Go to page 1" and "Total 1".

Username	MAC	IP	SN	Duration	RSSI	Rate	Band	SSID	Channel	Action
	a8...e 2	192.168.120.251	...C	2021-04-29 15:29:10	-54	6M	5G	ZGB	64	Add to Blacklist

Click **Advanced Search**, and you can search clients by SN and MAC address.

This is a fuzzy search. You can enter an incomplete MAC address or part of an SN.

Figure 3-4-2 Advanced Search

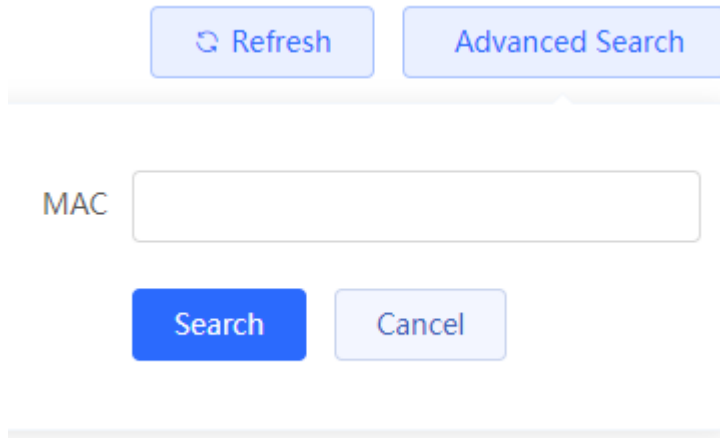

3.5 Blacklist/Whitelist

The **Blacklist/Whitelist** module allows you to configure wireless global or SSID-based client blacklist and whitelist. Blacklist and whitelist can achieve full match or prefix match (OUI).

3.5.1 Global Blacklist/Whitelist

Figure 3-5-1 Global Blacklist/Whitelist

All STAs except blacklisted STAs are allowed to access Wi-Fi. Only the whitelisted STAs are allowed to access Wi-Fi.

Blocked WLAN Clients + Add Delete Selected

Up to 30 members can be added.

<input type="checkbox"/>	MAC	Remark	Action
<input type="checkbox"/>	A8:9C:ED:92:6F:E6	MI9-Mr	Edit Delete
<input type="checkbox"/>	A8:9C:ED:92:6F:E9	TEST	Edit Delete

< 1 > 10/page Total 2

Click **Add** to add a blacklisted or whitelisted client. In the displayed dialog box, configure settings and click **OK**.

Add



Match Type Full Prefix (OUI)

* MAC

Remark

Cancel

OK

3.5.2 SSID-based Blacklist/Whitelist

The **SSID-based Blacklist/Whitelist** module allows you to set the SSID-based blacklist and whitelist.

Figure 3-5-2 SSID-based Blacklist/Whitelist

Blacklist/Whitelist is used to allow or reject a client's request to connect to the Wi-Fi network.

Note: OUI matching rule and SSID-based blacklist/whitelist are supported by only RAP Net and P32 (and later versions).

Rule:

1. In the Blacklist mode, the clients in the blacklist are not allowed to connect to the Wi-Fi network.
2. In the Whitelist mode, only the clients in the whitelist are allowed to connect to the Wi-Fi network.

Device Group: Default

SSID-Based Blacklist/Whitelist

ZGB

All STAs except blacklisted STAs are allowed to access Wi-Fi. Only the whitelisted STAs are allowed to access Wi-Fi.

Blocked WLAN Clients + Add Delete Selected

Up to 30 members can be added.

<input type="checkbox"/>	MAC	Remark	Action
<input type="checkbox"/>	A8:9C:ED:92:6F:E9	MI9-Mr	Edit Delete
<input type="checkbox"/>	A8:9C:ED:92:6F:62	TEST	Edit Delete

< 1 > 10/page Total 2

3.6 Radio Frequency

The **Radio Frequency** module allows you to configure the RF parameters.

Figure 3-6-1 Radio Frequency Page without Wireless Function

i Tip: Changing configuration requires a reboot and clients will be reconnected.

Radio Frequency Device Group:

Country/Region

2.4G Channel Width **5G** Channel Width

Client Count Limit Client Count Limit

Figure 3-6-2 Radio Frequency Page with Wireless Function

i Tip: Changing configuration requires a reboot and clients will be reconnected.

Radio Frequency Device Group:

Country/Region

2.4G Channel Width **5G** Channel Width

Client Count Limit Client Count Limit

The settings are valid for only **current device**

2.4G Channel **5G** Channel

Transmit Power Auto Lower Low Medium High

Roaming Sensitivity Low 20% 40% 60% 80% High

Transmit Power Auto Lower Low Medium High


Roaming Sensitivity Low 20% 40% 60% 80% High

3.7 LAN Ports

The **LAN Ports** module allows you to configure LAN ports.

Figure 3-7-1 LAN Ports

LAN Port Settings


 The configuration takes effect only for the AP with a LAN port, e.g., EAP101.

Note: The configured LAN port settings prevail. The AP device with no LAN port settings will be enabled with default settings.

Default Settings

VLAN ID [Add VLAN](#)

(Range: 2-232 and 234-4090. A blank value indicates the same VLAN as WAN port.)

Applied to AP device with no LAN port settings 

[Save](#)

LAN Port Settings [+ Add](#) [Delete Selected](#)

Up to **8** VLAN IDs or **32** APs can be added (**1** APs have been added).

<input type="checkbox"/>	VLAN ID ⇅	Applied to	Action
<input type="checkbox"/>	66	Rujjie	Edit Delete

Click **Add** to add a LAN port. In the displayed dialog box, configure settings and click **OK**.

Figure 3-7-2 Add LAN Port

Add ✕

VLAN ID ?

* Applied to ▼

Cancel OK

3.8 LED

The LED module allows you to enable LED.

Figure 3-8-1 LED

i **LED Status Control**
Control the LED status of **the downlink AP**.

Enable

Save

3.9 Network Optimization

This feature will optimize the self-organizing network to maximize the WLAN performance.

3.9.1 Network Optimization

Figure 3-9-1 Network Optimization



Description:
This feature will optimize the self-organizing network to maximize the WLAN performance. Please make sure that all APs have been online.

Notes:

1. During network optimization, the APs will switch channels, forcing the clients to go offline. The process will last for a while, subject to the quantity of devices. It is recommended you enable network optimization at night.
2. If dynamic channel allocation is running in the backend, network optimization will fail. Please try again later.
3. The configuration cannot be rolled back once optimization starts.

I have read the notes.

[Network Optimization](#)

Scheduled Optimization

Scheduled Optimization
Optimize the network performance at a scheduled time for a better user experience.

Scheduled

Optimization

Day: Sun

Time: 03 : 00

[Save](#)



Finish

Optimization finished on 2021-07-22 17:18:30

Time: 32 seconds

Success

[View Details](#) [Back](#) [Cancel Optimization](#)

Optimize the network performance at a scheduled time for a better user experience.

Figure 3-9-2 Scheduled Optimization

Scheduled Optimization



Scheduled Optimization

Optimize the network performance at a scheduled time for a better user experience.

Scheduled

Optimization

Day Sun

Time 03 : 00

Save

3.9.2 Optimization Record


Overview



Last Optimized:2021-07-22 18:51:28
You have optimized 101 APs and improved the performance by 75.77%

Overview

Details

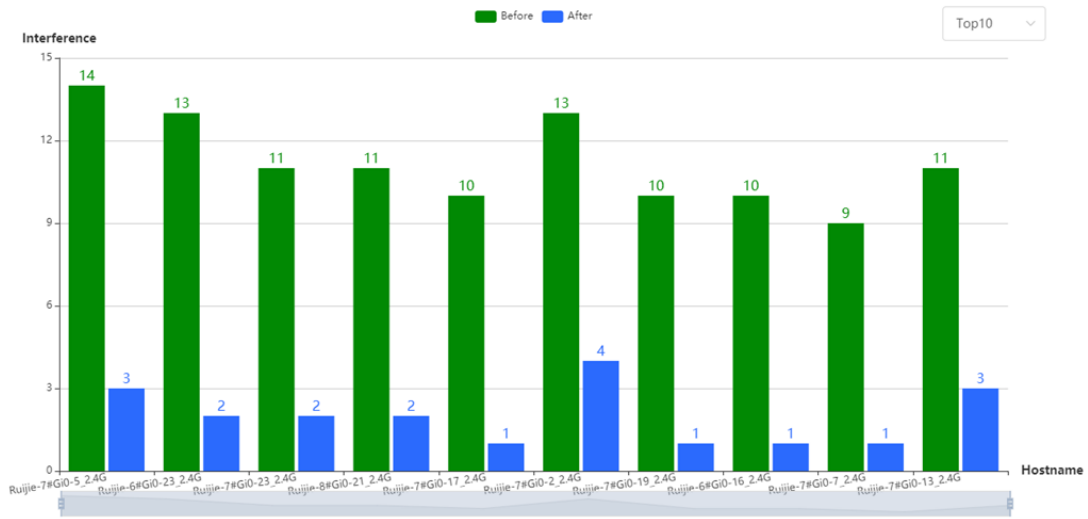

Last Optimized:2021-07-22 18:51:28
You have optimized 101 APs and improved the performance by 75.77%!

Overview Details

Hostname	Band	SN	Channel (Before/After)	Channel Width (Before/After)	Transmit Power (Before/After)	Sensitivity (Before/After)	CCI (Before/After)	ACI (Before/After)	Interference (Before/After)
Ruijie-7#GI0-5	2.4G	CANLC2R000157	0/6	20	auto/45	0/74	14/3	0	14/3
Ruijie-6#GI0-23	2.4G	G1NDC8G000164	0/11	20	100/45	0/80	13/2	0	13/2
Ruijie-7#GI0-23	2.4G	CANLC2R001622	0/6	20	100/45	0/74	11/2	0	11/2
Ruijie-8#GI0-21	2.4G	CANLC2R001238	0/6	20	auto/45	0/74	11/2	0	11/2
Ruijie-7#GI0-17	2.4G	CANLC2R00059A	0/1	20	100/45	0/74	10/1	0	10/1
Ruijie-7#GI0-2	2.4G	CANLC2R00007B	0/11	20	auto/45	0/74	13/4	0	13/4
Ruijie-7#GI0-19	2.4G	CANLC2R000824	0/1	20	100/45	0/74	10/1	0	10/1
Ruijie-6#GI0-16	2.4G	G1NDC8G000734	0/1	20	100/45	0/80	10/1	0	10/1
Ruijie-7#GI0-7	2.4G	CANLC2R000558	0/1	20	100/45	0/74	9/1	0	9/1
Ruijie-7#GI0-13	2.4G	CANLC2R000891	0/1	20	auto/45	0/74	11/3	0	11/3

1 2 3 4 5 6 ... 20 10/page Total 200

3.10 Switches

The **Switches** page displays all switches in the current network.

Figure 3-10-1 Switch List

Switch List
View switches in the current network.

Switch List Delete Offline Devices Batch Upgrade

Action	Hostname	IP	MAC	Status	Model	Software Ver	SN
Manage	NBS2100	192.168.110.120	00	Online	NBS2100-16GT2SFP		M

1 10/page Total 1

Click **Manage** in the **Action** column, and the switch management page will be displayed.

Figure 3-10-2 Switch Management

Switch
NBS2100-16GT2SFP

Hostname: NBS21001 SN: MA... IP Address: 192.168.110.120
MAC: 00:D... Reboot

Home VLAN Monitor Ports Security Advanced Diagnostics System

Basic Info

Hostname: [NBS21001](#) MGMT IP: [192.168.110.120](#) Software Ver: ...
Model: NBS2100-16GT2SFP MAC: 00:D... Systemtime: 2021-04-29 17:32:42
Status: Online SN: MAC... Duration: 32 days 23 hours 3 minutes 54 seconds
Master Device IP: [192.168.110.1](#)
Work Mode: [Self-Organizing Network](#)

Port Info [Panel View](#)

The flow data will be updated every 5 minutes. [Refresh](#)

Port	Rate	Rx/Tx Speed (kbps)	Rx/Tx Bytes	Rx/Tx Packets	CRC/FCS Error Packets	Corrupted/Oversized Packets	Conflicts
Gi1	1000M	26/4	26.46G/1.77G	26666665/17520211	0/0	0/0	0
Gi2	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi3	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi4	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi5	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi6	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0
Gi7	Disconnected	0/0	0.00/0.00	0/0	0/0	0/0	0

See *Ruijie RG-NBS Series Switches Web-Based Configuration Guide* for details.



3.11 System

3.11.1 Time

The **Time** module allows you to set the system time. The system time is synchronized with the NTP server by default.

Select a time zone and set at least one NTP server, and click **Save**.

Figure 3-11-1 System Time

 Configure and view system time (The device has no RTC module. The time settings will not be saved upon reboot). 

Current Time 2021-04-29 15:58:19 [Edit](#)

* Time Zone

* NTP Server [Add](#)

[Delete](#)

[Delete](#)

[Delete](#)

[Delete](#)


[Delete](#)

[Delete](#)

[Save](#)

Click **Edit** to modify the system time.

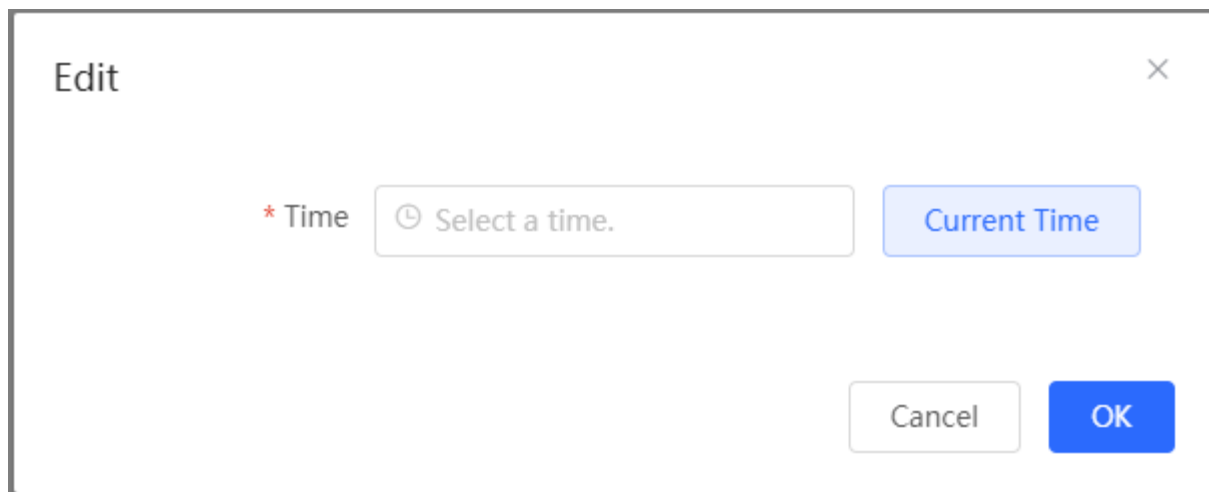

Figure 3-11-2 Edit Time



3.11.2 Password

The **Device Password** module allows you to set the device's login password. You need to log into the system again after changing the password.

Figure 3-11-3 Device Password

 Change the login password. Please log in again with the new password later. 

* Old Password


* New Password

* Confirm Password

3.11.3 Scheduled Reboot

The **Scheduled Reboot** module allows you to reboot all devices at a scheduled time.

Figure 3-11-4 Scheduled Reboot

 It is recommended to set the scheduled time to a network idle time, e.g., 2 A.M..
The downlink device will also be rebooted as scheduled.

Enable

Day Mon Tue Wed Thu Fri Sat


Sun

Time :

3.11.4 Reboot & Reset

The **Reboot & Reset** module allows you to reboot or reset all devices in the network.

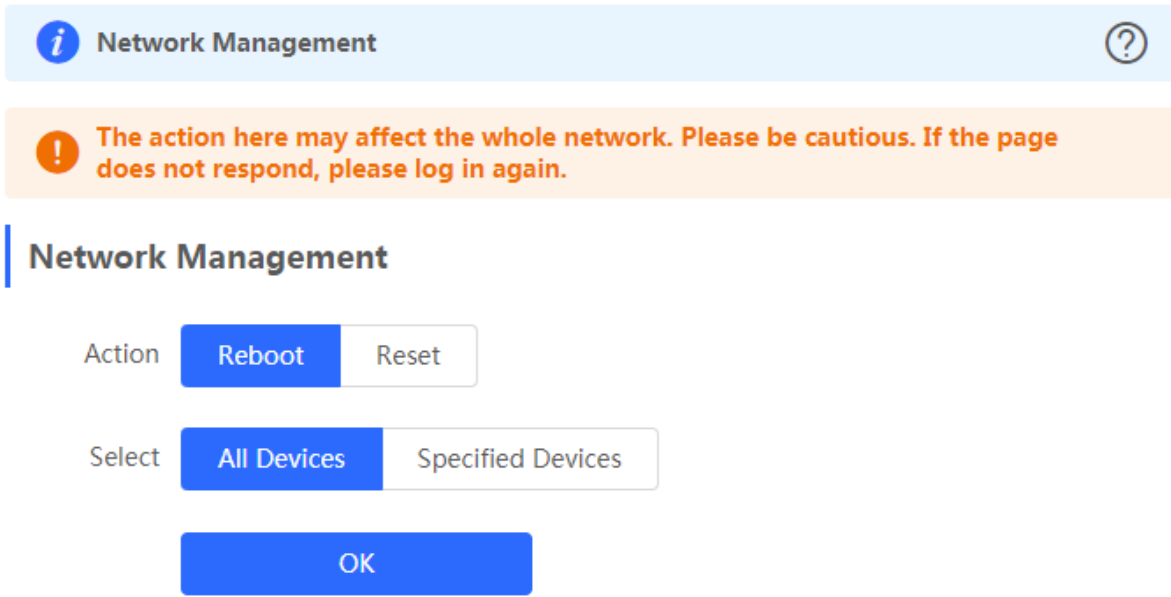

Figure 3-10-5 Reboot




If you click **Reboot**, you will be allowed to select all devices or specified devices for the whole network.

If you click **Reset**, all devices in the network will be reset to the factory settings. You can select whether to unbind the account.

Figure 3-11-6 Reset

 **Network Management** 

 **The action here may affect the whole network. Please be cautious. If the page does not respond, please log in again.**

Network Management

Action

Option **Unbind Account** (The devices of this account will be removed from Ruijie Cloud and will not be managed by this account).

3 FAQs

Q1: I failed to log into the eWeb management system. What can I do?

Perform the following steps:

- (1) Check that the network cable is properly connected to the LAN port of the device and the corresponding LED indicator blinks or is steady on.
- (2) Before accessing the configuration GUI, set the IP assignment mode to **Obtain an IP address automatically** (recommended), so that the server with DHCP enabled can automatically assign an IP address to the PC. To designate a static IP address to the PC, set the IP address of the PC in the same network segment as the IP address of the management interface. For example, if the default IP address of the management interface is 192.168.120.1 and the subnet mask is 255.255.255.0, set the IP address of the PC to 192.168.120.X (X is any integer ranging from 2 to 254), and the subnet mask is 255.255.255.0.
- (3) Run the **ping** command to test the connectivity between the PC and the device.
- (4) If the login failure persists, restore the device to factory settings.

Q2: What can I do if I forget my username and password? How to restore the factory settings?

To restore the factory settings, power on the device, and press and hold the **Reset** button for 5s or more. The device automatically restores the factory settings. After the restoration, the default factory IP address is 192.168.120.1. You can access the eWeb management system of the factory device without password.