

The Barcol Impressor
Hand - Held Portable Hardness Tester



The Barcol Impressor Hand-Held Portable Hardness Tester

- Aluminum
- Aluminum Alloys
- Soft Metals
- Plastics
- Fiberglass



Introduction

Portable

The Impressor is a convenient tool for testing the hardness of aluminum ,aluminum alloys ,copper , brass and other materials including plastics and fiberglass .The instrument is designed for use on fabricated parts and assemble as well as on raw stock .

Easy to Use

No experience required;can be used in any position and in any space that will allow for the operator's hand .The hardness reading is instantly indicated on the dial ,which is divided into one hundred graduations .No waiting pre-loading or separate measurements .

Lightweight

The impressor weighs only 0 .55kg and comes complete with carrying case ,adjusting wrench and two spare indenter points 2kg .



MITCHELL

Applications

934- 1 for soft metals such as aluminum and its alloys ,brass ,copper , and some of the harder plastics and fiberglass . Approximate range 25 to 150 Brinell(10 mm ball 500 kg load) .This unit meets American Society for Testing and Materials(ASTM) Standard D-2583.

Operating Information

The Impressor is best suited for testing homogeneous materials . Materials of granular ,fibrou or coarse struture will produce a wide variation in hardness readings because of the small diameter of the indenter point .

For accurate readings ,material should be atleast 1/32"thick and large enough for a minimum distance of 1/8" in any direction from the indenter point to the edge of the specimen .The testing area should be smooth and free from mechanical damage .

Simply exert a light pressure against the instrument to drive the spring-loaded indenter point into the material .The indenter point must be perpendicular to the surface being tested .

On very soft metals ,the highest reading should be used since cold flow permits the spring-loaded indenter point to continue penetration .

Operating Information(continued)

Note

Physical characteristics of very soft materials are such that uniform correlation between different hardness measuring systems cannot be established . We recommend that impressor that impressor hardness limits for each material be established by test .

Recommended Sample Size

To equalize the variance of the average(934- 1)


Homogeneous Material:

Harness Scale	Reading Variance	Number of Readings	Variance of Average
20	2.47	9	0.27
30	2.20	8	0.28
40	1.93	7	0.27
50	1.66	6	0.28
60	1.39	5	0.28
70	1.12	4	0.28
80	0.85	3	0.28
Reinforced Plastics:			
30	22.4	29	0.77
40	17.2	22	0.78
50	12.0	16	0.75
60	7.8	10	0.78
70	3.6	4	0.75


Typical Readings of Aluminum Alloys

Alloy and Temper:	1100-0	3003-0	3003H14	2024-0	5052-0	5052H14	6061T6	2024T3
934- 1 Reading:	35	42	56	60	62	75	80	85

Approximate Conversion Curves for 934- 1

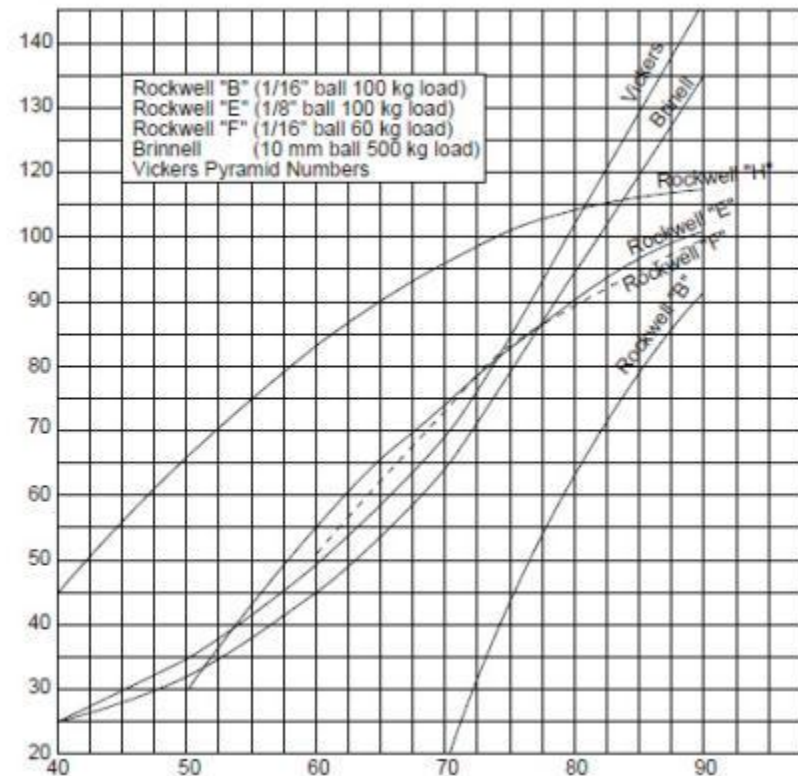

The Impressor Repair Parts

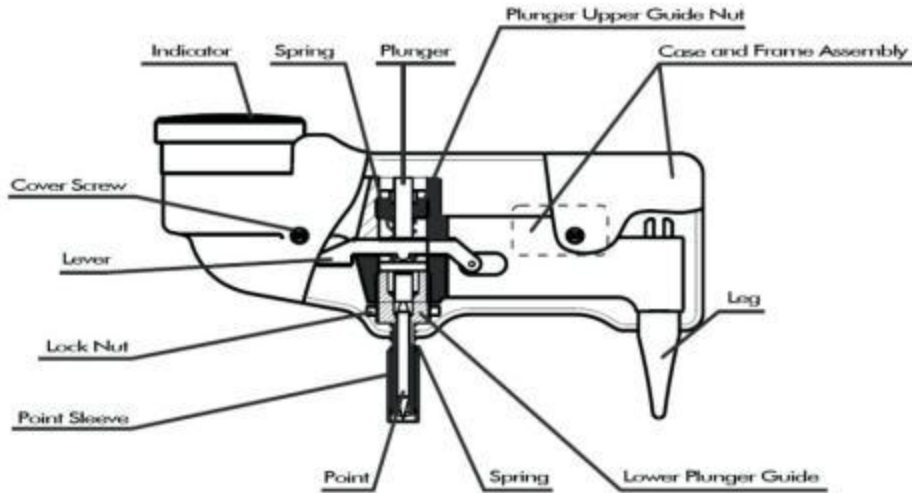

Assembly

Standard assembly

- Hardness tester
- One piece leg
- Two pieces hardness blocks
- Carrying case
- Adjusting wrench
- Two spare indenter ponits

Optional assembly

- High valve hardness blocks
- Low valve hardness blocks
- Spare indenter points



Operating Information(continued)

Approximate Conversion Chart for 934- 1

934-1	Brinnell	Vickers	Rockwell			
			B	E	F	H
35		23				32
36		23				33
37		24				37
38		24				40
39		25				43
40	25	25				45
41	26	26				47
42	26	27				49
43	27	27				52
44	27	28				54
45	27	20				56
46	28	30				58
47	29	32		24		61
48	30	33		25		63
49	31	34		28		64
50	32	35		30		66
51	33	36		33		68
52	34	38		36		70
53	35	39		39	29	72
54	37	41		42	33	73
55	38	42		44	38	75
56	39	44		46	40	76
57	40	45		48	43	78
58	42	47		51	47	80
59	44	48		53	49	81
60	45	49		55	51	83
61	47	51		57	54	84
62	48	53		59	56	86
63	50	55		62	58	88
64	52	57		64	61	89
64	54	58		65	63	90
66	55	60		67	65	91
67	58	62		69	67	92

934-1	Brinnell	Vickers	Rockwell			
			B	E	F	H
68	60	64		71	69	94
69	62	67		73	71	95
70	64	69	18	74	73	96
71	67	72	19	76	75	98
72	69	74	26	77	77	99
73	71	76	33	79	79	100
74	73	81	39	81	81	101
75	76	85	45	83	83	102
76	80	88	48	84	84	103
77	84	92	52	86	86	104
78	87	95	56	88	87	105
89	90	99	60	89	88	106
80	94	103	63	90	89	107
81	97	108	65	91	90	108
82	100	111	69	92	91	108
83	105	116	72	94	92	109
84	109	122	75	95	93	109
85	113	127	77	96	94	110
86	117	133	80	97	95	111
87	122	137	83	98	96	111
88	126	142	86	99	97	112
89	131	144	89	100	97	112
90	135		91	101	98	113
91	139			102	99	113
92	145			103	100	
93				103	101	
94				104	101	
95				104	102	
96				105	102	
97				106	103	
98				107		
99				108		
100				108		