## **▲** MULTISPAN

# PID CONTROLLER PID 2303-1C-M1



PV = Process value

SV = Set value

### **TECHNICAL SPECIFICATION**

### **INPUT SPECIFICATION:**

	Input	Range	
Input Types	J	0 to 400°C	
	K	0 to 500°C	
	1 CT	0.0 to 30.0 A	
Resolution	J,K = 1°C		
Indication	±1% of FSD ± 1°C		
Accuracy	(FSD:- full scale deflection)		

### **DISPLAY AND KEYS:**

	Upper: 3 digit, 7 seg 0.70" white LED
Display	Middle: 3 digit, 7 seg, 0.39" green LED
	Lower: 3 digit, 7 seg, 0.33" red LED
Keys	SET, INC, DEC, ENT

### **DIMENSION:**

Size (mm)	72 (H) x 72 (W) x 85 (D) mm
<b>Panel Cutout</b>	68 (H) x 68 (W) mm

### **CONTROL METHOD:**

Heating	1) PID control with Auto-Tuning
	2) ON-OFF control
Cooling	<ol> <li>BL.TP ( Blower Time Proportion)</li> <li>ON-OFF control</li> </ol>
Alarm	Heater break alarm, Cold start, High, Absolute low, Inband, Absolute outband, OFF, Outband, Low

### **OUTPUT SPECIFICATION:**

Relay Output		
Relays	3 Nos	
Relay Type	1 <sup>st</sup> Relay 1C/O (NO-C-NC) , 2 <sup>nd</sup> & 3 <sup>rd</sup> Relay (NO-C)	
Rating	5A,230V AC/28V DC	
SSR Drive Output		
Output Signal	24V DC, 30mA DC (On-Off condition)	
	Relay 1 parallel to SSR	
MODBUS		
RS-485 Modbus Communication		

### **POWER SUPPLY:**

Supply Voltage	100 to 270V AC, 50-60Hz
Power Consuption (VA Rating)	Approx 6VA @ 230V AC


### **ENVIRONMENT CONDITION:**

Operating Temp.	0°C to 55°C
Relative Humidity	UP to 95% RH (non-condensing)
Protection Level	IP-65 (Front side) As per IS/IEC 60529 : 2001


### **MECHANICAL INSTALLATION**

Outline Dimension (mm)	Panel Cutout Dimension (mm)
72  TINE 255 SV  T	68

### **TERMINAL CONNECTION**

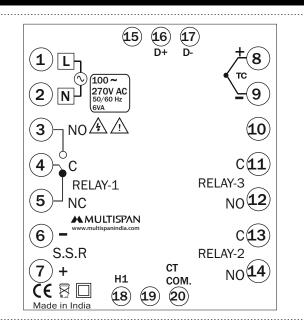

### STATUS LED DESCRIPTION

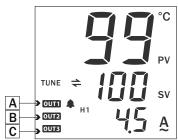

- A Control output 1 indication (Heating)
- B Control output 2 indication (Cooling / Alarm)
- C Alarm output indication

### **KEY OPERATION**

FUNCTION	PRESS KEY	
OPERATOR M	ODE	
To enter in parameter setting	Press SET for 4 sec	
For start/stop PID auto tuning	Press for 6 sec	
To go in factory setting mode	+ Press 3 sec	
PARAMETER SETTING MODE		
To set parameter value	SET	
To increment parameter value.	$\triangle$	
To decrement parameter value.	$\bigcirc$	
Set parameter to be save & exit.	ENT	

### SAFETY PRECAUTION

All safety related codifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If all the equipment is not handled in a manner specified by the manufacturer, it might impair the protection provided by the equipment.



Read complete instructions prior to installation and operation of the unit.



WARNING: Risk of electric shock.

### WARNING GUIDELINES



### / WARNING: Risk of electric shock.

- 1. To prevent the risk of electric shock power, supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- 2. To reduce electro magnetic interference, use wire with adequate rating and twists of the same of equal size shall be made with shortest connection.
- 3. Cable used for connection to power source, must have a cross section of 1mm or greater. These wires should have insulations capacity made of at least 1.5kV.
- 4. When extending the thermocouple lead wires, always use thermocouple compensation wires for wiring for the RTD type, use a wiring material with a small lead resistance  $(5\Omega \text{ max per line})$  and no resistance differentials among three wires should be present.
- 5. A better anti-noise effect can be expected by using standard power supply cable for the instrument.

### **INSTALLATION GUIDELINES**

- 1. This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
- 2. Do not allow pieces of metal, wire clippings, or fine metallic fillings from installation to enter the product or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- 3. Circuit breaker or mains switch must be installed between power source and supply terminal to facilitate power 'ON' or 'OFF' function. However this mains switch or circuit breaker must be installed at convenient place normally accessible to the operator.
- 4. Use and store the instrument within the specified ambient temperature and humidity ranges as mentioned in this manual.

### **MECHANICAL INSTALLATION GUIDELINES**

- 1. Prepare the panel cutout with proper dimensions as shown above.
- 2. Fit the unit into the panel with the help of clamp given.
- 3. The equipment in its installed state must not come in close proximity to any heating source, caustic vapors, oil steam, or other unwanted process byproducts.
- 4. Use the specified size of crimp terminal (M3.5 screws) to wire the terminal block. Tightening the screws on the terminal block using the tightening torque of the range of 1.2 N.m.
- 5. Do not connect anything to unused terminals.

### **MAINTENANCE**

- 1. The equipment should be cleaned regularly to avoid blockage of ventilating parts.
- 2. Clean the equipment with a clean soft cloth. Do not use isopropyl alcohol or any other cleaning agent.
- 3. Fusible resistor must not be replaced by operator.

### **ERROR DISPLAY**


When an error has occurred the display indicates error codes as given below.

ERROR	MEANING
0Pn	Sensor is not connected or Over range condition or sensor break
5-E	Sensor connection is reversed

### **CORRECTIVE ACTION:**

Check the sensor and the input wiring. If problem still exists, replace the sensor. And still if problem is not solved yet by the user, then please contact company person

### **FACTORY SETTING**

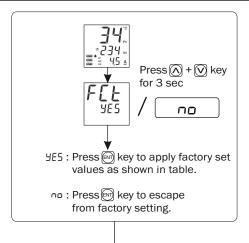

FACTORY SETTING		
SR.	PARAMETER	VALUES
1	PB	20.0°C
2	IT	300
3	DT	75
4	CT	15 Sec
5	MR	0°C
6	C-PB	4.0
7	C-ON	1°C
8	C-OF	48
9	Hysteresis1	3°C
10	Hysteresis 2	1°C
11	Hysteresis 3	3°C
12	Alarm Time R2	5 Sec
13	Alarm Time R3	5 Sec
13	Offset	0°C

### PARAMETER MESSAGE DESCRIPTION

Parameter	Description
InP	Input
J	J
۲	K
r lā	Relay 1 Mode
HEL	Heating
Pl d	PID Action
OnF	ON-OFF Action
HA I	Hysterisis 1
r2ñ	Relay 2 Mode
COL	Cooling
ь. <i></i> ЕР	Blower TP Action
HA5	Hysterisis 2
r∃ñ	Relay 3 Mode
H43	Hysterisis 3
ALĀ	Alarm
нья	Heater Break Alarm
C5	Cold Start Alarm
HI 9	High Alarm
ЯЬЬ	Absolute Low Alarm
בים	Low
ОЬЬ	Outband
Inb	In Band Alarm
APO	Absolute Outband Alarm
Ыñ	Time
нья	Heater Break Alarm Set Point
НЫ	Heater Break Indication Set Point
Н	Heater
On	ON
OFF	OFF
РЬ	Proportional Band for PID Action
I E	Integral Time for PID Action
dŁ	Derivative Time for PID Action
CΕ	Cycle Time for PID Action
ñ۲	Manual Reset for PID Action
С.РЬ	Cooling Proportional Band
C. On	Cooling ON
C. OF	Cooling OFF
PAr	Parameter
PR5	Password
rLE	Relative
Ind	Individual
5E 1	Set 1
5E2	Set 2
5£3	Set 3
5E2L0"	Set 2 Low
5£3L0'.'	Set 3 Low
5E2HI 9H	Set 2 High
5E3HI 9H	Set 3 High
0F5	Offset
0.5 0Pñ	Output Mode
65. N 65. N	Both/Relay/SSR
ורר/רח ו/ויחח	Both Rolay Soft

### **WORKING**

### R1-Heating

- 1) Control Mode PID: Relay turning ON/OFF according to heat requirement of the machine.
- 2) Control Mode ON/OFF: Relay turns ON (and remains ON) when PV < SV. Relay turns OFF when PV > SV. After this there may be overshoot depending on the thermal inertia of the machine. When the PV < SV Minus HYS, Relay turns ON and heating is resumed.

### R2-Cooling


- 1) Cooling Time proportional Control action: Relay turns ON/OFF as per et Cycle timeand difference between PV and cooling SV.
- 2) Cooling ON/OFF control action: Relay is initially OFF. When PV > SV, Relay turns ON and when PV < SV Minus HYS relay turns OFF.

### **Auto Tuning:-**


- → The Auto-tuning function automatically computes and sets the Proportional band (Pb), Integral time (It), Derivative time (dt), and cycle time as per process characteristics.
- → Tuning LED will turn "ON" during Auto-Tuning
- → If the power goes off before auto-tuning is completed, auto-tuning will be restarted at next power ON.


### PARAMETER RANGE

Parameter	Range For J, K		
PB	0.0°C to 999.9°C		
IT	0 to 9999		
DT		0 to 9999	
СТ		4 sec to 99 se	ec
MR		-9 to +9	
C.PB		2.0°C to 25	.0°C
C.ON		1°C to 20°C	
C.OF		5 to 200	
Alarm Time R2		0 Sec to 99	Sec
Alarm Time R3	0 Sec to 99 Sec		
Hysteresis-1		1°C To 100°	С
Hysteresis-2	1°C to 50°C		
Hysteresis-3		1°C to 100	°C
Set 2		1°C to 50°	С
Offset		-20°C to 20	°C
HBAL/HBI H	0.0 to 60.0A		
	R2MD = CS	S2MD = RLT	-50 to 0
Set 2		S2MD = IND	0 to set 100
0012		S2MD = RLT	
		S2MD = IND	
Set 2 Low	SLL To SET2 HIGH		
Set 2 High	SET2 LOW To SHL		
	R3MD = CS	S3MD = RLT	-50 to 0
Set 3		S3MD = IND	0 to set 100
			-50 to +50
		S3MD = IND	
Set 3 Low	SLL To SET3 HIGH		
Set 3 High	SET3 LOW To SHL		

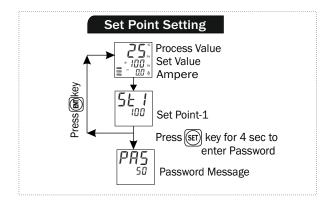



### **Basic configuration**

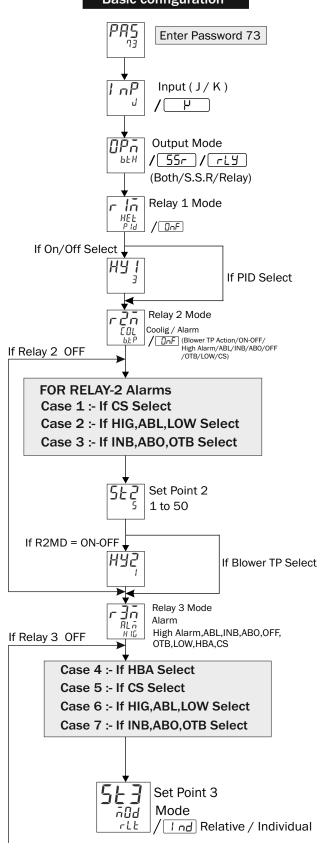


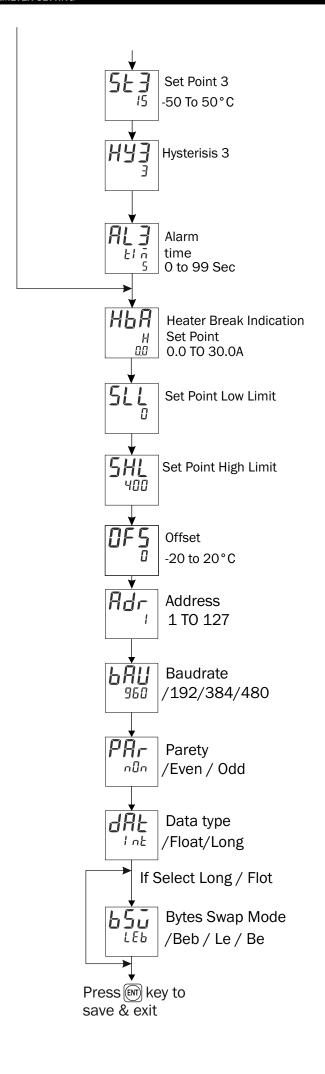


# FOR RELAY-2 & 3 Alarms Case 1,5:- If CS Select Relay 2 Mode Alarm Set Point 2 Mode / Ind Relative / Individual Set Point 2 O To -50°C Hysterisis 2

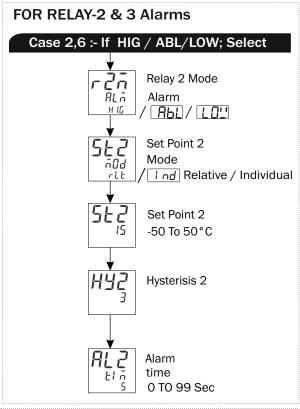

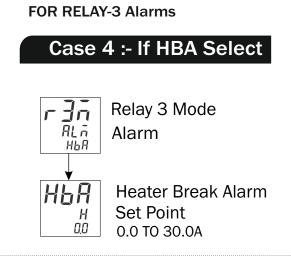

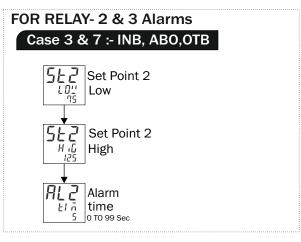


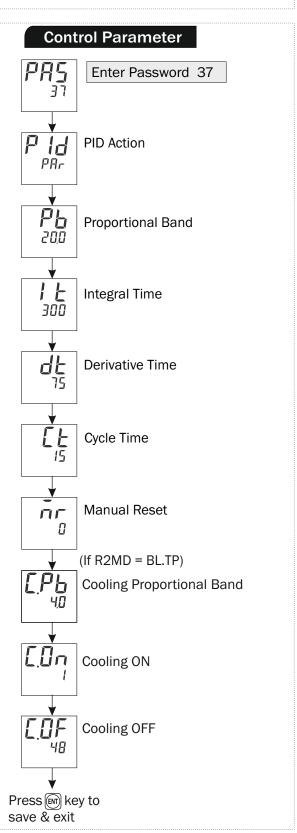



### **ALARM OPERATION**

### Alarms

- 1) Heater Break alarm: If the current of the Heater < AMP SV (unhealthy condition) then Relay turns ON and Upper Display will show hbr, middle display will blink showing h. To manually turn off Relay, press ENT key 4 sec. Display will continue showing hbr till the fault is rectified.
- 2) Cold start (CS) alarm: Relay is initially OFF. When PV > Alarm SV, Relay turns ON. When PV < Alarm SV MINUS HYS, Relay turns OFF.

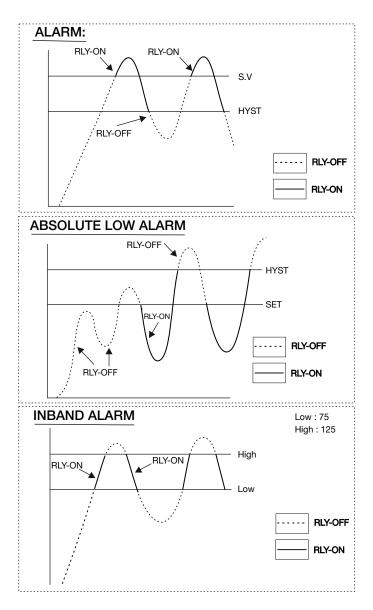

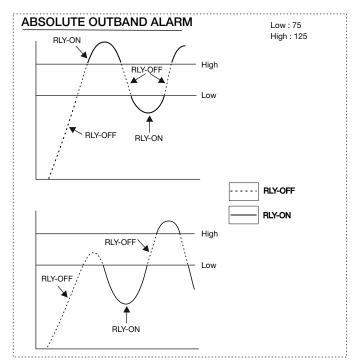

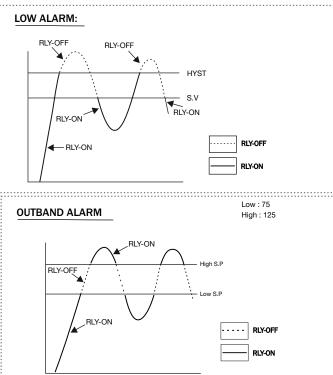

MODBUS				
Slave Address :	1 to 127			
Baudrate:	4800,9600,19200,38400 bps			
Parity:	None,Even,Odd			
Datatype:	Sign integer, Float			
Read Function Register:	0x03 and 0x04			
Write Function Register:	0x06 and 0x10			

Note :-	When Para	meter 1111 = no available			
	A		Regis	Register	
Sr.No	Access Type	Parameter	Data	Data Type	
	Турс		Integer	Float	
1	R	Process Value Initial Value : 32101	0	0	
		Sensor Open: 32102			
		Sensor Reverse : 32103	3		
2	R	H1 Current	1	2	
3	R	N/A	2	4	
4	R	N/A	3	6	
5	R	Total Current	4	8	
6	R	H1	5	10	
		Selection Value			
7	R	Normal 0	N/A	N/A	
8	R	Break 1	N/A	N/A	
9	R	R1,R2 & R3 Status	8	16	
10	R	Selection Value	9	18	
11	R	OFF 0	10	20	
		ON 1			
12	R	PID Percentage	11	22	
13	R/W	Auto Tune	12	24	
		Selection Value			
		OFF 0			
4.4	5 011	ON 1			
14	R/W	Heater	13	26	
		Selection Value OFF 0			
		ON 1			
15	R/W	Set 1	14	28	
16	R/W	Input	15	30	
		Selection Value	1		
		J 0			
		K 1			
17	R/W	Relay1 Mode	16	32	
		(Heating) Selection Value			
		PID 0			
		ON-OFF 1			
18	R/W	HYS 1	17	34	
	,	1 to 100			
19 R/W		Relay2 Mode	18	36	
		(Cooling) Selection Value	٦		
		Selection Value ON-OFF 0			
		Blower TP 1 High Alarm 2			
		In-Band Alarm 3	<u> </u>		
		Absolute Outband Alarm 4  OFF 5	-		
		CS Alarm 6	1		
		Outband Alarm 7 Low Alarm 8	-		
		Absolute Low Alarm 9	<u> </u>		
20	R/W	Set 2	19	38	
21	R/W	HYS 2	20	40	

Sr.No	Access	Parameter	Register Data Type	
	Туре	raimotor	Integer	
22	R/W	Relay3 Mode (Alarming)    Selection   Value     HIGH	21	42
23	R/W	Set 3 Mode Selection Value Individual 0 Relative 1	22	44
24	R/W	Set 3	23	46
25	R/W	Set 3 Low	24	48
26	R/W	Set 3 High	25	50
27	R/W	HYS 3	26	52
28	R/W	HBAL/HBI H1	27	54
29	R/W	N/A	28	56
30	R/W	N/A	29	58
31	R/W	Alarm Time	30	60
32	R/W	SLL	31	62
33	R/W	SHL	32	64
34	R/W	Offset		
35	R/W	PB	33 34	66 68
36	R/W	IT		
37	R/W	DT	35	70
	R/W	СТ	36	72
38			37	74
39	R/W	MR	38	76 70
40	R/W	C.PB	39	78
41	R/W	C.ON	40	80
42	R/W	C.OFF	41	82
43	R/W	Address	42	84
44	R/W	Baudrate       Selection     Value       4800     0       9600     1       19200     2       38400     3	43	86
45	R/W	Parity Selection Value NONE 0 EVEN 1 ODD 2	44	88
46	R/W	Data Type  Selection Value Integer 0 Long 1 Float 2	45	90
47	R/W	Output Selection  Selection Value  Both 0  Relay 1  SSR 2	46	92

	A			Regi	ster
Sr.No	Access Type	Parameter		Data	Туре
	турс			Integer	Float
48	R/W	Bytes Swap Mode	е	47	94
		(Only select for			
		Float & Long)			
		Selection	Value		
		Little endian	0		
		Big endian	1		
		Little-endian byte Swa	-		
		Big-endian byte Swap	3		
49	R/W	Set 2 Mode		48	96
		Selection	Value		
		Individual	0		
		Relative	1		
50	R/W	Set 2 Low		49	98
51	R/W	Set 2 High		50	100
52	R/W	Set 2 Alarm Time		51	102
53	NA	NA		52	104
54	R/W	Fectory Reset		53	106