


**Technical Specification**



<b>Model</b>	EM-10
<b>Display</b>	8 digit, 7 segment, 0.5" Red display
<b>Size (mm)</b>	96(H) X 96 (W) X 43 (D) mm
<b>Panel Cutout</b>	92 X 92 mm
<b>Voltage Input</b>	50 To 520V AC VLL CAT III 30 To 300V AC VLN CAT III
<b>Current Input</b>	5 Amp or higher through external CT
<b>Active Power (KW)</b>	0.000 To 9999 KW
<b>Active energy (KWh)</b>	0.000 To 99999999 KWH
<b>Power Supply</b>	100 To 270V AC,50/60Hz,Approx 4VA
<b>Frequency</b>	45 To 65 Hz
<b>Wiring System</b>	3Ph-4W
<b>Protection Level (As Per Request)</b>	IP-65 (Front side) As per IS/IEC 60529 : 2001
<b>Operating Temperature</b>	0°C To 50°C
<b>Relative Humidity</b>	Up to 95% RH Non Condensing

**Connection Diagram**

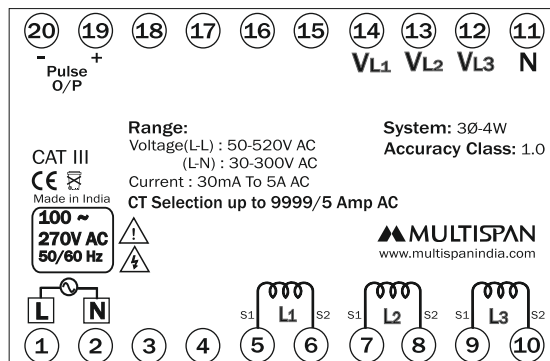

## HOLD AND SCROLL MODE :




Press  &  Key for 5 sec.

## PARAMETER SETTING:

Press  key For 5 Sec

 (CT Password)  
(10) Change by  &  Key

Press  key


 (CT Ratio)  
(5 to 9999Amp Selectable)  
Change by  &  Key

Press  key

 (Pulse mode)  
(Auto-Manual selectable)  
Change by  &  Key

Press  key

If auto mode  
selectable

 / 0.01,0.1,1,10 (Pulse out)

Press  key




 / 10 to 500 ms (Pulse on time)

Press  key TO Save & exit

## RESET SETTING

Press  key For 5 Sec

 (Reset Password)  
(15) Change by  &  Key

 (YES/NO) Change by  &  Key

Press  key TO Save & exit

## RESOLUTION

CT PRIMARY	ENERGY RATE PULSE OUTPUT
5 to 75	0.01 Kwh
76 to 750	0.1 Kwh
751 to 7500	1 Kwh
7501 to 9999	10 Kwh

## PAGES:

1) KWH



73827.906  
kWh

4) KW(L<sub>3</sub>)



1.200  
kW L3

2) KW(L<sub>1</sub>)



1.200  
kW L1

5) KW(TOTAL)



3.600  
kW L1 L2 L3

3) KW(L<sub>2</sub>)



1.200  
kW L2

TO Change Page Press  &  key

## APPLICATION:

- Energy Management System
- Control Panels
- Genertor Set
- Power Distribution boards
- Building Management System
- Quality Control System
- Motor Control Panel
- Energy Audit

## Warning Guidelines

- 1) To prevent the risk of electric shock power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- 2) To reduce electro magnetic interference, use wire with adequate rating and twists of the same of equal size shall be made with shortest connection.
- 3) Cable used for connection to power source, must have a cross section of  $1\text{mm}^2$  or greater. These wires should have insulations capacity made of at least 1.5kV.
- 4) A better anti-noise effect can be expected by using standard power supply cable for the instrument.


## Warning Guidelines

- 1) To prevent the risk of electric shock power supply to the equipment must be kept OFF while doing the wiring arrangement. Do not touch the terminals while power is being supplied.
- 2) To reduce electro magnetic interference, use wire with adequate rating and twists of the same of equal size shall be made with shortest connection.
- 3) Cable used for connection to power source, must have a cross section of  $1\text{mm}^2$  or greater. These wires should have insulations capacity made of at least 1.5kV.
- 4) A better anti-noise effect can be expected by using standard power supply cable for the instrument.

## Installation Guidelines

- 1) This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
- 2) Do not allow pieces of metal, wire clippings, or fine metallic fillings from installation to enter the product or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
- 3) Circuit breaker or mains switch must be installed between power source and supply terminal to facilitate power 'ON' or 'OFF' function. However this mains switch or circuit breaker must be installed at convenient place normally accessible to the operator.
- 4) Use and store the instrument within the specified ambient temperature and humidity ranges as mentioned in this manual.

## Mechanical Installation

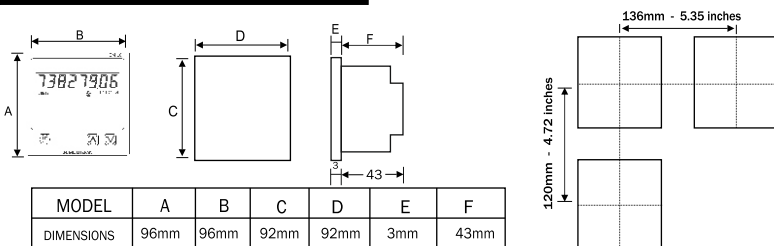

- 1) Prepare the panel cutout with proper dimensions as show above.
- 2) Fit the unit into the panel with the help of clamp given.
- 3) The equipment in its installed state must not come in close proximity to any heating source, caustic vapors, oils steam, or other unwanted process by products.
- 4) Use the specified size of crimp terminal (M3.5 screws) to wire the terminal block. Tightening the screws on the terminal block using the tightening torque of the range of 1.2 N.m.
- 5) Do not connect anything to unused terminals.

## Maintenance

- 1) The equipment should be cleaned regularly to avoid blockage of ventilating parts.
- 2) Clean the equipment with a clean soft cloth. Do not use isopropyl alcohol or any other cleaning agent.
- 3) Fusible resistor must not be replaced by operator.

Product improvement and upgrade is a constant procedure. So for more updated operating information and Support, Please contact our Helpline: +91-9081078683/81 or Email at [service@multispanindia.com](mailto:service@multispanindia.com) Ver:2106